

Karlsson PTG-KA5364GR

Karlsson Mini Flip Clock Instruction Manual

Model: PTG-KA5364GR

1. INTRODUCTION

Thank you for purchasing the Karlsson Mini Flip Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read these instructions carefully before use and retain them for future reference.

This retro-style flip clock features an analog time display, a perpetual calendar, and an alarm function. It is designed for indoor use and can be either wall-mounted or freestanding.

2. SAFETY INFORMATION

- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Do not expose the clock to water or other liquids.
- Use only the specified battery type. Ensure correct polarity when inserting batteries.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children. Do not dispose of batteries in fire.
- Do not attempt to disassemble or repair the clock yourself. Contact qualified service personnel for assistance.

3. PACKAGE CONTENTS

- Karlsson Mini Flip Clock (Model PTG-KA5364GR)
- Instruction Manual

Note: Batteries are not included and must be purchased separately.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert the required batteries (e.g., 1x AA battery for time mechanism, 2x AA batteries for flip mechanism, refer to compartment markings) ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Figure 1: Front view of the Karlsson Mini Flip Clock. The battery compartment is located on the rear of the unit.

4.2 Setting Time and Date

1. On the side or back of the clock, locate the adjustment knobs or wheels. There are typically separate controls for time, day, and date.
2. **To set the time:** Rotate the time adjustment knob (usually marked 'TIME' or with a clock icon) clockwise until the correct hour and minute are displayed. The minute flips will advance automatically.
3. **To set the date:** Rotate the date adjustment knob (usually marked 'DATE' or with a calendar icon) to set the correct day of the month.
4. **To set the day/month/year:** Rotate the corresponding adjustment knobs to set the correct day of the week, month, and year. Ensure the AM/PM indicator is correct for the time.



Figure 2: Close-up of the clock face, highlighting the analog time and digital flip displays for date and day.

4.3 Mounting Options

The Karlsson Mini Flip Clock can be used as a freestanding desk clock or mounted on a wall.

- **Freestanding:** Place the clock on a stable, flat surface.
- **Wall Mounting:** Use the keyhole slot(s) on the back of the clock. Securely fasten a screw (not included) into the wall, leaving a small portion protruding. Align the keyhole slot(s) with the screw head(s) and slide the clock down to lock it in place. Ensure the clock is level and securely mounted before releasing.



Figure 3: The clock displayed in a wall-mounted configuration.

5. OPERATING INSTRUCTIONS

5.1 Time Display

The clock features an analog display for hours and minutes, and a flip mechanism for the date, day, and year.

Once set, the flip mechanism will automatically advance at midnight for the date and day, and at the end of the month for the month display.

5.2 Calendar Display

The calendar display shows the current year, month, and day of the month. This feature automatically updates, providing a clear overview of the current date.

5.3 Alarm Function

To set the alarm:

1. Locate the alarm setting knob (often marked 'ALARM' or with an alarm icon) on the back or side of the clock.
2. Rotate this knob to set the desired alarm time.
3. Locate the alarm ON/OFF switch or button. Move it to the 'ON' position to activate the alarm.
4. When the alarm sounds, it can typically be silenced by pressing a snooze/light button or by moving the alarm switch to 'OFF'.

6. MAINTENANCE

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries annually or when the clock's movement becomes erratic or stops. Follow the battery installation steps in Section 4.1. Dispose of used batteries responsibly according to local regulations.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / Time display frozen	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity.
Date/Day not flipping correctly	Incorrect initial setting or low battery power for the flip mechanism.	Check and reset the date/day. Replace batteries if necessary.
Alarm not sounding	Alarm not activated or set incorrectly.	Ensure the alarm is set to 'ON' and the alarm time is correctly configured. Check batteries.
Inaccurate timekeeping	Low battery power.	Replace batteries.

8. SPECIFICATIONS

- **Model:** PTG-KA5364GR
- **Brand:** Karlsson
- **Material:** Plastic
- **Color:** Green
- **Dimensions (L x W x H):** 28.6 x 3.81 x 28.4 cm (11.26 x 1.5 x 11.18 inches)
- **Item Weight:** 1.42 kg (3.13 lbs)

- **Display Type:** Analog (Time), Flip (Calendar)
- **Movement Type:** Quartz
- **Power Source:** Battery Powered (Batteries not included)
- **Special Features:** Calendar Display, Alarm Clock
- **Mounting Type:** Wall Mount or Freestanding
- **Indoor/Outdoor Use:** Indoor

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.