

WSTER WS-1818

WSTER WS-1818 Hi-Fi Speaker Wireless Microphone User Manual

1. INTRODUCTION

Thank you for choosing the WSTER WS-1818 Hi-Fi Speaker Wireless Microphone. This device combines a high-quality wireless microphone with an integrated Hi-Fi speaker, designed for portable audio entertainment and karaoke. It offers excellent sound performance and versatile connectivity options.

Package Contents

- 1 x WSTER WS-1818 Wireless Microphone
- 1 x USB Charging Cable
- 1 x Audio Cable
- 1 x User Manual

2. PRODUCT OVERVIEW

The WSTER WS-1818 features a compact, handheld design with an intuitive control panel for easy operation.



Figure 1: WSTER WS-1818 Hi-Fi Speaker Wireless Microphone and its packaging. The microphone features a control panel with buttons for various functions.

Controls and Indicators

- **Power Button:** Press and hold to turn on/off.
- **Volume Controls:** Adjust microphone and music volume.
- **Echo Control:** Adjust the echo effect level.
- **Mode Button:** Switch between Bluetooth, TF card, and U disk modes.
- **Play/Pause Button:** Control music playback.
- **Previous/Next Track Buttons:** Navigate through music tracks.
- **Charging Port:** USB port for charging the device.
- **TF Card Slot:** Insert a TF (MicroSD) card for music playback.
- **U Disk Slot:** Insert a USB flash drive for music playback.
- **Audio Output Port:** Connect to external audio devices.

3. SETUP

3.1 Charging the Device

1. Connect the provided USB charging cable to the charging port on the microphone.
2. Connect the other end of the USB cable to a standard 5V USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate during charging and turn off when fully charged.
4. A full charge typically takes approximately 2-3 hours.

3.2 Powering On/Off

- To power on, press and hold the Power button until the device activates.
- To power off, press and hold the Power button again until the device shuts down.

3.3 Bluetooth Pairing

1. Ensure the microphone is powered on and in Bluetooth mode (indicated by a voice prompt or light).
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available Bluetooth devices and select "WS-1818" from the list.
4. Once paired, the device will indicate a successful connection, and you can begin playing audio wirelessly.

4. OPERATING INSTRUCTIONS

4.1 Music Playback

- **Bluetooth Mode:** After successful pairing, play music from your connected device. Use the Play/Pause and Previous/Next Track buttons on the microphone to control playback.
- **TF Card/U Disk Mode:** Insert a TF card or U disk with MP3 audio files into the respective slot. The device will automatically switch to the corresponding mode and begin playback. Use the control buttons for navigation.

4.2 Microphone Use

- Speak directly into the microphone grille.
- Adjust the microphone volume using the dedicated control.
- Adjust the echo effect using the Echo control to enhance your vocals.

4.3 Karaoke Function

The WS-1818 is designed for a home karaoke experience. You can sing along to music played through the integrated speaker.

- Connect your mobile device via Bluetooth and open a karaoke application (e.g., K Song app).
- Play a karaoke track from the app.
- Adjust the music volume, microphone volume, and echo effect to your preference for an optimal singing experience.

5. MAINTENANCE

5.1 Cleaning

- Wipe the device with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

5.2 Storage

- Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid storing in dusty or humid environments.

5.3 Battery Care

- Charge the battery fully before first use.
- If the device will not be used for an extended period, charge it at least once every three months to maintain battery health.
- Do not attempt to replace the internal battery yourself.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted.	Charge the device fully.
Cannot connect via Bluetooth.	Bluetooth is not enabled on the device or microphone. Microphone is too far from the paired device.	Ensure both devices have Bluetooth enabled. Move the microphone closer to the paired device. Restart both devices and try pairing again.
No sound from speaker.	Volume is too low. Device is muted.	Increase the volume on both the microphone and the connected device. Check if the device is muted.
Microphone not picking up sound.	Microphone volume is too low.	Increase the microphone volume control.

7. SPECIFICATIONS

Feature	Detail
Brand	WSTER
Model	WS-1818
Connectivity Technology	Bluetooth
Connector Type	USB
Special Feature	Wireless
Compatible Devices	Karaoke Machine, Speaker
Microphone Form Factor	Handheld
Power Source	Battery Powered
Output Power	5W * 2
Frequency Range	100Hz-10kHz
Maximum SPL	> 115dB 1KHz THD <1%
Signal-to-Noise Ratio	115 dB
Battery Type	External Polymer Battery
Battery Capacity	2000mAh

Feature	Detail
Charging Voltage	5V
Material	Aluminum Alloy
Impedance	4 Ohm
Package Dimensions	27.8 x 10.8 x 7.4 cm
Package Weight	364 grams

8. WARRANTY AND SUPPORT

Specific warranty information and customer support details are typically provided with your purchase documentation or on the manufacturer's official website. Please refer to those resources for assistance.

WSTER WS-1818 User Manual © 2024. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

