

[Manuals.plus](#) /

› [Accutime](#) /

› Harry Potter Kids Smart Watch - Instruction Manual

Accutime HP4096AZ

Harry Potter Kids Smart Watch Instruction Manual

MODEL: HP4096AZ

Manufactured by Accutime

Introduction to Your Harry Potter Smart Watch



The Harry Potter Kids Smart Watch is an interactive touchscreen device designed for young fans of the Wizarding World. This smartwatch offers a range of engaging features including a camera, games, and essential time-keeping tools. It is built with a comfortable, durable silicone strap featuring Harry Potter graphics, suitable for wrists measuring 5.5" to 8". Please note that this watch operates independently and does not connect to the internet, Wi-Fi, or Bluetooth, ensuring a safe and focused experience for children.

Initial Setup and Charging

Before first use, it is crucial to fully charge your Harry Potter Smart Watch.

- Locate the USB charging port on the side of the watch.
- Connect the provided USB charging cable to the watch and a compatible USB power source (e.g., computer USB port, USB wall adapter).
- Ensure the watch is charged for at least two hours prior to initial use to ensure optimal battery performance.
- The battery indicator on the screen will show charging status.



Image showing the side of the watch with the USB charging port.

Operating Your Smart Watch

Power On/Off

To power on the watch, press and hold the side button until the Harry Potter logo appears on the screen. To power off, press and hold the side button again and follow the on-screen prompts.

Navigation

The watch features a responsive touchscreen display. Swipe left or right to navigate through different application icons. Tap an icon to open the corresponding application. Use the side button to return to the previous screen or the main watch face.

Changing Watch Faces



The watch comes with 10 changeable watch faces, allowing you to personalize your display. To change the watch face, press and hold the current watch face on the touchscreen. A selection of available watch faces will appear. Swipe through them and tap on your desired watch face to set it.

Camera and Video Recorder



Access the camera application from the main menu. The watch features a built-in selfie camera. Tap the camera icon to take photos. To record videos, switch to video mode within the camera application. All captured photos and videos are saved to the watch's internal album viewer.

Games

The watch includes 6 pre-loaded interactive games for entertainment. Navigate to the 'Games' icon on the main menu and tap to open. Select from games such as Number Grid, Fighter Pilot, Memory, Car Chaos, Stone Warp, and Snake in the Grass.

Pedometer (Step Counter)

The integrated pedometer tracks your daily steps and estimates calories burned. To view your activity, tap the pedometer icon from the main menu. This feature encourages physical activity and can be reset daily.

Time Tools: Alarm, Stopwatch, Timer

- **Alarm:** Set multiple alarms for reminders. Access through the 'Time Tools' menu.
- **Stopwatch:** Use the stopwatch to time activities. Start, pause, and reset functions are available.
- **Timer:** Set a countdown timer for various purposes.

Calculator

A basic calculator is included for simple arithmetic operations. Tap the calculator icon from the main menu to access it.

Product Specifications

Feature	Detail
Model Number	HP4096AZ
Brand	Accutime
Product Dimensions	8.5 x 1.57 x 0.47 inches
Item Weight	3 ounces
Battery Type	1 Lithium Ion battery (included)

Strap Material	Silicone
Wrist Fit Range	5.5" to 8"
Connectivity	None (No Wi-Fi, Bluetooth, or Internet)

Care and Maintenance

- **Cleaning:** Wipe the watch clean with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** This watch is not waterproof. Avoid exposing it to water, moisture, or extreme humidity.
- **Temperature:** Do not expose the watch to extreme temperatures (hot or cold) or direct sunlight for prolonged periods.
- **Storage:** When not in use, store the watch in a cool, dry place away from direct sunlight.

Troubleshooting

- **Watch not turning on:** Ensure the watch is fully charged. Connect it to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- **Screen unresponsive:** Try restarting the watch by holding down the side button. If the issue persists, ensure the screen is clean and dry.
- **Battery not holding charge:** Ensure you are using the original charging cable and a reliable power source. If the problem continues, contact customer support.
- **Games or features not working:** Try restarting the watch. If the issue persists, there might be a software issue; contact customer support for assistance.

Warranty and Support

Your Harry Potter Kids Smart Watch (Model: HP4096AZ) comes with a one-year warranty from Accutime Watch Corp. This warranty covers manufacturing defects from the date of purchase.

For warranty claims, technical support, or any inquiries regarding your product, please contact Accutime Watch Corp. customer service. Keep your proof of purchase for warranty validation.

For more information, you may visit the official Accutime Store online or refer to the contact details provided with your product packaging.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0861BYV3C>

More documents and user manuals: <https://manuals.plus/>