

Nixplay 2008

Nixplay Power Adapter (12V 1A) Instruction Manual

Model: 2008

[Product Overview](#)

[Setup](#)

[Operation](#)

[Maintenance
Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

1. PRODUCT OVERVIEW

This manual provides instructions for the Nixplay Power Adapter (12V 1A), designed to power compatible Nixplay Digital Picture Frames. Please read this manual carefully before use to ensure proper operation and safety.

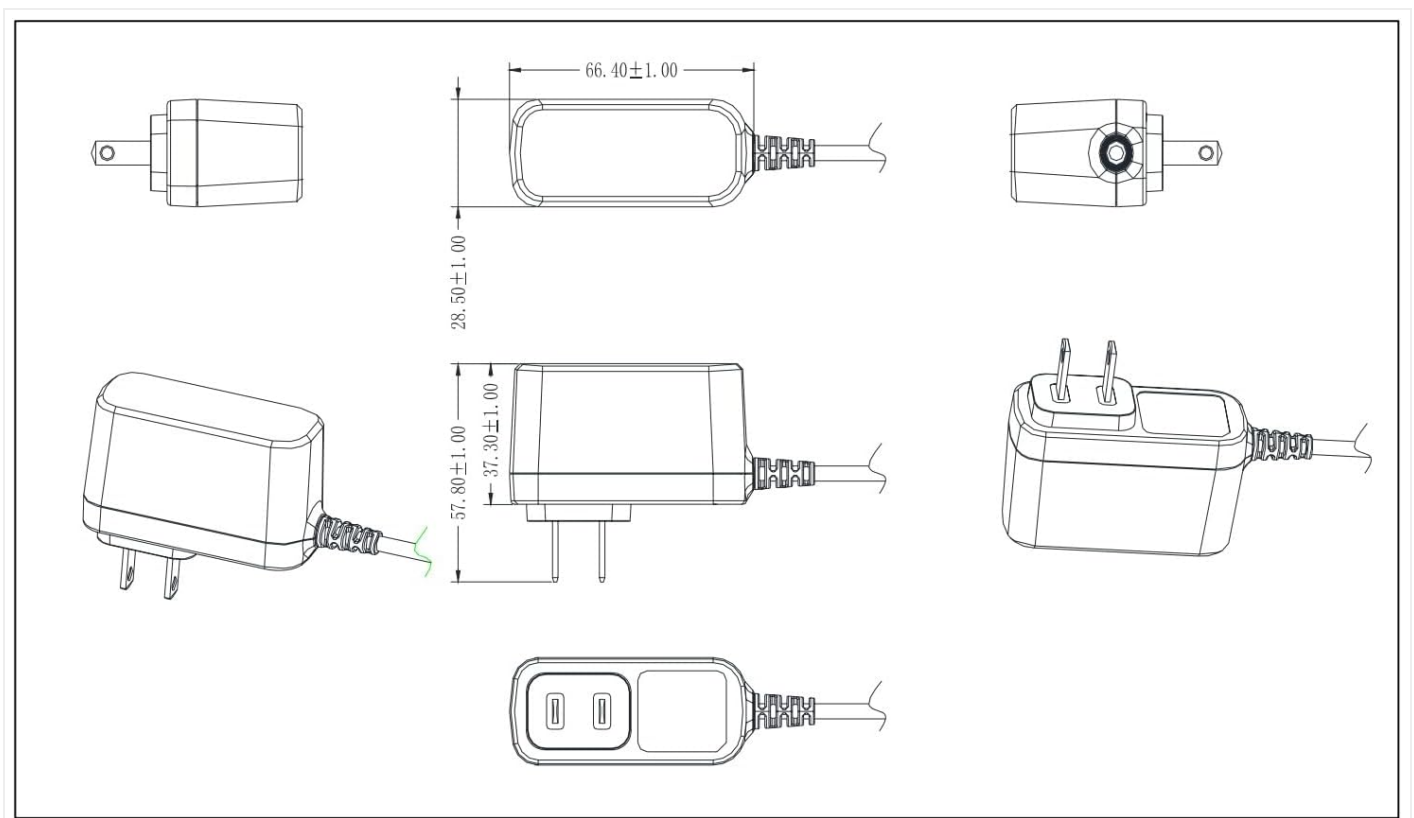


Image 1.1: The Nixplay 12V 1A Power Adapter, featuring a standard North American 2-pin plug and an integrated cable.

Key Features:

- **Input Voltage:** 12 Volts
- **Output Current:** 1 Amps
- **Wattage:** 12 watts
- **Connector Type:** 2-Pin (for device connection)
- **Power Plug:** Type A - 2 pin (North American)
- **Compatibility:** Designed for Nixplay Digital Picture Frames, including models S13A Signage, W13D, W15P, X13B LUX, X13C, X13D.

2. SETUP INSTRUCTIONS

Follow these steps to correctly set up your Nixplay Power Adapter:

1. **Verify Compatibility:** Ensure your Nixplay Digital Picture Frame requires a 12V 1A power adapter. Refer to your frame's manual or specifications. Compatible models include S13A Signage, W13D, W15P, X13B LUX, X13C, X13D.
2. **Connect to Device:** Insert the 2-pin connector end of the power adapter cable into the designated power input port on your Nixplay Digital Picture Frame. Ensure a secure connection.
3. **Connect to Power Outlet:** Plug the Type A (North American 2-pin) power plug into a standard wall outlet (100-240V AC, 50/60Hz).
4. **Power On:** Once connected, your Nixplay Digital Picture Frame should power on automatically or can be turned on using its power button.

Important Safety Information:

- Use only with compatible Nixplay Digital Picture Frames.
- Do not expose the adapter to moisture or extreme temperatures.
- Do not attempt to disassemble or modify the adapter.
- Ensure the power outlet is easily accessible for disconnection if needed.

3. OPERATION

The Nixplay Power Adapter is designed for straightforward operation. Once properly connected to a power source and your Nixplay Digital Picture Frame, it will supply the necessary power for the frame to function.

- The adapter provides a stable 12V DC output at 1A to your device.
- No user interaction is required for the adapter itself once connected.
- Refer to your Nixplay Digital Picture Frame's manual for specific operating instructions related to the frame's features.

4. MAINTENANCE

Proper care and maintenance will extend the life of your power adapter.

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and moisture. Avoid wrapping the cable too tightly around the adapter to prevent damage.
- **Inspection:** Periodically inspect the cable and adapter housing for any signs of damage, such as cuts, fraying, or cracks. If damage is observed, discontinue use and replace the adapter.

5. TROUBLESHOOTING

If you encounter issues with your Nixplay Power Adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Nixplay frame does not power on.	Adapter not properly connected to power outlet or frame.	Ensure both ends of the adapter are securely plugged in. Try a different power outlet.
Nixplay frame powers on but then shuts off.	Insufficient power or intermittent connection.	Check for loose connections. Ensure the adapter specifications (12V 1A) match the frame's requirements.
Adapter feels unusually hot.	Overload or internal fault.	Immediately disconnect the adapter from the power source and the device. Do not use if it feels excessively hot. Contact support.
Visible damage to the adapter or cable.	Physical wear and tear or accidental damage.	Discontinue use immediately. Replace the adapter with an original Nixplay 12V 1A adapter.

If the problem persists after trying these solutions, please contact Nixplay customer support.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Nixplay
Model Number	2008
Input Voltage	12 Volts
Output Current	1 Amps
Wattage	12 watts
Connector Type	2-Pin
Power Plug	Type A - 2 pin (North American)
Compatible Devices	Nixplay Digital Picture Frame (S13A Signage, W13D, W15P, X13B LUX, X13C, X13D)
Color	Black
Included Components	Cable
Mounting Type	Wall Mount



Image 6.1: Dimensional drawing of the Nixplay Power Adapter, illustrating its physical measurements.

7. WARRANTY AND SUPPORT

Warranty Information:

This Nixplay Power Adapter comes with a**1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes.

Please retain your proof of purchase for warranty claims.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Nixplay Customer Support. You can typically find support contact information on the official Nixplay website or through your product's packaging.

For more information, visit the[Nixplay Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question