

Nixplay 2005

Nixplay Original 5V 1.5A Power Adapter Instruction Manual

Model: 2005

INTRODUCTION

This manual provides essential information for the safe and effective use of your Nixplay Original 5V 1.5A Power Adapter. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

- Ensure the power adapter is used only with compatible Nixplay Digital Picture Frames as specified.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to severe impact.
- Do not attempt to open or repair the adapter. Refer all servicing to qualified personnel.
- Keep out of reach of children.
- Always unplug the adapter from the power outlet before cleaning or if it will be unused for an extended period.

PRODUCT OVERVIEW

The Nixplay Original 5V 1.5A Power Adapter is designed to provide reliable power to your compatible Nixplay Digital Picture Frame. It features a standard AC plug for wall outlets and a DC output connector for your device.



Image 1: The Nixplay Original 5V 1.5A Power Adapter, showing the AC plug and the DC output cable with its angled connector.

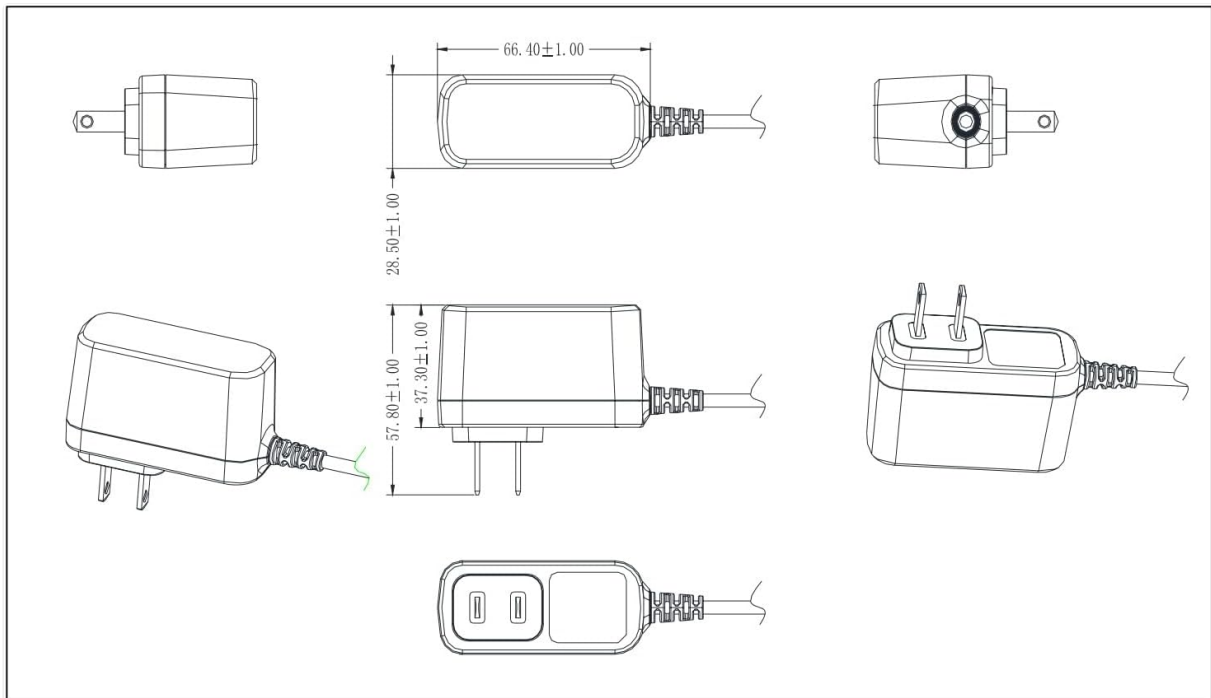 


Image 2: Technical diagram illustrating the dimensions of the Nixplay 5V 1.5A Power Adapter in millimeters.

SETUP

1. **Verify Compatibility:** Ensure your Nixplay Digital Picture Frame requires a 5V 1.5A power input. This adapter is compatible with models such as X10F, X10G, X10H, X10J12V, X10K, W08C EDGE, S00A/NSP01 Signage Player, and S10A Signage.
2. **Connect to Frame:** Insert the DC output connector of the power adapter firmly into the power input port on your Nixplay Digital Picture Frame.
3. **Connect to Power Outlet:** Plug the AC plug of the power adapter into a standard 120V AC wall outlet.
4. **Power On:** Once connected, your digital picture frame should receive power and turn on, or be ready to be turned on according to its own instructions.

OPERATING

The Nixplay power adapter operates continuously when plugged into a live power outlet and connected to a compatible device. It provides a stable 5V DC output at 1.5A to power your digital picture frame.

- Always ensure the adapter is securely plugged into both the wall outlet and the digital picture frame.
- Do not overload the power outlet.
- If the digital picture frame is not in use for an extended period, it is recommended to unplug the adapter from the wall outlet.

MAINTENANCE

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or sprays.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and moisture. Avoid tightly coiling the cable to prevent damage.

- **Inspection:** Periodically inspect the adapter and cable for any signs of damage, such as frayed wires or cracked casing. If damage is found, discontinue use immediately.

TROUBLESHOOTING

- **No Power to Frame:**
 - Check if the adapter is securely plugged into both the wall outlet and the digital picture frame.
 - Verify that the wall outlet is functional by testing it with another device.
 - Ensure the digital picture frame is compatible with a 5V 1.5A power adapter.
 - Inspect the adapter cable for any visible damage. If damaged, discontinue use.
- **Adapter Feels Hot:**
 - It is normal for power adapters to feel slightly warm during operation. However, if it is excessively hot to the touch or emitting smoke/smell, unplug it immediately and discontinue use.

SPECIFICATIONS

 



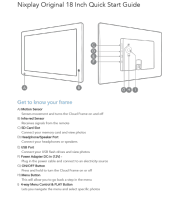 

Brand	Nixplay
Model Number	2005
Input Voltage	120 Volts
Output Current	1.5 Amps
Wattage	7.5 watts
Connector Type	AC Plug (Input), DC Barrel (Output)
Compatible Devices	X10F, X10G, X10H, X10J12V, X10K, W08C EDGE, S00A/NSP01 Signage Player, S10A Signage
Product Dimensions	2.61 x 1.12 x 2.78 inches
Item Weight	4.9 ounces

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your Nixplay Digital Picture Frame or visit the official Nixplay website. You can also contact Nixplay customer service directly for assistance with your power adapter.

Manufacturer: Nixplay

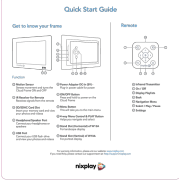Date First Available: May 12, 2020

	<p>Nixplay Edge W08C & W13A Quick Start Guide</p> <p>A quick start guide for setting up the Nixplay Edge W08C (8-inch) and W13A (13-inch) digital photo frames. It covers assembly, power connection, Wi-Fi setup, and linking to a Nixplay Cloud Account.</p>
	<p>Nixplay WiFi Cloud Frame User Guide: Setup, Features, and Support</p> <p>Comprehensive guide to the Universal Nixplay WiFi Cloud Frame. Learn setup, photo management, cloud sharing, mobile app usage, frame settings, and troubleshooting. Connect with family and friends.</p>
	<p>Nixplay Smart Photo Frame: Quick Start Guide and Setup</p> <p>Comprehensive guide to setting up and using your Nixplay Smart Photo Frame, including remote control functions, wall mounting, app connection, and app features.</p>
	<p>Nixplay W15F Wifi Digital Photo Frame User Guide</p> <p>A comprehensive guide to setting up, using, and troubleshooting your Nixplay W15F Wifi Digital Photo Frame. Learn about the remote control, Wi-Fi connection, account creation, wall mounting, and photo sharing features.</p>
	<p>Nixplay Original 18 Inch Digital Photo Frame: Quick Start Guide</p> <p>A quick start guide for the Nixplay Original 18 Inch digital photo frame, covering frame components, remote control functions, assembly, Wi-Fi setup, account creation, and support information.</p>
	<p>Nixplay Iris WiFi Cloud Frame User Manual</p> <p>Comprehensive user manual for the Nixplay Iris WiFi Cloud Frame, covering setup, photo management, playlists, settings, and important safety information.</p>