

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [HCDZ](#) /

> [HCDZ Replacement Remote Control for Panasonic Viera TVs User Manual](#)

## HCDZ Replacement Remote Control

# HCDZ Replacement Remote Control for Panasonic Viera TVs User Manual

## INTRODUCTION

---

This document provides instructions for the HCDZ Replacement Remote Control, designed for use with various Panasonic Viera LCD and LED televisions. This remote functions as a direct replacement and requires no programming. Simply insert batteries, and it will be ready for use.

### Compatible Panasonic Viera TV Models include:

- TC-L32C22
- TC-L32U22
- TC-L32U22X
- TC-L32X2
- TC-L32C22X
- TC-L37C22X
- TC-L37C22
- TC-L37D2
- TC-L37U22X



Figure 1: Front view of the HCDZ Replacement Remote Control, showing all buttons.

## SETUP

The HCDZ Replacement Remote Control does not include batteries. You will need two (2) AA batteries for operation.

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Slide the cover downwards or press the latch and lift to open it.



Figure 2: Back of the remote control with the battery compartment open, revealing the battery slots.

- 2. Insert Batteries:** Insert two (2) AA batteries into the compartment, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 3. Close the Battery Compartment:** Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 3: Back of the remote control with the battery compartment closed.

- 4. Ready for Use:** The remote control is now ready to operate your compatible Panasonic Viera TV without any additional programming.

## OPERATING INSTRUCTIONS

This remote control utilizes infrared (IR) technology to communicate with your television. For optimal performance, ensure a clear line of sight between the remote control and the IR receiver on your TV.

1. **Power On/Off:** Press the **POWER** button to turn your television on or off.
2. **Channel Selection:** Use the number buttons to directly enter channel numbers, or use the **CH+** and **CH-** buttons to cycle through channels.
3. **Volume Control:** Adjust the volume using the **VOL+** and **VOL-** buttons. Press the **MUTE** button to silence the audio.
4. **Input Selection:** Press the **INPUT** or **SOURCE** button to switch between different video inputs (e.g., HDMI, AV).
5. **Menu Navigation:** Use the **MENU** button to access your TV's on-screen menu. Use the directional arrow buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) and the **ENTER** or **OK** button to navigate and select options.
6. **Other Functions:** Utilize other dedicated buttons for specific TV functions as labeled on the remote control (e.g., Guide, Info, Exit, Aspect).

## MAINTENANCE

---

Proper maintenance ensures the longevity and reliable operation of your remote control.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AA batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, which can damage the remote.
- **Storage:** Store the remote control in a dry place, away from direct sunlight, extreme temperatures, and high humidity.

## TROUBLESHOOTING

---

If you experience issues with your HCDZ Replacement Remote Control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
  - Ensure the batteries are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with fresh AA batteries.
  - Check for any obstructions between the remote control and the TV's IR receiver.
  - Ensure you are within a reasonable range and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
  - This remote is a direct replacement and does not require programming. If specific buttons are not functioning, it may indicate a fault with the remote or the TV's compatibility with that specific function.
  - Ensure the TV is powered on and not in a mode that disables certain remote functions.
- **Interference:**
  - Bright light sources, especially fluorescent lights, can sometimes interfere with IR signals. Try operating the remote in different lighting conditions.

## SPECIFICATIONS

<b>Brand</b>	HCDZ
<b>Compatible Devices</b>	Television (Panasonic Viera LCD/LED TVs)
<b>Connectivity Technology</b>	Infrared (IR)
<b>Controller Type</b>	Button Control
<b>Batteries Required</b>	2 x AA batteries (not included)
<b>Special Feature</b>	No programming needed, works out of package
<b>Manufacturer</b>	HCDZ
<b>ASIN</b>	B0861VMSV8
<b>Date First Available</b>	March 18, 2020