

Panda PAN6360W

Panda Portable Washing Machine User Manual

Model: PAN6360W

1. INTRODUCTION

Thank you for choosing the Panda Portable Washing Machine. This compact and space-saving appliance is designed for small living spaces such as apartments, dorms, and RVs, offering powerful and versatile washing capabilities. With its 1.54 cubic feet capacity, 8 wash programs, and 4 water levels, it provides a customized cleaning experience for various fabrics. The durable stainless steel drum ensures reliable use.

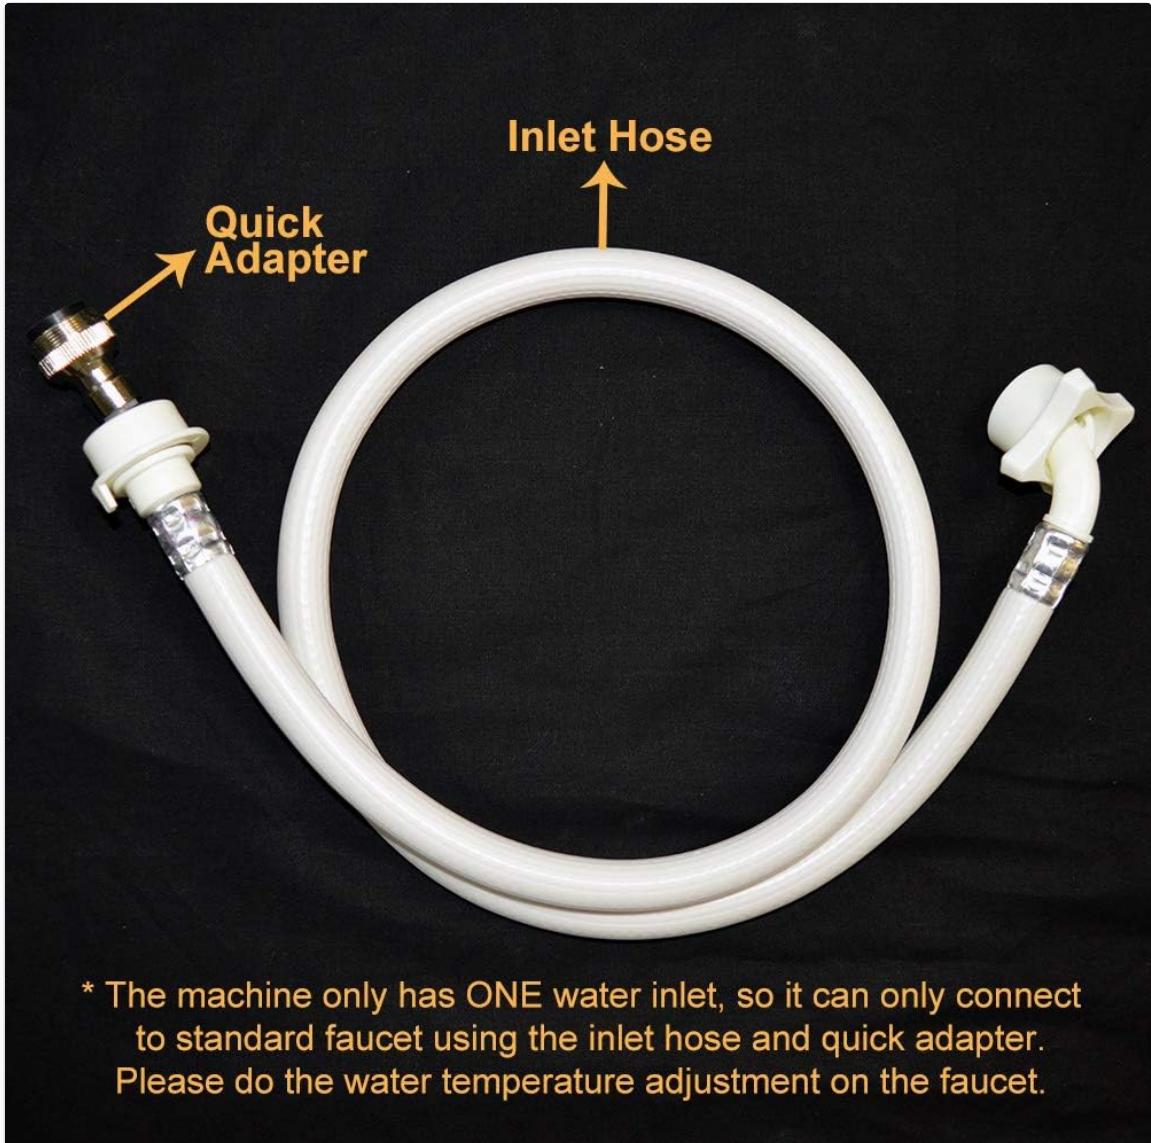


Figure 1: Panda Portable Washing Machine (Model PAN6360W)

2. SETUP

The Panda Portable Washing Machine is designed for hassle-free installation without permanent plumbing. Follow these steps to set up your machine:

- Placement:** Position the washing machine on a flat, stable surface. The built-in casters allow for easy movement. Ensure there is adequate space around the unit for ventilation and operation.
- Water Inlet Connection:** Connect the included inlet hose with the quick-connect adapter to a standard faucet. The machine has one water inlet, so water temperature adjustment should be done at the faucet.



* The machine only has ONE water inlet, so it can only connect to standard faucet using the inlet hose and quick adapter. Please do the water temperature adjustment on the faucet.

Figure 2: Inlet Hose and Quick Adapter

3. **Water Inlet Cap:** Ensure the water inlet cap on the machine is securely fastened to prevent leaks.



Figure 3: Water Inlet Cap

4. **Drain Hose:** Place the drain hose into a sink or suitable drainage area. Ensure the hose is not kinked or obstructed to allow for proper water drainage.



Figure 4: Drain Hose

5. **Power Connection:** Plug the washing machine into a standard 3-prong 110V outlet.

3. OPERATING INSTRUCTIONS

The Panda Portable Washing Machine features easy-to-use electronic controls and a clear LED display.



Figure 5: Control Panel

1. **Power On:** Press the 'Power' button to turn on the machine.
2. **Load Laundry:** Open the top lid and place your clothes evenly inside the stainless steel drum. Do not overload the machine; refer to the capacity guidelines.



Figure 6: Stainless Steel Tub

3. **Add Detergent:** Add the appropriate amount of detergent to the detergent box.



Figure 7: Detergent Box

4. **Select Water Level:** Press the 'Water Level' button to choose from 4 available water levels (1-4) based on your load size.
5. **Select Program:** Press the 'Program' button to cycle through the 8 wash programs: Light, Soak & Wash, Flash, Normal, Wash, Standard, Spin, Heavy Duty, Air Dry, Quick Wash.
6. **Delay Start (Optional):** Use the 'Delay' button to set a delayed start time for your wash cycle.
7. **Start Cycle:** Press the 'Start/Pause' button to begin the wash cycle. The machine will automatically fill with water, wash, rinse, and spin according to the selected program.
8. **Pause Cycle:** During operation, you can press 'Start/Pause' to temporarily stop the cycle. Press again to resume.

4. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your washing machine.

- **Cleaning the Tub:** The stainless steel drum is designed to resist rust and chipping. Periodically run a 'Tub Cleaning' cycle (if available on your model) or a normal wash cycle with hot water and a washing machine cleaner to prevent residue buildup.
- **Detergent Box Cleaning:** Regularly clean the detergent box to prevent clogs and ensure proper detergent dispensing. Remove and rinse it under running water.

- **Lint Filter:** Some models may have a lint filter. Check and clean it regularly to ensure efficient lint removal and prevent clothes from catching on it.
- **Exterior Cleaning:** Wipe down the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners that could damage the finish.
- **Drain Hose:** Ensure the drain hose remains clear of obstructions. If you notice slow drainage, check for blockages.

5. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the common problems and solutions below:

Problem	Possible Cause / Solution
E2 Error Code	This error often indicates an issue with the lid sensor. Ensure the lid is fully closed and the sensor mechanism is not obstructed or dislodged. Sometimes, gently pushing the sensor back into place can resolve this.
Machine is noisy or vibrates excessively	This usually indicates an unbalanced load. Pause the machine, redistribute the clothes evenly in the drum, and restart the cycle. Ensure the machine is on a level surface.
Water leaks from the bottom	Check all hose connections (inlet and drain) to ensure they are tight and not damaged. Inspect the drain hose for kinks or blockages. If your model has a filter at the bottom, ensure it is clean and properly secured.
Machine does not start	Ensure the power cord is securely plugged into a working outlet. Check if the lid is fully closed. Verify that a wash program and water level have been selected.
Water does not drain	Check the drain hose for kinks or blockages. Ensure the drain hose is positioned correctly in the sink or drainage area.

If the problem persists after attempting these solutions, please contact customer support.

6. SPECIFICATIONS

- **Manufacturer:** Panda
- **Model Number:** PAN6360W
- **Capacity:** 1.54 Cubic Feet (approx. 12 lbs)
- **Dimensions (D x W x H):** 19.5 x 20 x 35 inches
- **Item Weight:** 55 pounds
- **Color:** Gray
- **Material:** Stainless Steel (Tub)
- **Voltage:** 110 Volts
- **Sound Level:** 74 dB
- **Special Features:** Child Lock, Delay Start, Vibration Reduction
- **Included Components:** Power Cord, Inlet hose with a Standard Size faucet adaptor

U.S. Government

Federal law prohibits removal of this label before consumer purchase.

ENERGYGUIDE

Clothes Washer
Capacity Class: Compact


SNP TRADINGINC
Model PAN6360W

Capacity (tub volume): 1.54 cubic feet

Compare ONLY to other labels with yellow numbers.
Labels with yellow numbers are based on the same test procedures.

Estimated Yearly Energy Cost

(when used with an electric water heater)

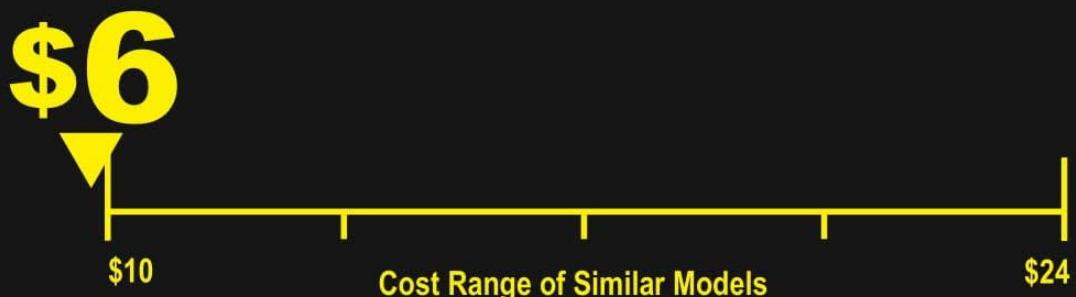

55 kWh

Estimated Yearly Electricity Use

- **Your cost will depend on your utility rates and use.**
- Cost range based only on compact capacity models.
- Estimated operating cost based on six wash loads a week and a national average electricity cost of 12 cents per kWh and natural gas cost of \$1.09 per therm.

ftc.gov/energy

Figure 8: Energy Guide

7. WARRANTY

The Panda Portable Washing Machine comes with a 1-year manufacturer warranty. Please retain your proof of purchase for warranty claims.



8. SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official Panda website or contact their customer service department. Refer to the contact information provided with your product packaging.

Note: No official seller videos were available for embedding in this manual.

© 2023 Panda. All rights reserved.

Related Documents - PAN6360W

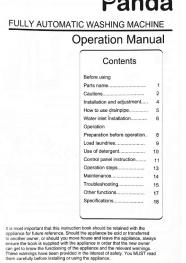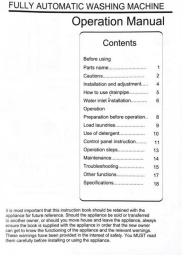	<p><u>Panda 1.6 cu. ft. Portable Washing Machine User Manual</u></p> <p>This user manual provides essential information for the Panda 1.6 cu. ft. portable washing machine, Model PAN50SWF2. It guides users through safe installation, efficient operation, routine maintenance, and troubleshooting steps to ensure optimal performance and longevity of the appliance. Discover how to get the most out of your compact washing machine with clear instructions and helpful tips.</p>
	<p><u>Panda PAN760SF Clothes Dryer Instruction Manual</u></p> <p>Comprehensive instruction manual for the Panda PAN760SF clothes dryer, covering installation, operation, safety, maintenance, troubleshooting, and warranty information.</p>
	<p><u>Panda PAN356HB Fully Automatic Washing Machine Operation Manual</u></p> <p>This operation manual provides comprehensive instructions for the Panda PAN356HB Fully Automatic Washing Machine, covering installation, operation, maintenance, troubleshooting, and specifications. Learn how to safely and effectively use your Panda washing machine.</p>
	<p><u>Panda FULLY AUTOMATIC WASHING MACHINE Operation Manual</u></p> <p>This operation manual provides comprehensive instructions for the Panda FULLY AUTOMATIC WASHING MACHINE. It covers installation, parts identification, safety precautions, operation steps, maintenance, troubleshooting, error codes, and technical specifications. Essential reading for safe and efficient use of the appliance.</p>

	<p>Panda PAN202MT Tumble Dryer: User Manual and Safety Guide</p> <p>Comprehensive user manual for the Panda PAN202MT compact electric tumble dryer, covering operation, safety instructions, maintenance, and troubleshooting.</p>
	<p>Panda Customer Service Contact Guide: Reach Live Support 24/7</p> <p>A comprehensive guide to contacting Panda customer service, including phone numbers, live chat, and app support for various issues like antivirus, reservations, and technical problems. Available 24/7.</p>