

[Manuals.plus](#) /

› [Vestel](#) /

› Vestel Front Load Washer Dryer D914GDS Instruction Manual

Vestel D914GDS

Vestel Front Load Washer Dryer D914GDS Instruction Manual

Model: D914GDS | Brand: Vestel

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Vestel D914GDS Front Load Washer Dryer. Please read these instructions carefully before using the appliance and keep them for future reference. This appliance combines a 9 kg washing capacity with a 6 kg drying capacity, offering versatile laundry care.

Key features include 22 specialized stain removal functions, a certified Anti-Allergy program, a convenient 29-minute Wash & Dry cycle, and an ultra-fast wash program capable of cleaning 2 kg of laundry in just 12 minutes.



Image 1: Front view of the Vestel D914GDS washer dryer with the door slightly open, showing the drum interior and control panel.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Keep flammable materials away from the appliance.

- Unplug the appliance before cleaning or performing maintenance.
- Do not operate the appliance if it is damaged or malfunctioning.
- Refer to a qualified technician for all repairs.

SETUP

1. Unpacking

Carefully remove all packaging materials, including the transport bolts located at the rear of the machine. Keep packaging materials out of reach of children.

2. Leveling the Appliance

Place the washer dryer on a firm, level floor. Adjust the adjustable feet until the appliance is perfectly level and stable. This prevents excessive vibration and noise during operation.

3. Water Connection

Connect the cold water inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks.

4. Drain Connection

Securely attach the drain hose to a standpipe or laundry tub, ensuring it is not kinked or blocked. The end of the drain hose should be positioned at a height between 60 cm and 100 cm from the floor.

5. Electrical Connection

Plug the appliance into a grounded 240V electrical outlet. Do not use extension cords or adapters.



Image 2: Front view of the Vestel D914GDS washer dryer with the door closed, highlighting the control panel and detergent drawer.

OPERATING INSTRUCTIONS

1. Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. For washing, the maximum load is 9 kg. For drying, the maximum load is 6 kg.

2. Adding Detergent and Additives

Pull out the detergent drawer. Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Close the drawer gently.

3. Selecting a Program

Turn the program selection knob to choose the desired wash or wash & dry program. The full graphic LCD screen will display program details.

- **Anti-Allergy Program:** This certified program provides thorough cleaning, ideal for sensitive skin, by effectively removing detergent residues and other contaminants.
- **29-Minute Wash & Dry:** A quick cycle for lightly soiled items that need to be washed and dried promptly.
- **Ultra-Fast Wash:** Designed for small loads (up to 2 kg), this program completes a wash cycle in just 12 minutes.
- **Stain Functions:** Utilize the 22 different stain functions to target specific types of stains, such as whites, dirt, tea, blood, sauces, sweat, baby food, grease, cosmetics, ice cream, dirty collars, red wine, grass, fruits, tomatoes, coffee, lipstick, dirty cuffs, and chocolate.

4. Starting the Cycle

Press the Start/Pause button to begin the selected program. The machine will automatically proceed through the wash, rinse, spin, and dry (if selected) phases.

5. End of Cycle

Once the program is complete, the machine will signal with an audible alert. Open the door and remove your laundry.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your appliance. Always unplug the machine before cleaning.

1. Cleaning the Detergent Drawer

Periodically remove the detergent drawer and rinse it under running water to remove any detergent or softener residue.

2. Drum Cleaning

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a small amount of detergent or a specialized washing machine cleaner) monthly to prevent odor and residue buildup.

3. Filter Cleaning

Locate the pump filter, usually at the bottom front of the machine. Open the cover, drain any residual water, and carefully remove and clean the filter of lint and debris. Reinstall securely.

4. Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not start	Power cord unplugged, door not closed properly, program not selected, Start/Pause button not pressed.	Check power connection, ensure door is latched, select a program, press Start/Pause.
Water not filling	Water tap closed, water inlet hose kinked or blocked, water pressure too low.	Open water tap, straighten hose, check household water pressure.
Water not draining	Drain hose kinked or blocked, pump filter clogged.	Straighten drain hose, clean pump filter.
Excessive vibration/noise	Appliance not level, transport bolts not removed, uneven load.	Adjust feet to level, remove transport bolts, redistribute laundry evenly.

SPECIFICATIONS

Brand	Vestel
Model Number	D914GDS
Product Type	Front Load Washer Dryer
Washing Capacity	9 kg
Drying Capacity	6 kg
Maximum Spin Speed	1400 RPM
Display Type	Full Graphic LCD
Door Diameter	47 cm
Drum Volume	61 Liters
Energy Class	A
Voltage	240 Volts
Color	Stainless Steel
Dimensions (H x W x D)	85 cm x 60 cm x 60 cm
Item Weight	70 Kilograms

WARRANTY AND SUPPORT

Warranty Information

Your Vestel D914GDS Front Load Washer Dryer comes with a **one-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. Installation is typically performed by the customer.

Customer Support

For technical assistance, service requests, or inquiries regarding your appliance, please contact Vestel customer support. Refer to the contact information provided in your purchase documentation or visit the official Vestel website for regional

support details.