Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- HyperX /
- > HyperX Cloud Stinger Core Wireless Gaming Headset User Manual

HyperX 4P4F0AA

HyperX Cloud Stinger Core Wireless Gaming Headset User Manual

Model: 4P4F0AA

INTRODUCTION

The HyperX Cloud Stinger Core Wireless Gaming Headset is designed for PC and console gamers seeking high-quality audio from a lightweight and comfortable headset. It integrates DTS Headphone:X Spatial Audio for enhanced immersion and precise positional audio cues, along with convenient in-line audio controls and a noise-cancelling microphone.

WHAT'S IN THE BOX

- HyperX Cloud Stinger Core Wireless Gaming Headset
- USB Dongle
- · USB Charging Cable



The HyperX Cloud Stinger Core Headset, accompanied by its USB dongle.

PRODUCT OVERVIEW

Familiarize yourself with the key components and controls of your HyperX Cloud Stinger Core headset.

- Adjustable Headband: For comfortable fit.
- Earcups: Padded for comfort and sound isolation.
- Swivel-to-Mute Microphone: Flexible microphone arm that mutes when swiveled upwards.
- Volume Control: Located on the earcup for easy audio adjustment.
- Power Button: To turn the headset on or off.
- **USB Charging Port:** For recharging the headset battery.
- **USB Dongle:** Provides wireless connectivity to your PC or PlayStation console.



Detailed view of the headset's power button and volume controls.



The flexible, noise-cancelling microphone of the headset.

SETUP

1. Connecting to PC/PlayStation

- 1. Insert the USB dongle into an available USB port on your PC or PlayStation console.
- 2. Press and hold the power button on the headset until the LED indicator lights up, indicating it's powered on.
- 3. The headset will automatically pair with the USB dongle. A solid LED on both devices indicates a successful connection.



The headset and its USB dongle, ready for connection to a PC.

2. Charging the Headset

- 1. Connect the USB charging cable to the headset's charging port and the other end to a USB power source (e.g., PC, USB wall adapter).
- 2. The LED indicator on the headset will show charging status. It typically takes about 3 hours for a full charge.
- 3. A full charge provides approximately 17 hours of battery life.

3. DTS Headphone:X Spatial Audio Activation

Your headset includes 2 years of DTS Headphone:X Spatial Audio. To activate and utilize this feature for enhanced immersion and positional audio, please follow the instructions provided with your DTS activation code or visit the official HyperX support website for software downloads and setup guides.

OPERATING INSTRUCTIONS

Power On/Off

- To power on, press and hold the power button until the LED indicator illuminates.
- To power off, press and hold the power button until the LED indicator turns off.

Volume Control

Adjust the volume using the dedicated volume wheel located on the earcup. Rotate upwards to increase volume and downwards to decrease volume.

Microphone Mute/Unmute

The HyperX Cloud Stinger Core features a convenient swivel-to-mute microphone. Simply swivel the microphone arm upwards to mute your microphone. Swivel it back down to unmute.



The microphone can be swiveled up to mute and down to unmute.

Wearing the Headset

Adjust the headband to ensure a comfortable and secure fit. The lightweight design and adjustable steel sliders are engineered for extended gaming sessions without discomfort. Position the earcups over your ears for optimal sound and noise isolation.



The headset designed for comfortable wear during long gaming sessions.

MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the headset. Avoid using harsh chemicals or abrasive materials.
- Storage: Store the headset in a cool, dry place away from direct sunlight and extreme temperatures.
- Cable Care: Avoid sharp bends or excessive pulling on the charging cable to prevent damage.

TROUBLESHOOTING

If you encounter any issues with your HyperX Cloud Stinger Core headset, please refer to the table below for common problems and solutions.

Problem	Possible Solution
No sound or low volume	Ensure the headset is powered on and fully charged. Check the volume control on the headset and your device. Verify the USB dongle is securely plugged into your device. Confirm the headset is selected as the default audio output device in your system settings.

Problem	Possible Solution
Microphone not working	Ensure the microphone is swiveled down (unmuted). Check that the headset is selected as the default input device in your system's sound settings. Test the microphone in another application or device.
Connection issues (intermittent audio, no pairing)	Ensure the headset and dongle are within range (up to 20 meters / 65 feet). Avoid sources of interference (e.g., Wi-Fi routers, other wireless devices). Try plugging the USB dongle into a different USB port. Restart both the headset and your device.
Headset not charging	Ensure the charging cable is securely connected to both the headset and the power source. Try a different USB port or power adapter. Verify the charging cable is not damaged.

For further assistance, please visit the official HyperX support website or contact customer service.

SPECIFICATIONS

Feature	Detail
Model Name	HyperX Cloud Stinger Core Wireless + DTS Headphone:X
Connectivity Technology	Wireless (RF)
Battery Life	Up to 17 Hours
Charging Time	Approximately 3 Hours
Item Weight	215 Grams (7.6 ounces)
Product Dimensions	8.26 x 7.48 x 3.43 inches
Frequency Range	10Hz-21kHz
Audio Driver Type	Dynamic Driver
Compatible Devices	PCs, PlayStation Gaming Consoles
Microphone	Swivel-to-mute noise-cancelling mic

WARRANTY AND SUPPORT

Your HyperX Cloud Stinger Core Wireless Gaming Headset is covered by a manufacturer's warranty. Please refer to the warranty information provided at the time of purchase or visit the official HyperX website for detailed warranty terms and conditions.

For technical support, product registration, or additional resources, please visit the HyperX Support Page. You can also find a comprehensive user manual in PDF format here.

Related Documents - 4P4F0AA



HyperX Cloud Alpha Wireless Gaming Headset User Guide

Comprehensive user guide for the HyperX Cloud Alpha Wireless Gaming Headset, detailing setup for PC and PlayStation 5, feature explanations, charging instructions, and software integration.



HyperX Cloud Stinger 2 Core Gaming Headset Quick Start Guide

A quick start guide for the HyperX Cloud Stinger 2 Core Gaming Headset, detailing its features, setup for PlayStation 5, and important safety information regarding volume levels.



HyperX Cloud Core Wireless Gaming Headset User Manual

Comprehensive user manual for the HyperX Cloud Core Wireless gaming headset, detailing setup, controls, charging, and DTS Headphone:X integration for PC and PlayStation.



 
HyperX Cloud Stinger 2 Core Gaming Headset Quick Start Guide

Quick start guide for the HyperX Cloud Stinger 2 Core Gaming Headset, detailing setup, connections for PC, consoles, and mobile, features like volume control and mic mute, support contact, and compliance information.



HyperX Cloud Stinger 2 Core Gaming Headset: Quick Start Guide

A quick start guide for the HyperX Cloud Stinger 2 Core Gaming Headset, detailing setup, connection instructions for PC, consoles, and mobile devices, key features like volume control and microphone mute, and support information.



HyperX Cloud Stinger Core Wireless Gaming Headset + 7.1 Quick Start Guide

Quick start guide for the HyperX Cloud Stinger Core Wireless Gaming Headset + 7.1, covering overview, setup, status indicators, charging, and software. Includes instructions for use and troubleshooting.