

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [INTEMPO](#) /

> [Intempo EE3851TEATES Encore Bluetooth Fabric Speaker User Manual](#)

INTEMPO EE3851TEATES

Intempo EE3851TEATES Encore Bluetooth Fabric Speaker User Manual

Model: EE3851TEATES

INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Intempo EE3851TEATES Encore Bluetooth Fabric Speaker. Please read this manual thoroughly before use and retain it for future reference. This portable Bluetooth speaker allows for wireless audio streaming from compatible devices.

SAFETY INFORMATION

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Do not attempt to disassemble or repair the speaker yourself. Refer all servicing to qualified personnel.
- Use only the provided charging cable or a certified equivalent.
- Keep the speaker away from heat sources and direct sunlight.
- Avoid listening at high volumes for extended periods to prevent hearing damage.
- Dispose of the battery responsibly according to local regulations.

PACKAGE CONTENTS

- 1 x Intempo Encore Bluetooth Fabric Speaker (Model: EE3851TEATES)
- 1 x Micro USB Charging Cable
- 1 x User Manual (this document)

PRODUCT OVERVIEW

Control Panel

The top panel of the speaker features several buttons for controlling playback and volume.



Image 1: Top view of the Intempo Encore Bluetooth Speaker, highlighting the control buttons. From left to right, these include the Mode button (often labeled 'M' or similar), Volume Down (-), Volume Up (+), and Power button (often with a universal power symbol).

- **Power Button:** Press and hold to power the speaker ON or OFF.
- **Volume Up (+):** Press to increase volume. Press and hold for next track (if applicable).
- **Volume Down (-):** Press to decrease volume. Press and hold for previous track (if applicable).
- **Mode Button:** Press to switch between available modes (e.g., Bluetooth, AUX).

Rear Panel Ports

The rear panel provides connectivity options for charging and wired audio input.



Image 2: Rear view of the Intempo Encore Bluetooth Speaker, displaying the input ports. These typically include an AUX input, a USB port (for media playback or charging other devices, if supported), and a DC 5V Micro USB charging port.

- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable (not included).
- **USB Port:** For connecting USB storage devices for audio playback (if supported) or potentially for charging other devices.
- **DC 5V (Micro USB) Charging Port:** For connecting the Micro USB charging cable to power the speaker.

SETUP

Charging the Speaker

1. Insert the small end of the Micro USB charging cable into the DC 5V port on the rear of the speaker.
2. Insert the large end of the USB charging cable into a suitable USB power adapter (e.g., smartphone charger, computer USB port) or a wall outlet with a USB adapter (not included).
3. The charging indicator light (if present) will illuminate, typically red, to show that the speaker is charging. It will usually turn off or change color when fully charged.
4. A full charge may take approximately 2-3 hours.

Powering On/Off

- **To Power On:** Press and hold the Power button on the top panel for approximately 3 seconds. You will hear an audible prompt or see an indicator light.
- **To Power Off:** Press and hold the Power button for approximately 3 seconds. You will hear an audible prompt or see an indicator light turn off.

OPERATING

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the Mode button until you hear a

Bluetooth pairing prompt or see a flashing blue LED indicator.

2. Enable Bluetooth on your smartphone, tablet, or other compatible device.
3. Search for available Bluetooth devices. The speaker will appear as "**EE3851TEATES**" or "**Intempo Encore**".
4. Select the speaker from the list to initiate pairing. Once paired, you will hear a confirmation sound, and the Bluetooth indicator light will typically become solid blue.
5. The speaker has a wireless range of up to 25 meters (82 feet) in an open environment.

Playing Audio

- Once successfully paired via Bluetooth, start playing music or audio from your connected device.
- For AUX mode, connect a 3.5mm audio cable from your device's headphone jack to the speaker's AUX input. Press the Mode button to switch to AUX mode.
- For USB playback (if supported), insert a USB flash drive with audio files into the USB port. Press the Mode button to switch to USB mode.

Volume Control

- Press the + button to increase the volume.
- Press the - button to decrease the volume.
- You can also control the volume directly from your connected audio device.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, fully charge the speaker before first use and recharge it at least once every three months if not used regularly.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is fully charged. Connect the charging cable and try again.
Cannot pair with Bluetooth device.	<ul style="list-style-type: none">◦ Ensure the speaker is in Bluetooth pairing mode (flashing LED).◦ Make sure Bluetooth is enabled on your device.◦ Move the speaker closer to your device (within 1 meter).◦ Forget the speaker from your device's Bluetooth list and try pairing again.◦ Restart both the speaker and your device.
No sound.	<ul style="list-style-type: none">◦ Check if the speaker and your device's volume are turned up.◦ Ensure the speaker is correctly paired or connected via AUX/USB.◦ Verify that the correct input mode is selected on the speaker.

Problem	Possible Solution
Poor audio quality.	<ul style="list-style-type: none">Move the speaker closer to your Bluetooth device to reduce interference.Ensure there are no obstructions between the speaker and your device.Try playing a different audio source.

SPECIFICATIONS

Model Number	EE3851TEATES
Brand	INTEMPO
Connectivity Technology	Bluetooth, Wireless
Wireless Range	Up to 25 meters (82 feet)
Speaker Output Power	6 Watts
Power Source	Battery
Control Method	Touch (buttons)
Product Dimensions	8.6 x 8.6 x 13.4 cm (3.4 x 3.4 x 5.3 inches)
Item Weight	430 g (0.95 lbs)
Compatible Devices	Smartphone, Tablet
Included Components	1 x Bluetooth Fabric Speaker, 1 x Micro USB charging cable

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.