

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER Folding Step Stool User Manual

BLACK+DECKER BD0003-DGRYGRY

BLACK+DECKER Folding Step Stool User Manual

Model: BD0003-DGRYGRY

INTRODUCTION

Thank you for choosing the BLACK+DECKER Folding Step Stool. This heavy-duty, portable, and collapsible step stool is designed for versatile use around your home, office, or outdoor activities. It is engineered for stability and ease of use, supporting up to 330 pounds.



Figure 1: The BLACK+DECKER Folding Step Stool in its primary dark grey and light grey color, with other color options visible in the background. This image showcases the product's overall design and available variations.

IMPORTANT SAFETY INFORMATION

WARNING: Not Intended for Children Without Adult Supervision.

- Always ensure the step stool is fully unfolded and locked into position before use.
- Use the step stool only on a dry, flat, and stable surface. Avoid slippery or uneven ground.

- Do not exceed the maximum weight capacity of 330 pounds.
- Distribute your weight evenly on the stool. Do not stand on the edges or attempt to rock.
- Keep hands and fingers clear of hinges when folding or unfolding the stool to prevent pinching.
- This step stool is designed for temporary elevation and seating. Do not use it as a permanent fixture or climbing apparatus.
- Inspect the stool for any damage or wear before each use. Discontinue use if any damage is observed.

SETUP

The BLACK+DECKER Folding Step Stool comes pre-assembled and requires no tools for setup. It is designed for quick and easy deployment.

Unfolding the Step Stool:

1. Hold the folded step stool by its integrated handle.
2. With one hand, gently pull the two halves of the stool apart. The legs will automatically extend and lock into place.
3. Ensure all four legs are fully extended and the top surface is flat and stable before applying weight.

PORTABLE

Opens Easy with One Flip



Figure 2: Demonstrates the ease of unfolding the step stool with a single flip, showcasing the integrated handle for portability and its compact folded state for easy storage.

OPERATING INSTRUCTIONS

This step stool is versatile and can be used for various tasks requiring a boost in height or a temporary seating option.

Using for Height Assistance:

- Place the unfolded step stool on a stable, level surface.
- Step onto the center of the stool's top surface. The grip-dot textured surface and anti-skid foot pads provide secure footing.
- Use for reaching high shelves, cleaning elevated areas, or assisting children to reach sinks or counters.

SUPPORT CHILDREN

In Cultivating Independence



Figure 3: A child using the step stool to reach a kitchen counter, demonstrating its utility in supporting children's independence for tasks like washing hands or helping in the kitchen.

DURABLE
Supports up to 300 lbs!



Figure 4: An adult standing on the step stool, emphasizing its robust construction and ability to support up to 300 lbs, suitable for various household tasks.

OPTIMAL ASSISTANCE

Provides Secure Footing

**NO-SLIP
GRIP DOT
SURFACE**

**ANTI-SKID
FOOT PADS**

ANSI III SAFETY CERTIFIED

Figure 5: Detailed view of the step stool's non-slip top surface and anti-skid foot pads, designed to provide secure footing and prevent slippage during use.

Using for Seating:

- The stool can also be used as a temporary seat for activities like gardening, painting, or other tasks where a low seating option is beneficial.
- Ensure the stool is fully unfolded and stable before sitting.

On-the-Go Support

A Foldable Stool for Hassle-Free Tire Changes

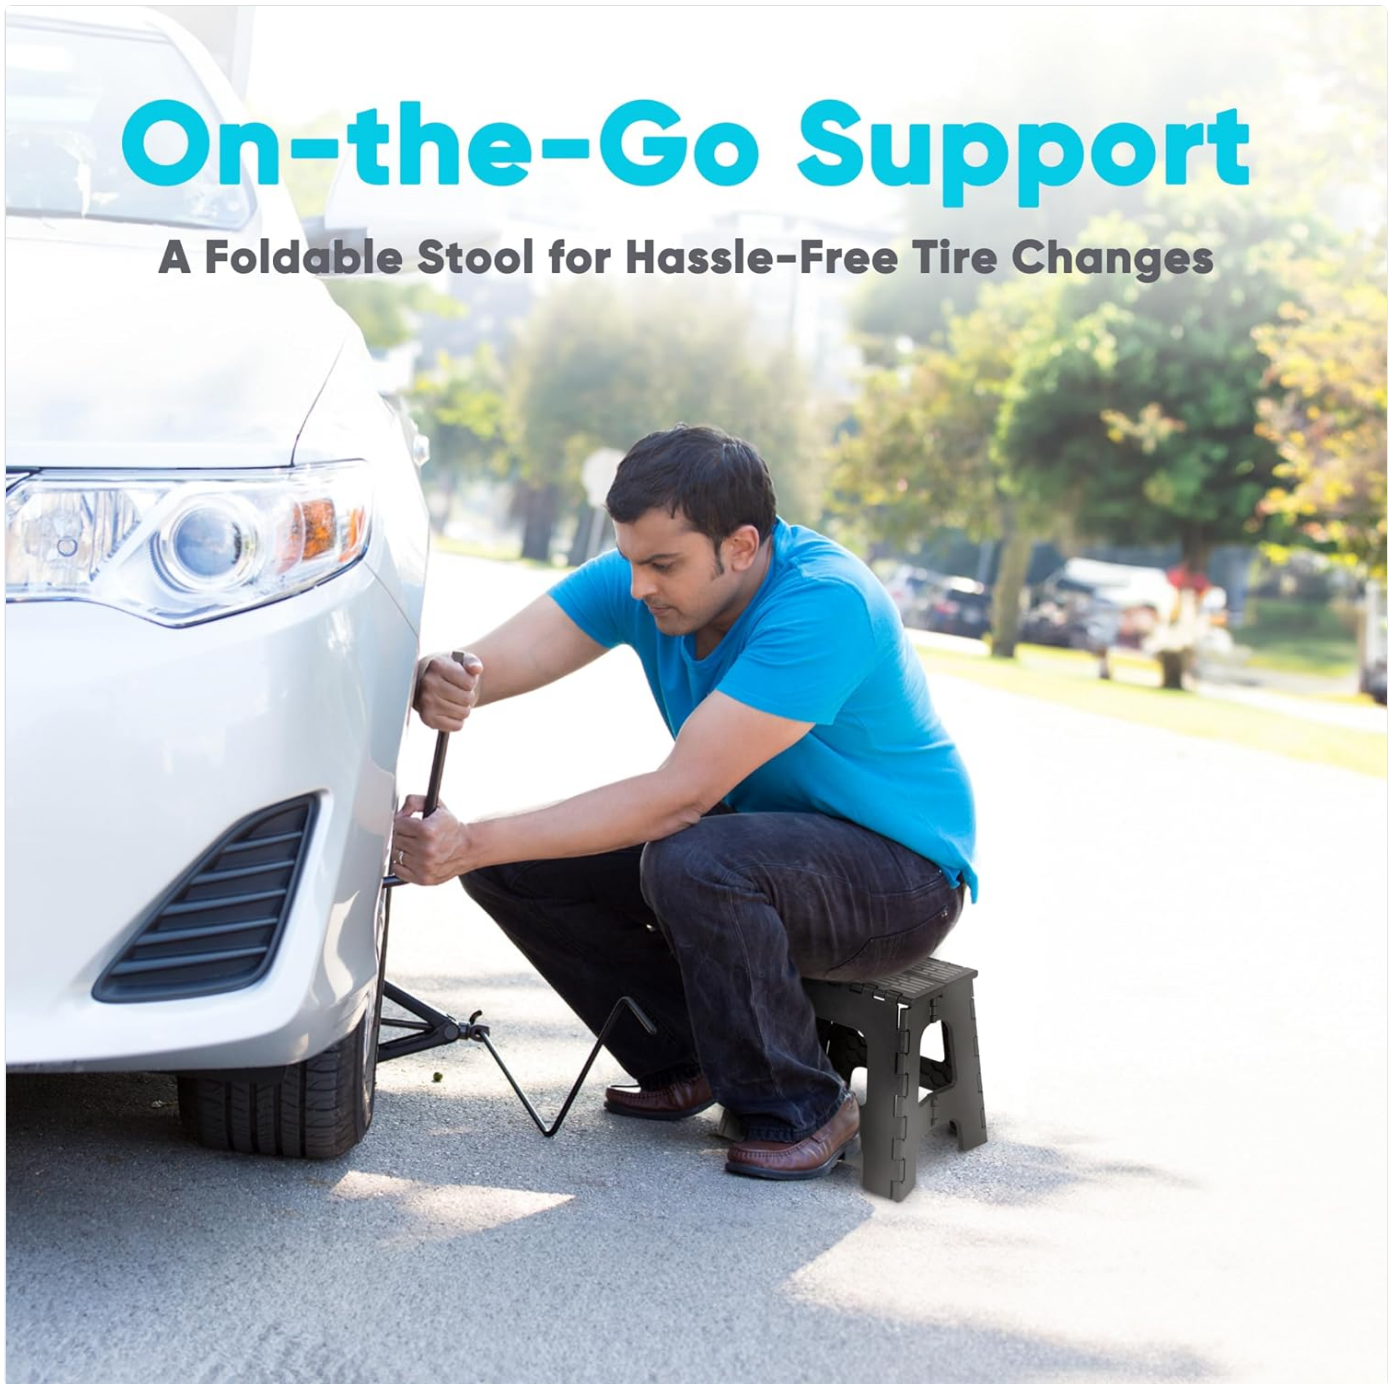


Figure 6: The step stool being used outdoors for automotive maintenance, highlighting its portability and utility for various on-the-go support needs.

MAINTENANCE

Maintaining your BLACK+DECKER Folding Step Stool is simple and ensures its longevity.

- **Cleaning:** Wipe the step stool with a damp cloth to remove dirt or spills. For stubborn marks, a mild soap solution can be used. Ensure the stool is completely dry before folding and storing.
- **Inspection:** Periodically check the hinges and overall structure for any signs of wear, cracks, or damage. Ensure the anti-skid foot pads are intact and securely attached.
- Do not use abrasive cleaners or harsh chemicals, as these may damage the plastic material.

STORAGE

The collapsible design of the step stool makes it highly space-efficient for storage.

Folding the Step Stool:

1. Ensure no weight is on the step stool.
2. Grasp the integrated handle on the top surface.
3. Lift the handle upwards. The two halves of the stool will fold inwards, and the legs will collapse.
4. Once folded, the stool is only approximately 2 inches thick, making it easy to store.

It can be stored virtually anywhere: under a sink, in a pantry, broom closet, behind a sofa, or under a bed.



Figure 7: Demonstrates the user-friendly folding mechanism, allowing the stool to be easily collapsed with one hand for convenient storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stool feels wobbly or unstable.	Not fully unfolded; uneven surface; damaged leg/hinge.	Ensure stool is fully extended and locked. Move to a flat, stable surface. Inspect for damage; if damaged, discontinue use.
Difficulty folding/unfolding.	Mechanism obstructed; dirt in hinges.	Check for any obstructions. Clean hinges if necessary. Apply minimal force; it should operate smoothly.
Stool slips on floor.	Wet surface; worn anti-skid pads.	Ensure floor is dry. Inspect anti-skid pads; if worn, contact customer support for replacement options.

SPECIFICATIONS

Feature	Detail
Product Dimensions (Unfolded)	8.5"D x 11.5"W x 13"H
Product Dimensions (Folded)	14"L x 1.5"W x 12.5"H
Brand	BLACK+DECKER
Model Name	13" Folding Step Stool
Item Model Number	BD0003-DGRYGRY
Material	High Impact Carbon Fiberglass Plastic
Color	Dark Grey / Lt Grey
Maximum Height	13 Inches
Weight Limit	330 Pounds (when standing), 350 Pounds (when sitting)
Item Weight	3.5 pounds
UPC	810017713028
Manufacturer	Vanderbilt Home

SPOT-ON FIT

Lightweight and Sturdy

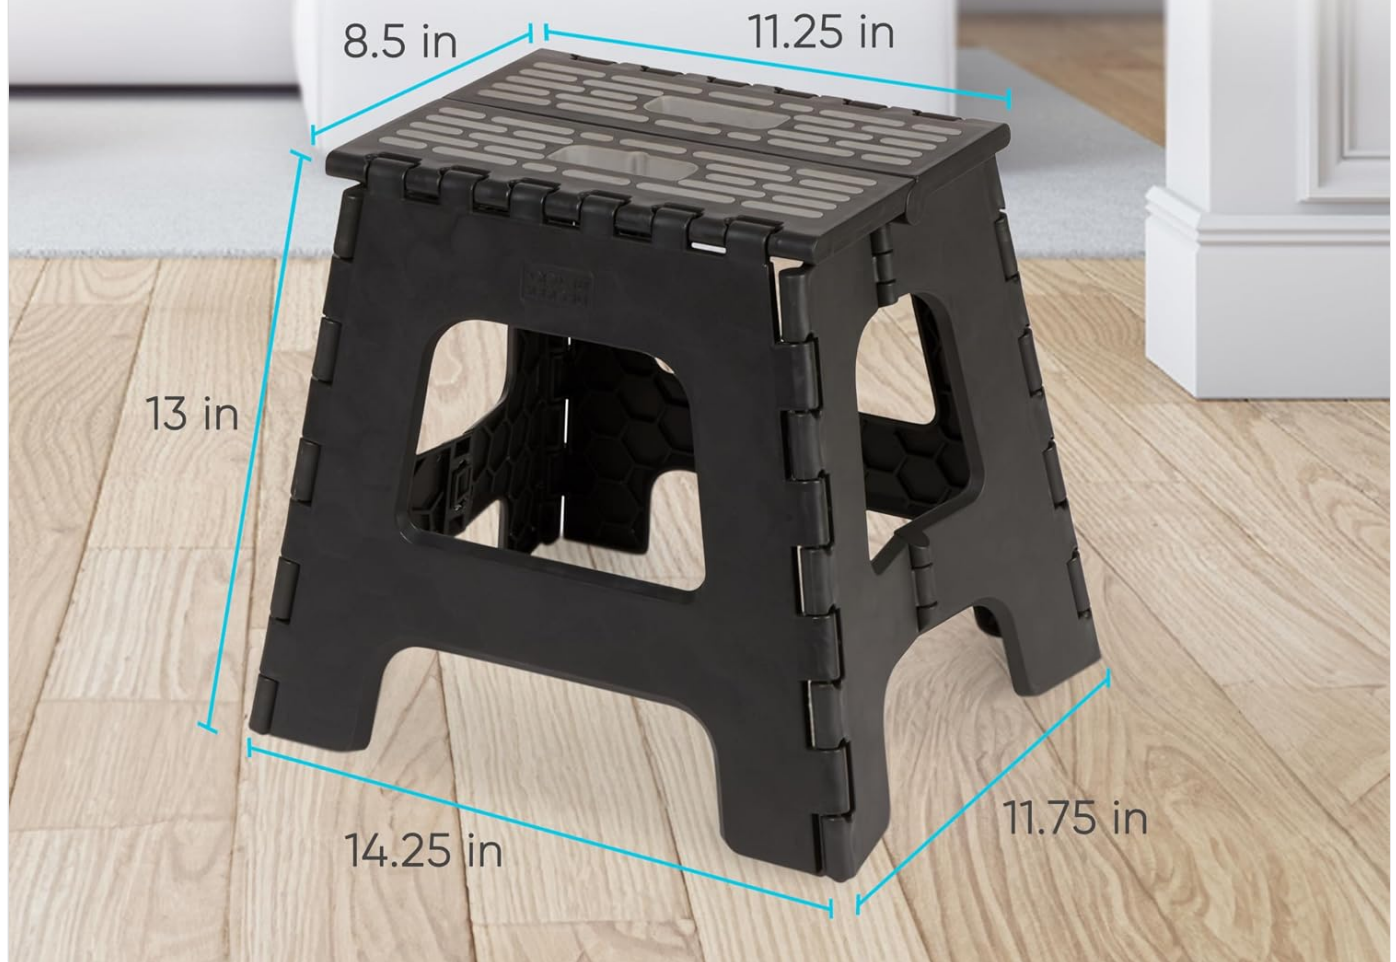


Figure 8: Dimensional overview of the step stool, illustrating its compact and sturdy design with key measurements for user reference.

WARRANTY AND SUPPORT

Warranty Information:

This BLACK+DECKER Folding Step Stool comes with a **2-year limited warranty** from the date of purchase. It also includes a **30-day money-back guarantee**. This warranty covers defects in material and workmanship under normal use. It does not cover damage resulting from misuse, abuse, accidents, or unauthorized modifications.

Customer Support:

For any questions, concerns, or warranty claims, please contact Vanderbilt Home, the manufacturer, through their official support channels. Refer to your purchase documentation for specific contact details or visit the BLACK+DECKER official website for support information.

Please have your model number (BD0003-DGRYGRY) and proof of purchase ready when contacting support.

© 2023 BLACK+DECKER. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question