

## Giantex Casart-24403-EP

# Giantex Portable Full-Automatic Washing Machine

Model: Casart-24403-EP User Manual

[Overview](#)   [Setup](#)   [Introduction](#)   [Safety Instructions](#)   [Product](#)  
[Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)

## 1. INTRODUCTION

---

Thank you for choosing the Giantex Portable Full-Automatic Washing Machine, Model Casart-24403-EP. This appliance is designed for efficient and convenient laundry care in compact living spaces such as apartments, dorms, and RVs. With its 12 lbs capacity, 10 wash programs, and 8 water levels, it offers versatility for various fabric types and soil levels. Please read this manual thoroughly before operation to ensure safe and optimal performance.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children away from the appliance during operation. Use the child lock feature.
- Do not wash items that are soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Always unplug the machine before cleaning or performing any maintenance.
- Do not install or store the appliance where it will be exposed to the weather or freezing temperatures.



**Figure 2.1: Child Lock Feature.** This image highlights the child lock function on the control panel, emphasizing its role in preventing accidental operation by children.

## 3. PRODUCT OVERVIEW

---

### 3.1 Components

- Washing Machine Unit
- Inlet Hose
- Drain Hose
- Faucet Adapter
- User Manual (this document)



**Figure 3.1: Key Components.** This image illustrates the visible lid, drain hose, lint filter, and adjustable foot, providing a visual guide to the machine's features.

### 3.2 Control Panel

The control panel features an LED display, program selection buttons, water level/spin options, and a child lock function.

# Easy Operation



10 Programs



8 Water Levels



LED Display



Time Setting




**Figure 3.2: Control Panel Layout.** This image details the control panel, showing the 10 program options, 8 water level settings, LED display, and time setting controls for easy operation.

## 4. SETUP AND INSTALLATION

### 4.1 Unpacking and Placement

- Carefully remove all packaging materials.
- Place the washing machine on a firm, level surface.
- Ensure there is adequate space around the machine for ventilation and operation (19"D x 19"W x 33.5"H dimensions).

# Suitable for Different Places

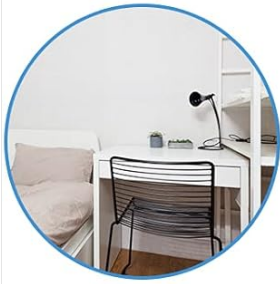

Dorm



Apartment



House



RV Camping



**Figure 4.1: Placement Guidelines.** This image illustrates the compact dimensions of the washing machine and suggests ideal placement in various small living environments such as dorms, apartments, and RVs.

## 4.2 Water Connection

1. Connect the inlet hose to the water inlet on the back of the machine.
2. Attach the other end of the inlet hose to a suitable faucet using the provided adapter. Ensure a secure, leak-free connection.
3. Position the drain hose into a sink or drain pipe. Ensure it is securely placed to prevent dislodging during operation.



Our Inlet Hose



Adapter



### Adaptable Faucet Type



Quick Connection



Female Thread  
15/16"-27 T (24mm)



Male Thread  
55/64"-27T (22mm)

### Not work for non removable aerator faucets



Non removable  
aerator faucet



Pull-out Faucet



Spout Faucet



Shower Pipes

**Figure 4.2: Water Inlet Connection.** This diagram demonstrates how to connect the inlet hose to adaptable faucet types (female thread 15/16"-27T (24mm) and male thread 55/64"-27T (22mm)) using the provided adapter. It also shows faucet types that are not compatible, such as non-removable aerator, pull-out, spout, and shower pipe faucets.

## 4.3 Leveling the Machine

Adjust the adjustable feet at the bottom of the machine to ensure it is level. This prevents excessive vibration and noise during operation.

## 5. OPERATING INSTRUCTIONS

### 5.1 Loading Laundry

- Open the lid and load clothes into the stainless steel tub. Do not overload; the maximum capacity is 12 lbs.
- Distribute laundry evenly to prevent imbalance during the spin cycle.

# 12 lbs Capacity

Meet Your Daily Laundry Needs



Underwear



T-shirt



Trouser



Bedding



**Figure 5.1: Loading Capacity.** This image demonstrates the 12 lbs capacity of the washing machine, showing it can accommodate various items such as underwear, t-shirts, trousers, and bedding.

## 5.2 Adding Detergent

Add the appropriate amount of detergent directly into the tub with the laundry, or into the designated detergent dispenser if available.

## 5.3 Selecting a Program

1. Press the "Power" button to turn on the machine.
2. Use the "Program" button to cycle through the 10 available wash programs (e.g., Normal, Quick, Soak, Wash&Rinse, Spin, Air Dry).
3. Select the desired water level using the "Water Level/Spin" button (8 levels available).
4. Press the "Start/Pause" button to begin the wash cycle.

## 5.4 Child Lock Function

To activate the child lock, press and hold the "Water Level/Spin" and "Program/Delay" buttons simultaneously for 3

seconds. The child lock indicator will illuminate. Repeat the process to deactivate.

## 6. MAINTENANCE AND CARE

### 6.1 Cleaning the Lint Filter

Regularly clean the lint filter located inside the tub to ensure efficient operation and prevent lint buildup on clothes. Remove the filter, clean it under running water, and reinsert it.

### 6.2 Cleaning the Exterior

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

### 6.3 Winterizing (if applicable)

If storing the machine in an area subject to freezing temperatures, drain all water from the hoses and tub to prevent damage.

## 7. TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Child lock active.	Check power connection; Ensure lid is fully closed; Deactivate child lock.
Excessive vibration/noise	Machine not level; Uneven load; Shipping bolts not removed (if applicable).	Adjust feet to level; Redistribute laundry; Refer to setup for shipping bolt removal.
Water leakage	Hoses not securely connected; Drain hose improperly positioned.	Tighten hose connections; Ensure drain hose is secure in drain.
Clothes not clean	Overloading; Insufficient detergent; Incorrect program selected.	Reduce load size; Use recommended detergent amount; Select appropriate wash program.

## 8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	Casart-24403-EP

Feature	Detail
Dimensions (L x W x H)	19" x 19" x 33.5"
Washing/Spinning Capacity	12 lbs
Net Weight	51 lbs
Voltage	220 - 240V/60Hz
Power of Washing	310W
Power of Spinning	250W
Number of Programs	10
Water Levels	8
Material	PP, Stainless Steel, Aluminum
Control Type	Push Button
Display Type	LED

© 2023 Giantex. All rights reserved.

For customer support, please refer to your purchase documentation or visit the official Giantex website.