

## Gemmy 225046

# Gemmy 3.5' Airblown Inflatable Minion Skeleton w/Pumpkin Scene Universal Instruction Manual

Model: 225046 | Brand: Gemmy

## INTRODUCTION

Thank you for choosing the Gemmy 3.5' Airblown Inflatable Minion Skeleton with Pumpkin Scene. This product is designed to provide a festive and fun decoration for your indoor or outdoor holiday display. Please read this manual thoroughly before setup and operation to ensure safe and proper use.

## IMPORTANT SAFETY INFORMATION

**Caution:** For indoor/outdoor use. Properly secure with included stakes and tethers when used outdoors. Keep away from heat sources. Follow all electrical safety precautions.

- Always unplug the inflatable when not in use or during strong winds.
- Do not operate near water or in standing water.
- Ensure all electrical connections are dry and protected from moisture.
- Keep children and pets away from the inflatable during inflation and deflation.
- Do not attempt to repair damaged electrical cords or components. Contact qualified personnel.
- Do not block the fan intake during operation.

## PACKAGE CONTENTS

Verify that all components are present before beginning setup:

- 1 x Airblown Inflatable Minion Skeleton w/Pumpkin Scene
- 4 x Ground Stakes
- 2 x Tethers
- 1 x Internal Blower (pre-installed)
- 1 x Power Adapter

## SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
2. **Position:** Choose a flat, clear area for placement. Ensure there are no sharp objects or debris that could puncture the material. For outdoor use, select a location where stakes can be securely inserted into the ground.
3. **Unfold:** Lay the inflatable flat on the chosen surface, spreading out the fabric and ensuring the internal blower is not obstructed.
4. **Connect Power:** Plug the power adapter into a standard electrical outlet. The inflatable will begin to self-inflate immediately.
5. **Inflate:** Allow the inflatable to fully inflate. This typically takes a few seconds. Adjust the position as it inflates to ensure it stands upright and the design is fully visible.
6. **Secure (Outdoor Use):** Once fully inflated, use the provided ground stakes and tethers to secure the inflatable. Attach the tethers to the loops on the inflatable and stake them firmly into the ground at an angle to provide stability.



Image: The Minion Skeleton inflatable fully inflated, standing upright with its pumpkin companion.



Image: The Minion Skeleton inflatable displayed outdoors in a yard, showing its scale in a typical setting.

## OPERATING INSTRUCTIONS

---

The Gemmy Airblown Inflatable is designed for continuous operation once plugged in. It features internal LED lights for illumination, making it visible day and night.

- To operate, simply plug the power adapter into a suitable electrical outlet. The internal blower will activate, and the inflatable will self-inflate.
- To turn off, unplug the power adapter from the outlet. The inflatable will begin to deflate.
- For best results and to prolong the life of the product, avoid continuous operation for more than 8 hours at a time.

## MAINTENANCE

---

- **Cleaning:** To clean the inflatable, wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically inspect the inflatable for any tears, punctures, or damage to the fabric or electrical components.

Small tears can often be repaired with a patch kit (not included).

- **Blower Care:** Keep the blower free from debris, leaves, and dirt to ensure proper airflow.

## STORAGE

Proper storage will help extend the life of your inflatable decoration.

1. **Deflate:** Unplug the inflatable and allow it to fully deflate.
2. **Clean:** Ensure the inflatable is clean and completely dry before storing to prevent mold or mildew.
3. **Fold:** Carefully fold or roll the inflatable to minimize wrinkles and save space.
4. **Store:** Store the inflatable and all accessories in a cool, dry place, away from direct sunlight and extreme temperatures. The original packaging box is ideal for storage.

## TROUBLESHOOTING

| Problem                            | Possible Cause                                                | Solution                                                                                          |
|------------------------------------|---------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| Inflatable does not inflate.       | Power not connected; Blower obstructed; Zipper open.          | Check power connection; Clear obstructions from blower; Ensure all zippers are closed.            |
| Lights are not working.            | Loose connection; Damaged bulb (if replaceable); Power issue. | Check all connections; Inspect bulbs (if applicable); Ensure power supply is stable.              |
| Inflatable does not stand upright. | Insufficient inflation; Improper securing; Strong winds.      | Ensure full inflation; Re-position and secure stakes/tethers; Consider deflating in strong winds. |

## SPECIFICATIONS

- **Brand:** Gemmy
- **Model Number:** 225046
- **UPC:** 191245250463
- **Dimensions (L x W x H):** 42 x 23 x 36 inches (inflated)
- **Material:** Inflatable fabric
- **Item Weight:** 3.11 pounds
- **Features:** Self-inflating, Internal LED lights, Includes stakes and tethers.
- **Usage:** Indoor or Outdoor

## WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Gemmy website. Keep your purchase receipt for warranty claims.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**