Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- VEGA /
- > VEGA Ultra Shine Hair Straightener VHSH-25 User Manual

VEGA VHSH-25

VEGA Ultra Shine Hair Straightener VHSH-25 User Manual

Model: VHSH-25

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the VEGA Ultra Shine Hair Straightener. Keep this manual for future reference.

- Do not use this appliance near water, such as in a bathtub, shower, or basin.
- Always unplug the appliance immediately after use and before cleaning.
- Keep the appliance away from children.
- Do not use the appliance if the cord or plug is damaged. Contact authorized service personnel for repair.
- Avoid direct contact of the heated plates with skin, especially the face, neck, and ears.
- Ensure hair is dry before use. Do not use on wet hair.
- Do not wrap the power cord around the appliance.
- Store the appliance in a cool, dry place when not in use.

2. PRODUCT OVERVIEW

The VEGA Ultra Shine Hair Straightener is designed for efficient hair styling with ceramic-coated plates. Below are its key features:



Image 2.1: The VEGA Ultra Shine Hair Straightener in its closed position, showcasing its sleek black design and pink ceramic plates.

• 35 mm Wide Plates: Designed for efficient styling, covering more hair in each pass.



Image 2.2: Close-up view highlighting the 35 mm width of the straightener's plates, indicating a wider styling surface.

• **Ceramic Coated Plates:** Ensures even heat distribution and smooth gliding through hair, reducing frizz and adding shine.



Image 2.3: Detailed view of the ceramic-coated plates, showing their smooth surface designed for gentle hair styling.

• Power Indicator Light: Illuminates when the appliance is switched on and heating.



Image 2.4: Close-up of the straightener's body, showing the red power indicator light illuminated, signaling the device is on.

- Quick Heat-up: Reaches optimal styling temperature rapidly.
- On/Off Switch: Simple control for powering the device.



Image 2.5: Close-up of the physical On/Off switch located on the side of the straightener, indicating its position.

• Compact & Travel Friendly: Designed for easy storage and portability.



Image 2.6: Graphic illustrating the compact design and travel-friendly nature of the straightener, featuring a suitcase icon.

3. SETUP

- 1. **Unpack:** Carefully remove the straightener from its packaging.
- 2. Inspect: Check the appliance for any signs of damage. Do not use if damaged.
- 3. Placement: Place the straightener on a heat-resistant, flat surface.
- 4. **Plug In:** Insert the power plug into a suitable electrical outlet (110-240V).

4. OPERATING INSTRUCTIONS

- 1. **Prepare Hair:** Ensure your hair is clean, dry, and tangle-free. For best results, use a heat protectant spray.
- 2. Turn On: Slide the On/Off switch to the 'On' position. The power indicator light will illuminate.
- 3. Heat Up: Allow the straightener to heat up for a few moments. It features quick heat-up technology.
- 4. Section Hair: Divide your hair into small, manageable sections.
- 5. Straighten: Take one section of hair and place it between the heating plates, close to the roots. Gently clamp the plates together and glide the straightener slowly down the hair section, from roots to ends.
- 6. Repeat: Repeat the process for all sections of hair until desired straightness is achieved.

- 7. Turn Off: After use, slide the On/Off switch to the 'Off' position. The power indicator light will turn off.
- 8. Cool Down: Allow the appliance to cool completely before storing.

5. MAINTENANCE AND CARE

- **Cleaning:** Ensure the straightener is unplugged and completely cool before cleaning. Wipe the plates and exterior with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water.
- **Storage:** Store the cooled straightener in a safe, dry place, away from moisture and direct sunlight. Do not wrap the cord tightly around the appliance.
- **Cord Care:** Regularly check the power cord for any damage. If damaged, discontinue use and seek professional repair.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Straightener does not turn on.	Not plugged in correctly; Power outlet issue; Appliance fault.	Ensure plug is fully inserted. Test with another outlet. If problem persists, contact customer support.
Straightener not heating up.	On/Off switch not engaged; Appliance fault.	Ensure the On/Off switch is in the 'On' position. If no heat, contact customer support.
Hair is not straightening effectively.	Hair too wet; Sections too large; Straightener not hot enough.	Ensure hair is completely dry. Use smaller sections. Allow sufficient heat-up time.

7. Specifications

Feature	Detail
Model Number	VHSH-25
Brand	VEGA
Plate Material	Ceramic
Plate Width	35 mm
Color	Black
Power Source	Corded Electric
Product Dimensions	10.24 x 1.57 x 0.98 inches
Item Weight	334 Grams (11.78 ounces)
Manufacturer	VEGA

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your

product or visit the official VEGA website. Warranty terms and conditions may vary by region.

If you experience any issues not covered in this manual, please contact VEGA customer service for assistance.

© 2023 VEGA. All rights reserved.

Related Documents - VHSH-25

