

[Manuals.plus](#) /

› [eKids](#) /

› Frozen 2 Bluetooth Portable MP3 Karaoke Machine Player User Manual

eKids FR-553v0MROL

Frozen 2 Bluetooth Portable MP3 Karaoke Machine Player User Manual

Model: FR-553v0MROL | Brand: eKids

PRODUCT OVERVIEW

The eKids Frozen 2 Bluetooth Portable MP3 Karaoke Machine Player is designed for interactive musical fun. This portable unit allows you to connect wirelessly via Bluetooth to stream audio, use a wired microphone for singing along, and store hundreds of songs with its built-in memory. It also features a USB port for additional content and recording, and a dynamic multi-color LED light show to enhance performances. Its lightweight design and rechargeable battery make it ideal for entertainment on the go.



Image: Front view of the Frozen 2 Bluetooth Portable MP3 Karaoke Machine Player with included microphone.

KEY FEATURES

- **Bluetooth Capabilities:** Connect to a Bluetooth-enabled device to stream music wirelessly.
- **Karaoke Microphone:** Includes a real working wired microphone for singing along.
- **Multi-color LED Light Show:** Built-in LED lights enhance the party atmosphere.
- **Record Karaoke:** Record, save, and share performances via a USB flash drive (not included).
- **Built-in Memory:** Store hours of music (hundreds of songs) with internal memory.
- **USB Port:** Expand content by adding MP3 files from a USB drive.
- **Rechargeable Battery:** Features built-in rechargeable batteries for portable use (USB charging cable included).
- **Portable Design:** Lightweight with a convenient handle for easy transport.



Image: Visual representation of the karaoke machine's key features including Bluetooth, microphone, built-in memory, USB port, and rechargeable battery.



Image: Diagram illustrating various devices compatible with the karaoke machine via Bluetooth, such as PCs, smartwatches, game devices, mobile phones, tablets, and notebooks.

WHAT'S IN THE BOX

- Bluetooth MP3 Player with Mic

- USB Charging Cable

SETUP GUIDE

1. **Charging the Unit:** Connect the included USB charging cable to the unit's charging port and a compatible USB power source. The display will indicate the battery level. Ensure the unit is fully charged before first use for optimal performance.
2. **Connecting the Microphone:** Plug the wired microphone into the designated microphone jack on the unit.
3. **Power On:** Press and hold the Power ON/OFF button located on the control panel until the unit powers on and the display illuminates.
4. **Microphone Storage:** For convenient storage and portability, the wired microphone and charging cable can be stored in the compartment located on the back of the unit. Open the cover to access the storage area.



Image: Detailed diagram showing the various controls, ports (including USB and microphone jacks), and dimensions of the karaoke machine, along with an illustration of the rear storage compartment.

Your browser does not support the video tag.

Video: An official product video from eKids demonstrating the features and usage of the Frozen 2 Bluetooth Portable MP3 Karaoke Machine Player, including Bluetooth connectivity, microphone use, and light show.

OPERATING INSTRUCTIONS

1. **Bluetooth Pairing:** Turn on the unit. Activate Bluetooth on your external device (e.g., smartphone, tablet). Search for "eKids Frozen 2 Karaoke" in your device's Bluetooth settings and select it to pair. Once paired, you can stream audio wirelessly.
2. **Playing Music:** Use the control buttons on the unit (Play/Pause, Forward, Reverse) to navigate and play music from either a connected Bluetooth device or from MP3 files stored in the built-in memory or on a connected USB

drive.

3. **Using the Microphone:** Once the microphone is plugged in and the unit is on, simply speak or sing into the microphone. Adjust the microphone volume using the dedicated controls.
4. **Light Show:** Press the Light On/Off button to activate or deactivate the multi-color LED light show.
5. **Recording Performances:** To record your singing, ensure a USB flash drive (not included) is inserted into the USB port. Press the 'REC' button to start recording. Press it again to stop. Recordings will be saved to the USB drive.



Image: A young child enthusiastically singing into the microphone while using the Frozen 2 karaoke machine, demonstrating its interactive use.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures. Utilize the built-in storage compartment on the back of the unit to keep the microphone and charging cable secure and prevent loss.
- **Battery Care:** To prolong battery life, avoid fully discharging the unit frequently. Recharge the battery regularly, even if the unit is not in constant use.

TROUBLESHOOTING

- **No Power:** Ensure the unit is charged. Connect the USB charging cable and allow it to charge for a period before attempting to power on again.
- **No Sound:** Check the volume levels on both the karaoke machine and the connected Bluetooth device. Ensure the microphone is securely plugged in.

- **Bluetooth Not Connecting:** Make sure Bluetooth is enabled on your device and the karaoke machine is in pairing mode. Move the devices closer to each other to ensure they are within range. Try turning both devices off and on again.
- **Lights Not Working:** Verify that the Light On/Off button has been pressed to activate the light show.
- **Recording Issues:** Ensure a compatible USB flash drive is inserted and has sufficient free space. The USB drive must be formatted correctly for the unit to recognize it.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 4 x 9 inches
Item Weight	1.84 pounds
Model Number	FR-553v0MROL
Manufacturer Recommended Age	3 years and up
Release Date	March 1, 2020
Brand	eKids
Special Features	Rechargeable, Portable, Wireless
Color	Newer Version (Record Feature)
Recommended Uses	Home

SAFETY INFORMATION

This product comes with a one-year limited warranty. Please refer to the warranty details for specific terms and conditions. Always supervise young children during use. Keep the unit away from water and excessive heat. Do not attempt to disassemble or repair the unit yourself.

WARRANTY AND SUPPORT

The eKids Frozen 2 Bluetooth Portable MP3 Karaoke Machine Player is covered by a one-year limited warranty. For warranty claims or technical support, please contact eKids customer service. You may also find additional resources and a detailed user manual in PDF format on the manufacturer's website or through the provided link: [User Guide \(PDF\)](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question