

[Manuals.plus](#) /

› [WONNIE](#) /

› WONNIE 16.9" Portable DVD Player Instruction Manual

WONNIE 1318BK

WONNIE 16.9" Portable DVD Player Instruction Manual

Model: 1318BK | Brand: WONNIE

1. INTRODUCTION

Thank you for choosing the WONNIE 16.9" Portable DVD Player. This device is designed to provide high-quality entertainment on the go, featuring a large 14.1" swivel screen, robust battery life, and versatile media playback options. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new portable DVD player.



The WONNIE 16.9" Portable DVD Player, showcasing its large screen and included remote control.

2. PRODUCT FEATURES

- **Large Swivel Screen:** 16.9" overall size with a 14.1" HD LCD display (1280x800 resolution) for clear, crisp visuals. The screen swivels 180° horizontally and 270° vertically for optimal viewing angles.
- **Eye Protection Function:** Upgraded technology filters blue light to protect users' eyes, especially beneficial for children.
- **Multiple Format Support:** Compatible with DVD, DVD+R, DVD-R, DVD+RW, DVD-RW, CD, CD+R, CD-R, CD+RW, CD-RW, VCD, SVCD. (Note: Blu-Ray discs are NOT supported).
- **Region Free:** Play discs from any region (US/JP, EU, CN, AU).
- **USB/SD Card Slot:** Supports up to 32GB flash drives for playback of VOB, AVI, MPEG1, MPEG2, XVID, MP3, WMA, JPG, JPEG files. (Note: 1080P and MP4 formats are NOT supported).
- **Durable Battery Life:** Equipped with a 5000mAh rechargeable battery, providing up to 6 hours of playback on a single charge.
- **Dual Stereo Speakers:** Built-in speakers deliver loud and clear sound, enhancing the viewing experience.
- **Last Memory Function:** Automatically resumes playback from where you left off, even after powering off the device.

EYE PROTECTION

HD Screen that is especially friendly to the eyes of children and elderly



The HD screen incorporates eye protection technology for comfortable viewing.

3. PACKAGE CONTENTS

Verify that all items are included in your WONNIE Portable DVD Player package:

- 16.9" Portable DVD Player (Model: 1318BK)
- Remote Control
- Car Charger
- AC Adapter
- RCA Cable
- User Manual

WHAT'S IN THE BOX ?



16.9" DVD Player



Remote Control



AC Adapter



Car Charger



RCA Cable



User Manual

All components included in the WONNIE Portable DVD Player package.

4. SETUP

4.1 Initial Setup

1. Unpack all components from the box.
2. Carefully remove any protective films or stickers from the screen and disc tray before first use.

4.2 Powering On and Charging

The portable DVD player can be powered by its internal rechargeable battery or directly via the AC adapter or car charger.

- **AC Adapter:** Connect the AC adapter to the DC IN port on the player and plug it into a standard wall outlet.
- **Car Charger:** For in-car use, connect the car charger to the DC IN port and plug it into your vehicle's cigarette lighter socket.
- **Battery Life:** A full charge provides up to 6 hours of playback. The battery indicator on the screen will show the current charge level.

Enjoy a Feast for the ears

Built in dual large speakers ensures a louder and clearer sound



The device can be charged using the included AC adaptor or car charger, offering up to 6 hours of battery life.

Official WONNIE video demonstrating the unboxing, initial power-on, and disc insertion process.

5. OPERATING INSTRUCTIONS

5.1 Basic Playback (DVD/CD)

1. Open the disc cover by gently pressing the 'OPEN' button.
2. Place your DVD or CD onto the disc spindle, ensuring it is seated correctly.
3. Close the disc cover firmly until it clicks.
4. The player will automatically detect the disc and begin playback. If not, press the 'PLAY/PAUSE' button.



MUL-TI FORMATS SUPPORTED

DVD Formats:
DVD, DVD+R, DVD-R, DVD+RW, DVD-RW, CD, CD+R, CD-R, CD+RW, CD-RW, VCD, SVCD (Blu-Ray not Support)

Video Formats:
VOB, AVI, MPEG1, MPEG2, XVID

Audio Formats:
MP3, WMA

Image Formats:
JPG, JPEG

The player supports a wide range of DVD and CD formats for versatile playback.

5.2 USB/SD Card Playback

1. Insert your USB flash drive into the 'USB' port or your SD card into the 'CARD' slot.
2. Use the 'USB/SD' button on the control panel or remote to switch to the corresponding input mode.
3. Navigate through your media files using the directional buttons and press 'OK' or 'PLAY/PAUSE' to select and play.

Official WONNIE video demonstrating how to play media files from a USB flash drive.

5.3 Swivel Screen Functionality

The screen can be rotated to various positions for comfortable viewing:

- **Horizontal Rotation:** Swivel the screen up to 180° to the left or right.
- **Vertical Flip:** Flip the screen 270° to lay flat against the base, converting the player into a tablet-like display.

DURABLE BATTERY LIFE

Last Up to 6 Hours
on a Full Charge



The versatile swivel screen allows for multiple viewing configurations.

5.4 Connecting to External Displays (TV/Projector)

Share your content on a larger screen by connecting the DVD player to a TV or projector using the provided RCA cable.

1. Connect one end of the RCA cable to the 'AV OUT' ports on the DVD player.
2. Connect the other end of the RCA cable to the corresponding 'AV IN' ports on your TV or projector.
3. Select the correct AV input source on your TV or projector.

SYNC SCREEN TO TV

Connect to TV to share a bigger screen



Easily connect your portable DVD player to a larger TV screen for shared viewing.

Official WONNIE video demonstrating the screen sync feature with an external display.

5.5 Last Memory Function

The player automatically remembers the last playback position. When you power on the device again, it will resume from where you left off, ensuring uninterrupted entertainment.

5.6 Audio Controls

Adjust the volume using the 'VOL+' and 'VOL-' buttons on the control panel or remote. The dual stereo speakers provide clear audio directly from the unit.

6. MAINTENANCE

6.1 Cleaning

- Use a soft, dry cloth to clean the screen and exterior of the player.
- Do not use liquid cleaners or abrasive materials, as they may damage the surface.

- Keep the disc tray free of dust and debris.

6.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the player regularly, even if not in use, to maintain battery health.
- Store the player in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on	Low battery; Power adapter not connected properly	Charge the battery; Ensure power connections are secure.
No disc detected	Disc inserted incorrectly; Disc is dirty or scratched; Unsupported disc format	Reinsert disc correctly; Clean disc; Check disc format compatibility.
No sound	Volume too low; Mute function activated; External speakers not connected properly	Increase volume; Deactivate mute; Check external speaker connections.
USB/SD card not recognized	Card/drive inserted incorrectly; Unsupported file format; Card/drive capacity too large	Reinsert card/drive; Check supported file formats; Ensure capacity is 32GB or less.

8. SPECIFICATIONS

- **Model Number:** 1318BK
- **Screen Size:** 16.9 Inches (diagonal)
- **Display Type:** LCD
- **Product Dimensions:** 13.7 x 9.7 x 1.4 inches
- **Item Weight:** 5.13 pounds
- **Battery:** 1 Lithium Metal battery (included), 5000mAh
- **Battery Life:** Up to 6 hours
- **Supported Media Types:** DVD, CD, VCD, SVCD (Blu-Ray NOT supported)
- **USB/SD Support:** Up to 32GB (VOB, AVI, MPEG1, MPEG2, XVID, MP3, WMA, JPG, JPEG)

9. WARRANTY AND SUPPORT

WONNIE provides a 365-day refund and replacement warranty, along with lifetime technical support for your portable DVD player. If you encounter any issues or have questions, please do not hesitate to contact WONNIE customer service. We are always ready to assist you.

For support, please refer to the contact information provided in your product packaging or visit the official WONNIE website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question