

## Elekpia RAV315

# Elekpia RAV315 Replacement Remote Control User Manual

Model: RAV315

## INTRODUCTION

This manual provides instructions for the Elekpia RAV315 Replacement Remote Control, designed for use with various Yamaha Audio Video Receivers. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and compatibility.

## SETUP

### Battery Installation

The Elekpia RAV315 remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

**Note:** No programming or pairing is required. Once batteries are installed, the remote is ready for use with compatible Yamaha AV receivers.



*Image Description: An angled view of the bottom section of the Elek pia RAV315 remote control, highlighting the textured back surface and the model number "RAV315 WN22730 EU" printed on the front. This area typically houses the battery compartment.*

## OPERATING THE REMOTE CONTROL

### General Functions

The Elek pia RAV315 remote control provides comprehensive control over compatible Yamaha Audio Video Receivers. Below are the primary functions:

- **Power (TV/AV):** Buttons located at the top for turning the TV or AV receiver on/off.
- **Input Selection:** Buttons like MULTI CH, AUDIO SEL, CD, MD/CD-R, TUNER, DVD, DTV/CBL, DVR, V-AUX, USB, AMP allow selection of various audio/video sources.
- **Volume Control:** Dedicated buttons for increasing (+) and decreasing (-) the volume.
- **Mute:** Temporarily silences the audio output.
- **Channel Control (TV CH):** Buttons for changing TV channels.
- **Navigation:** A central directional pad (up, down, left, right) with an ENTER button for menu navigation.
- **Menu:** Accesses the receiver's on-screen menu.
- **Playback Controls:** Buttons for Play, Pause, Stop, Fast Forward, Rewind, Skip Track.
- **Numeric Keypad:** For direct input of numbers (e.g., channel numbers, track numbers).





*Image Description: A full front view of the Elek pia RAV315 replacement remote control. The remote is black with various buttons in different colors (red, yellow, green, gray) clearly labeled for functions such as power, input selection, volume, channel, menu navigation, and playback controls. The model number "RAV315 WN22730 EU" is visible at the bottom right.*

## MAINTENANCE

### Battery Replacement

Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

## TROUBLESHOOTING

### Common Issues and Solutions

#### Remote is not responding:

Check if the batteries are correctly inserted with the correct polarity (+/-).

Replace the batteries with new AAA alkaline batteries.

Ensure there are no obstructions between the remote control and the Yamaha AV receiver.

Confirm the remote is pointed directly at the receiver's infrared sensor.

#### Some buttons do not work or function incorrectly:

While this remote is designed as a direct replacement, some specific advanced functions or programming features of original Yamaha remotes may not be fully replicated. Refer to your Yamaha receiver's original manual for specific functions if issues persist.

Ensure your Yamaha AV receiver model is listed as compatible. A list of compatible models is provided in the specifications section.

If issues persist after following these steps, contact customer support.

## SPECIFICATIONS

### Product Details

- **Model:** Elekpia RAV315
- **Dimensions:** 8.5 x 2 x 0.7 inches (approximately)
- **Weight:** 2.89 ounces (without batteries)
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (Yamaha AV Receiver)

### Compatible Yamaha AV Receiver Models

This remote control is compatible with a wide range of Yamaha AV Receiver models, including but not limited to:

- HTR-6040, HTR-6050, HTR-6230, HTR-6130
- RAV311, RAV315
- RX-V363, RX-V3800, RX-V461, RX-V561, RX-V620, RX-V640, RX-V650, RX-V663

- V1500, V377, V459, V620, V640, V757
- WK22730, WK22730EU, WN22730, WN22730EU
- And other models such as 377, 640, 5150, HTR6040G, YHT391BL, YHT-390, YHT590, RAV283, RXV365.

For a complete list or to verify compatibility with a specific model not listed, please refer to the product listing or contact customer support.

## **WARRANTY AND SUPPORT**

### **Warranty Information**

Warranty details for this product are not provided in this manual. Please refer to the original product packaging or the seller's website for specific warranty terms and conditions.

### **Customer Support**

For further assistance, technical support, or inquiries regarding your Elekpia RAV315 remote control, please contact the seller or refer to the Elekpia official website.