



Manuals.plus /

› COCOMM /

› COCOMM F300 Mobile Phone User Manual

COCOMM F300A0300

COCOMM F300 Mobile Phone User Manual

Model: F300A0300

1. PRODUCT OVERVIEW

The COCOMM F300 is a reliable 3G GSM mobile phone designed for essential communication. It features a clear 128 x 64 pixel TFT display and a user-friendly interface, making it suitable for various users. This device operates on a cellular network, providing basic call and messaging functionalities.

Key Features:

- 3G GSM Cellular Connectivity
- 128 x 64 Pixel TFT Display
- Durable Plastic Construction
- Long-lasting Lithium-ion Battery
- Eight Programmable Speed Dial Keys (M1-M8)
- Adjustable Loud Earpiece and Speaker Volume
- Menu Lock Functionality for Security



Image 1.1: Front view of the COCOMM F300 mobile phone, displaying its screen and keypad.

2. INITIAL SETUP

Follow these steps to prepare your COCOMM F300 for first use.

2.1. Installing the SIM Card

1. Ensure the phone is powered off.
2. Locate the battery cover on the back of the device and carefully remove it.
3. Identify the SIM card slot. Insert your 3G compatible SIM card into the designated slot, ensuring the gold contacts face downwards and the card is correctly oriented as indicated by the diagram near the slot.
4. Gently push the SIM card until it clicks into place.

2.2. Installing the Battery

1. After installing the SIM card, place the Lithium-ion battery into the battery compartment, aligning the metal contacts of the battery with those in the phone.
2. Press down gently until the battery is securely seated.
3. Replace the battery cover, ensuring it snaps firmly into place.

2.3. Charging the Battery

1. Connect the charger cable to the charging port on the phone.
2. Plug the charger into a standard electrical outlet.
3. Allow the phone to charge completely before first use. The charging indicator on the screen will show the battery status.

2.4. Powering On/Off

- **To Power On:** Press and hold the Power/End Call button until the screen illuminates.
- **To Power Off:** Press and hold the Power/End Call button until the power-off options appear on the screen,

then select 'Power Off'.

3. BASIC OPERATION

This section covers the fundamental functions of your COCOMM F300 mobile phone.

3.1. Making and Receiving Calls

- **To Make a Call:** Enter the phone number using the keypad and press the Call button (usually green).
- **To Answer a Call:** When the phone rings, press the Call button.
- **To End a Call:** Press the End Call button (usually red).

3.2. Using Speed Dial (M1-M8)

Your phone supports up to eight speed dial numbers. To program these keys, navigate to the phone's settings menu, locate the 'Speed Dial' or 'Memory Dial' option, and assign contacts to M1 through M8. Once programmed, simply press and hold the desired M key to dial the associated number.

3.3. Sending and Receiving SMS Messages

- **To Send an SMS:** Go to the 'Messages' menu, select 'New Message', enter the recipient's number and your message, then press 'Send'.
- **To Read an SMS:** New messages will typically display a notification. Access the 'Messages' menu to view your inbox.

3.4. Adjusting Volume

Use the dedicated volume keys on the side of the phone (if available) or navigate through the 'Settings' menu to 'Sound' or 'Volume' to adjust ringtone, call, and media volumes. The COCOMM F300 features a powerful earpiece and speaker for clear audio.

3.5. Menu Navigation and Language Settings

Use the navigation keys (up, down, left, right) and the 'OK' or 'Select' button to browse through the phone's menu options. To change the display language, go to 'Settings' > 'Language'. Please note that some language options may not be available depending on the device's firmware version.

4. MAINTENANCE AND CARE

Proper care ensures the longevity and optimal performance of your COCOMM F300.

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** Do not expose the battery to extreme temperatures. Avoid fully discharging the battery frequently to prolong its lifespan.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and moisture.
- **Handling:** Handle the phone with care to prevent physical damage. Avoid dropping the device.

5. TROUBLESHOOTING

Refer to this section for solutions to common issues you might encounter.

5.1. Phone Does Not Power On

- Ensure the battery is correctly installed and charged.
- Connect the charger and try powering on the device after a few minutes.
- Verify the battery is not damaged.

5.2. No Network Signal

- Check if the SIM card is properly inserted.
- Ensure you are in an area with 3G GSM network coverage.
- Restart the phone.
- Contact your network provider to confirm your SIM card is active and there are no network issues in your area.

5.3. Cannot Make or Receive Calls

- Verify network signal strength.
- Check if your SIM card has sufficient credit or an active plan.
- Ensure call barring or flight mode is not activated in the phone settings.

5.4. Display Issues

- If the screen is blank, refer to 'Phone Does Not Power On'.
- Adjust screen brightness in the settings menu.
- If the display is physically damaged, contact customer support.

6. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	COCOMM
Model Number	F300A0300
Color	Black
Operating System	Android 10.0
Connectivity	Cellular (3G GSM)
Display Resolution	128 x 64 Pixels (TFT)
Battery Type	1 Lithium-ion
Material	Plastic
Caller ID	No
ASIN	B0866CFQGC
Launch Date	October 2, 2022

7. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact the retailer where the product was purchased. COCOMM is committed to providing quality products and support.

Customer Support:

If you encounter issues not covered in this manual or require further assistance, please contact your point of purchase or visit the official COCOMM website for support resources.