

[Manuals.plus](#) /

> [Eboxer](#) /

> Eboxer 2.4GHz Slim Wireless Keyboard and Mouse Combo User Manual

Eboxer Eboxer3tgfaenub6-2

Eboxer 2.4GHz Slim Wireless Keyboard and Mouse Combo User Manual

Model: Eboxer3tgfaenub6-2

1. PRODUCT OVERVIEW

The Eboxer 2.4GHz Slim Wireless Keyboard and Mouse Combo provides a convenient and efficient input solution for various computing devices. This combo utilizes a single 2.4GHz USB receiver for wireless connectivity, offering a clutter-free workspace.



Image 1.1: Eboxer 2.4GHz Slim Wireless Keyboard and Mouse Combo, showing the keyboard, mouse, and USB receiver.

2. PACKAGE CONTENTS

- 1 x Wireless Keyboard
- 1 x Wireless Mouse
- 1 x USB 2.4GHz Receiver

- 1 x User Manual (this document)

3. SETUP INSTRUCTIONS

Follow these steps to set up your Eboxer wireless keyboard and mouse combo:

1. Install Batteries:

- Open the battery compartment on the underside of the keyboard and mouse.
- Insert the required batteries (typically AAA for keyboard, AA for mouse, not included) ensuring correct polarity.
- Close the battery compartments securely.

2. Connect the USB Receiver:

- Locate the USB 2.4GHz receiver, often stored within the mouse's battery compartment or packaged separately.
- Plug the USB receiver into an available USB port on your computer or compatible device.



Image 3.1: The compact USB 2.4GHz receiver for wireless connectivity.



Image 3.2: Wireless mouse shown alongside the USB receiver, ready for connection.

3. Automatic Connection:

The keyboard and mouse should automatically connect to your device. No additional drivers are typically required for most operating systems.

4. OPERATING INSTRUCTIONS

This section details the general use and features of your Eboxer wireless combo.

4.1 Keyboard Usage

- **Scissor Switch Keys:** The keyboard features scissor-switch keys designed to provide a comfortable and responsive typing experience.
- **Multimedia Keys:** The keyboard includes 12 multimedia keys (F1-F12, often accessed with the 'Fn' key) for quick access to functions such as volume control, media playback, and web browsing. Refer to the key legends for specific functions.

Scissor-Switch keyboard

Provides you with very comfortable and pleasing typing experience



Image 4.1: Close-up view of the keyboard, highlighting the scissor-switch key mechanism for improved typing.

4.2 Mouse Usage

- The mouse features standard left-click, right-click, and scroll wheel functionality.
- Ensure the mouse is placed on a suitable surface for optimal tracking.

4.3 Compatibility

The combo is designed for broad compatibility with various operating systems and devices that support USB input, including:

- Desktop PCs
- Laptops
- Macbooks
- All-in-One (AIO) PCs
- Smart TVs
- TV Boxes

Fully compatible Universal Multi-system

Can be used in electronic equipment with USB interface



Image 4.2: Diagram illustrating the universal multi-system compatibility of the keyboard and mouse combo with various devices.

5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your device.

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the internal components.
- **Water Resistance:** The keyboard features a design intended to resist minor spills. In case of liquid exposure, immediately disconnect the device, dry it thoroughly, and allow it to air dry completely before reuse.
- **Battery Replacement:** Replace batteries when performance degrades or the low battery indicator (if present) illuminates. Always use fresh batteries of the specified type.
- **Storage:** When not in use for extended periods, remove batteries to prevent leakage and store the combo in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your Eboxer wireless combo, refer to the following troubleshooting steps:

- **No Response from Keyboard/Mouse:**
 - Ensure batteries are correctly installed and have sufficient charge. Replace if necessary.
 - Verify the USB receiver is securely plugged into a working USB port on your device. Try a different USB port.
 - Ensure the keyboard and mouse are within the effective operating range (approximately 10 meters) of the USB receiver.
 - Restart your computer or device.
- **Lag or Intermittent Connection:**
 - Move the USB receiver closer to the keyboard and mouse.
 - Avoid placing the receiver near other wireless devices (e.g., Wi-Fi routers, cordless phones) that may cause interference.
 - Ensure there are no large metal objects between the receiver and the devices.
- **Mouse Cursor Jumps or is Inaccurate:**
 - Clean the optical sensor on the underside of the mouse.
 - Use the mouse on a clean, non-reflective, and uniform surface.

7. SPECIFICATIONS

Detailed technical specifications for the Eboxer 2.4GHz Slim Wireless Keyboard and Mouse Combo:

Feature	Detail
Brand	Eboxer
Model Number	Eboxer3tgfaenub6-2
Connectivity Technology	2.4GHz Radio Frequency, USB Receiver
Color	Silver
Keyboard Special Feature	Scissor Switch, Waterproof, 12 Multimedia Keys
Mouse Special Feature	Ergonomic
Compatible Devices	Gaming Console, Personal Computer (PC 7/8 and other equipment with USB interface)
Item Weight	15.5 ounces (approx. 439 grams)
Date First Available	March 27, 2020

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.