

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool 65L Built-in Oven AKPR 609 BLK Instruction Manual](#)

Whirlpool AKPR 609 BLK

Whirlpool 65L Built-in Oven AKPR 609 BLK Instruction Manual

Model: AKPR 609 BLK

INTRODUCTION

Thank you for choosing the Whirlpool 65L Built-in Oven AKPR 609 BLK. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new appliance. Please read these instructions carefully before using the oven and retain them for future reference.



Image: Front view of the Whirlpool 65L Built-in Oven AKPR 609 BLK, showcasing its black finish and control knobs.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance:

- Ensure the oven is properly installed by a qualified technician before use.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- Supervise children when the oven is in operation.
- Never use water to extinguish grease fires; smother the flames or use a dry chemical or foam-type extinguisher.
- Keep flammable materials away from the oven.
- Disconnect the power supply before cleaning or performing maintenance.

SETUP AND INSTALLATION

The Whirlpool AKPR 609 BLK is designed for built-in installation. Proper ventilation and clearance are crucial for safe operation.

Installation Dimensions

Refer to the diagram below for precise installation measurements. The appliance dimensions are 595 mm (Height) x 595 mm (Width) x 575 mm (Depth).

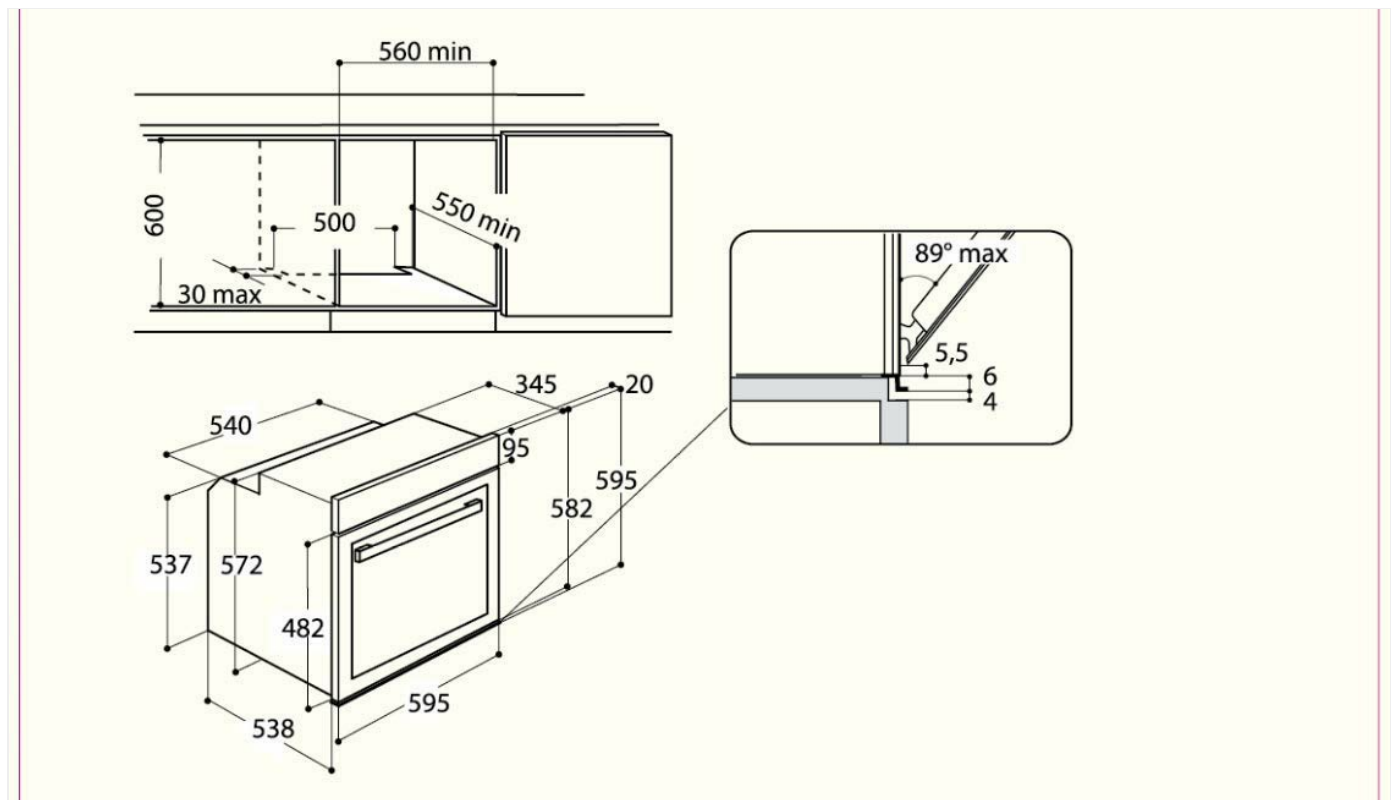


Image: Technical drawing illustrating the required cabinet dimensions and clearances for installing the Whirlpool built-in oven.

Initial Cleaning

Before first use, clean the oven interior and all accessories with warm soapy water. Rinse thoroughly and dry. Run the empty oven at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure adequate ventilation during this process.

OPERATING INSTRUCTIONS

Your Whirlpool oven features intuitive controls for various cooking needs.

Control Knobs

The oven is equipped with three rotary controls:

- **Function Knob:** Selects the desired cooking mode.
- **Timer Knob:** Sets the cooking duration or acts as a minute minder.
- **Temperature Knob:** Adjusts the oven temperature up to 250°C.

Cooking Functions

The oven offers 9 auto cooking functions. Rotate the Function Knob to select the appropriate mode:

- **Oven Lamp:** Illuminates the oven interior.
- **Defrost:** Gently thaws frozen food.

- **Bottom Heat:** Provides heat from the bottom element, ideal for crisping bases.
- **Conventional Cooking:** Uses top and bottom heating elements for traditional baking and roasting.
- **Convection With Fan:** Combines top/bottom heat with a fan for even heat distribution, suitable for multiple dishes.
- **Radiant Grilling:** Uses the top grill element for grilling smaller items.
- **Double Grill:** Engages both grill elements for intense grilling.
- **Double Grill With Fan:** Combines double grilling with fan assistance for faster, more even grilling.
- **Double Grill With Rotisserie:** Utilizes double grilling with the rotisserie function for roasting poultry or large cuts of meat.



Oven Lamp



Defrost



Bottom Heat



Conventional Cooking



Convection With Fan



Radiant Grilling



Double Grill



Double Grill With Fan



Double Grill With Rotisserie

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

Oven Interior

The oven features an easy-to-clean internal enamelled cavity. After each use, allow the oven to cool down, then wipe the interior with a soft cloth and mild detergent. For stubborn stains, use a non-abrasive oven cleaner specifically designed for enamelled surfaces. Avoid abrasive pads or harsh chemicals.

Accessories

Remove oven racks, trays, and the rotisserie spit. Wash them in warm soapy water, rinse, and dry thoroughly before placing them back in the oven.

Exterior Surfaces

Clean the exterior surfaces with a soft cloth dampened with water and a mild detergent. Dry with a soft, clean cloth. Do not use abrasive cleaners or scouring pads.

TROUBLESHOOTING

If you encounter issues with your oven, consult the following table before contacting service.

Problem	Possible Cause	Solution
Oven does not heat.	No power supply; incorrect function/temperature setting.	Check power connection and circuit breaker. Verify function and temperature knobs are correctly set.
Oven light not working.	Bulb is faulty or loose.	Ensure oven is cool and disconnected from power. Replace or tighten the bulb.
Uneven cooking results.	Food placed incorrectly; oven not preheated; excessive food quantity.	Ensure proper air circulation around food. Preheat oven fully. Avoid overcrowding. Use convection function for multiple dishes.
Excessive smoke during cooking.	Food spills or grease buildup.	Clean oven interior thoroughly. Use a drip tray when grilling or roasting fatty foods.

SPECIFICATIONS

Key technical specifications for the Whirlpool 65L Built-in Oven AKPR 609 BLK:


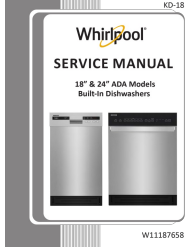



Feature	Detail
Brand	Whirlpool
Model	AKPR 609 BLK
Capacity	65 litres
Installation Type	Built-In
Special Features	Auto Cook, Timer
Oven Cooking Mode	Radiant
Colour	Black
Voltage	240 Volts
Wattage	3000 Watts
Fuel Type	Electric
Door Orientation	Forward
Item Weight	33 kg 200 g
Item Dimensions (LxWxH)	69 x 65 x 67 Centimeters
Included Components	Oven

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or visit the official Whirlpool website. Contact their customer service for assistance with any product-related inquiries or service requests.



Related Documents - AKPR 609 BLK

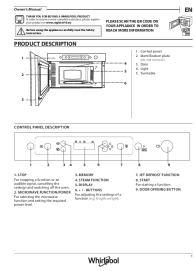	<p>Four multifonction encastrable Whirlpool W6 OM5 4S1 P : Caractéristiques et Spécifications</p> <p>Découvrez le four encastrable multifonction Whirlpool W6 OM5 4S1 P. Caractéristiques : technologie 6ème Sens, nettoyage pyrolytique, préchauffage rapide, capacité 73L. Spécifications techniques détaillées et classe énergétique A+.</p>
	<p>Whirlpool 18" & 24" ADA Built-In Dishwashers Service Manual</p> <p>This service manual provides detailed technical information, diagnostics, troubleshooting, and component access procedures for Whirlpool 18" and 24" ADA Built-In Dishwashers (Model KD-18, Part No. W11187658).</p>
	<p>Whirlpool W4OMSK58RU1SBA 60cm Multifunction Oven with Steam - Features, Specs, Installation</p> <p>Detailed information on the Whirlpool W4OMSK58RU1SBA 60cm Multifunction Oven with Steam Function. Includes features, technical specifications, and installation guide.</p>
	<p>Whirlpool W4OMK38HU0XA 60cm Multifunction Hydrolytic Oven - Features, Specs & Installation</p> <p>Detailed specifications and features for the Whirlpool W4OMK38HU0XA 60cm Multifunction Hydrolytic Oven, including Cook3, Turbo Grill, Smart Clean technology, and installation dimensions.</p>
	<p>Whirlpool MBNA910X Microwave Oven User Manual</p> <p>Official user manual for the Whirlpool MBNA910X Solo Microwave Oven. This guide details the appliance's features, including its 22L capacity, 750W power, and functions like microwave cooking, steam preparation, and Jet Defrost. It provides comprehensive instructions for operation, daily use, cleaning, maintenance, and troubleshooting. Model number: 859991659450.</p>

