

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MUSOO](#) /

> [AROMA AT-01A Clip-on Tuner User Manual](#)

MUSOO AT-01A

AROMA AT-01A Clip-on Tuner User Manual

Model: AT-01A

1. INTRODUCTION

The AROMA AT-01A is a versatile and compact clip-on tuner designed for a wide range of string instruments. It features a rotatable clip for optimal viewing angles and a clear LCD display, making it easy to tune your instrument accurately. This tuner supports Chromatic, Guitar, Bass, and Ukulele tuning modes, providing precise pitch detection for musicians of all levels.



Image 1: Front view of the AROMA AT-01A Clip-on Tuner, displaying an 'E' note on its illuminated LCD screen.

2. FEATURES

- **Compact and Portable Design:** Easy to carry and attach to your instrument.
- **Rotatable Clip:** Allows for multi-angle viewing, ensuring the display is always visible.

- **Clear LCD Display:** Provides bright and easy-to-read tuning information.
- **Multiple Tuning Modes:** Supports Chromatic (C), Guitar (G), Bass (B), and Ukulele (U) modes.
- **High Precision:** Delivers accurate tuning results for optimal performance.
- **Automatic Power-Off:** Conserves battery life by automatically shutting down after a period of inactivity.

3. SETUP

1. **Battery Installation:** Open the battery compartment on the back of the tuner. Insert one CR2032 lithium battery with the positive (+) side facing up. Close the compartment securely.
2. **Attaching to Instrument:** Gently open the clip and attach the tuner to the headstock of your guitar, bass, or ukulele. Ensure it is securely fastened but not overly tight to avoid damaging the instrument. The rotatable joint allows you to adjust the display angle for optimal viewing.



Image 2: Side view of the AROMA AT-01A Clip-on Tuner, highlighting its robust clip designed for secure attachment to instrument headstocks.

3. **Power On/Off:** Press and hold the power button (usually marked with a power symbol) located on the front of the tuner for 2 seconds to turn it on or off.
4. **Select Tuning Mode:** Briefly press the power button (after turning on) to cycle through the tuning modes: Chromatic (C), Guitar (G), Bass (B), and Ukulele (U). Select the mode appropriate for your instrument.

4. OPERATING INSTRUCTIONS

Once the tuner is attached and powered on in the correct mode, pluck a single string on your instrument. The tuner will detect the pitch and display the note name on the LCD screen.

- **Display Interpretation:**
 - The note name (e.g., E, A, D, G, B, C) will be displayed prominently.
 - A needle or bar indicator will show whether the note is flat, sharp, or in tune.
 - The display color will change to indicate tuning status: typically blue/orange for flat/sharp and green

for in-tune.

- **Tuning Process:**

- If the needle points to the left and the display is blue/orange, the note is flat. Tighten the string until the needle moves to the center and the display turns green.
- If the needle points to the right and the display is blue/orange, the note is sharp. Loosen the string until the needle moves to the center and the display turns green.
- When the needle is centered and the display is green, your string is in tune.

- **Chromatic Mode (C):** In this mode, the tuner will display any note it detects, regardless of instrument type. This is useful for instruments not covered by the specific modes or for precise intonation checks.

- **Guitar (G), Bass (B), Ukulele (U) Modes:** These modes are optimized for the standard tuning of their respective instruments, making the tuning process more intuitive by focusing on the common notes for those instruments.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the tuner's surface. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** When the display becomes dim or the tuner does not respond, it's time to replace the CR2032 battery. Follow the battery installation steps in Section 3.
- **Storage:** Store the tuner in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if the tuner will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

- **Tuner does not power on:** Check if the battery is inserted correctly with the positive (+) side up. Replace the battery if it is depleted.
- **Inaccurate tuning:** Ensure the tuner is securely clipped to the instrument's headstock. Make sure you are in the correct tuning mode for your instrument. Pluck the string firmly and clearly.
- **Display is dim or flickering:** This indicates a low battery. Replace the CR2032 battery.
- **Tuner does not detect notes:** Ensure the instrument is producing clear, sustained notes. Avoid background noise. Re-clip the tuner to a different spot on the headstock if necessary.

7. SPECIFICATIONS

Parameter	Value
Model	AT-01A
Tuning Modes	Chromatic (C), Guitar (G), Bass (B), Ukulele (U)
Tuning Range	A0 (27.5Hz) - C8 (4186Hz)
A4 Calibration	440Hz
Detection Method	Vibration (Clip)
Power Supply	1 x CR2032 Lithium Battery

Dimensions	15 x 15 x 10 cm (approximate, as packaged)
Item Weight	30 g

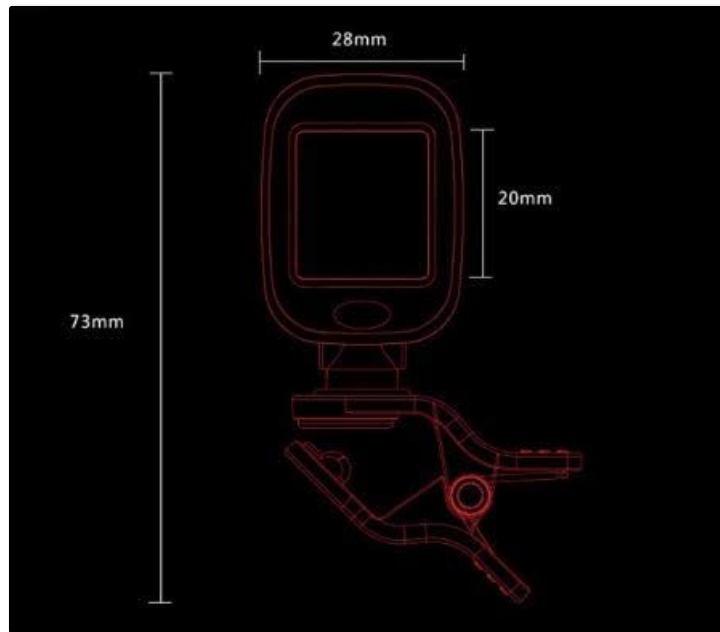


Image 3: Dimensional diagram of the AROMA AT-01A tuner, indicating key measurements for its compact design.

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your AROMA AT-01A Clip-on Tuner, please refer to the purchase documentation or contact the seller/manufacturer directly. Keep your proof of purchase for any warranty claims.