

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Easygliss Plus FV5735E0 Steam Iron User Manual

Tefal FV5735E0

Tefal Easygliss Plus FV5735E0 Steam Iron User Manual

Model: FV5735E0

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance for the first time. Keep this manual for future reference.

- Always plug the iron into a grounded outlet.
- Do not leave the iron unattended while it is switched on or connected to the power supply.
- Keep the iron and its cord out of reach of children.
- Never immerse the iron, power cord, or plug in water or any other liquid.
- Unplug the iron from the electrical outlet before filling with water, cleaning, or after each use.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Use the iron only for its intended purpose, which is ironing clothes.
- The soleplate can become extremely hot. Avoid direct contact with the hot soleplate.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Tefal Easygliss Plus FV5735E0 Steam Iron.



Figure 1: Tefal Easygliss Plus FV5735E0 Steam Iron, side view. This image displays the Tefal Easygliss Plus FV5735E0 Steam Iron from a side angle, highlighting its blue and white design, handle, and soleplate.

Components:

- Water filling inlet
- Spray nozzle
- Steam control selector
- Spray button
- Steam boost button
- Temperature control dial
- Indicator light
- Handle
- Power cord
- Durilium Airglide Soleplate
- Water tank

3. SETUP

Before First Use:

1. Remove any stickers or protective film from the soleplate.
2. It is recommended to iron an old piece of fabric (e.g., an old towel) for a few minutes to remove any manufacturing residues from the soleplate.

Filling the Water Tank:



Figure 2: Tefal Easygliss Plus FV5735E0 Steam Iron on an ironing board with clothes. The steam iron is shown resting on an ironing board next to folded garments, illustrating a typical use scenario.

1. Ensure the iron is unplugged from the power outlet.
2. Set the steam control selector to the 'Dry Ironing' position (no steam).
3. Hold the iron in a vertical position.
4. Open the water filling inlet cover.
5. Carefully pour tap water into the water tank up to the 'MAX' fill line. The water tank capacity is 270 ml.
6. Close the water filling inlet cover securely.

Note: Do not use chemically descaled water, perfumed water, or water from tumble dryers, as these can damage the iron.

4. OPERATING INSTRUCTIONS

Temperature Settings:

1. Plug the iron into a grounded electrical outlet.
2. Turn the temperature control dial to the desired setting according to the fabric type. Refer to the garment care label for guidance.
3. The indicator light will illuminate, indicating the iron is heating up.
4. Once the desired temperature is reached, the indicator light will turn off. The iron is now ready for use.

Steam Ironing:



Figure 3: Underside of Tefal Easygliss Plus FV5735E0 Steam Iron soleplate with steam effect. This image focuses on the Durilium Airglide soleplate, showing its numerous steam vents and the smooth gliding action indicated by the light trails.

1. Ensure the water tank is filled.
2. Set the temperature control dial to a setting suitable for steam (usually between '••' and 'MAX').
3. Once the indicator light turns off, select the desired steam level using the steam control selector.
4. For a powerful burst of steam to remove stubborn creases, press the steam boost button.
5. For a fine mist to dampen fabric, press the spray button.

Dry Ironing:

1. Ensure the water tank is empty or set the steam control selector to the 'Dry Ironing' position (no steam).
2. Set the temperature control dial to the desired setting for your fabric.
3. Wait for the indicator light to turn off before ironing.

Anti-Drip System:

The iron is equipped with an anti-drip system to prevent water from dripping onto your fabrics, especially at lower temperatures. If you hear a click, it indicates the system is active.

5. MAINTENANCE AND CARE

Cleaning the Soleplate:

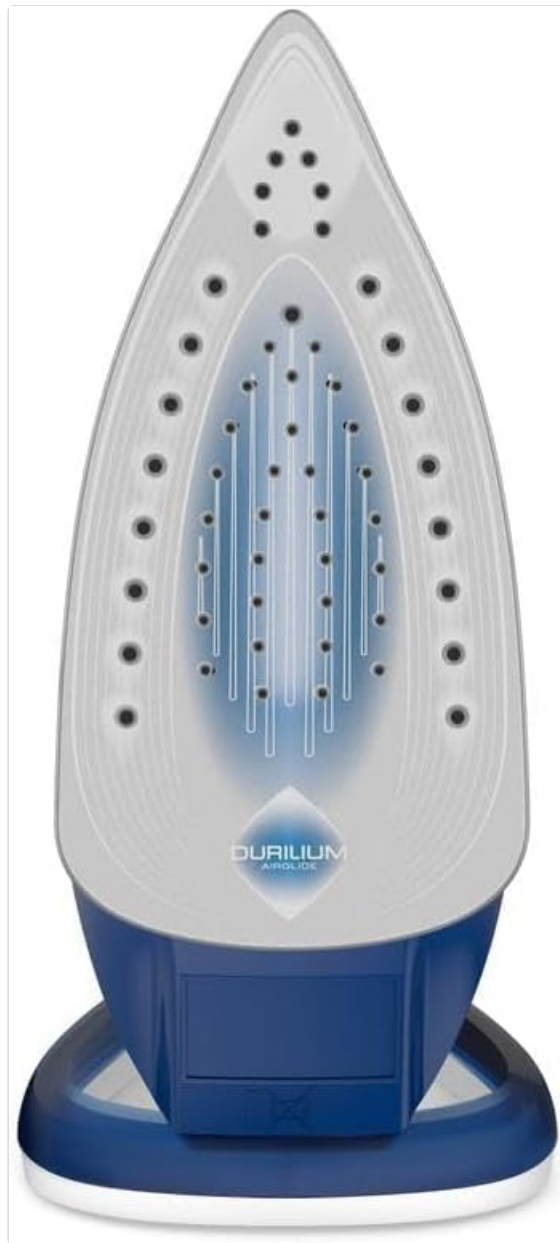


Figure 4: Bottom view of the Tefal Easygliss Plus FV5735E0 Steam Iron soleplate. A close-up view of the Durilium Airglide soleplate, detailing the arrangement of steam holes and the precision tip.

1. Always unplug the iron and allow it to cool completely before cleaning.
2. Wipe the soleplate with a damp cloth and a non-abrasive cleaner.
3. Do not use abrasive pads, scouring powders, or harsh chemicals, as these can damage the soleplate.

Descaling (Anti-Calc System):

Your iron features an integrated anti-calc system to reduce limescale build-up. To maintain its effectiveness, perform the following self-cleaning procedure regularly (e.g., once a month, depending on water hardness and usage):

1. Fill the water tank with tap water up to the 'MAX' line.
2. Plug in the iron and set the temperature control dial to 'MAX'.
3. Once the indicator light turns off, unplug the iron.
4. Hold the iron horizontally over a sink.
5. Push and hold the self-clean button (if available, otherwise use the steam boost button repeatedly) to flush out water and scale. Hot water and steam will be expelled from the soleplate.
6. Continue until the water tank is empty.
7. Plug in the iron again and let it heat up to dry the soleplate.

8. Unplug and let it cool completely before storing.

Storage:

After each use, unplug the iron, empty the water tank, and allow it to cool completely. Store the iron vertically on its heel rest in a safe, dry place.

6. TROUBLESHOOTING

If you encounter issues with your iron, refer to the following common problems and solutions:

- **Iron does not heat up:**
 - Check if the iron is properly plugged into a working electrical outlet.
 - Ensure the temperature control dial is set to a temperature above the minimum.
- **No steam or insufficient steam:**
 - Check if the water tank is filled.
 - Ensure the temperature setting is high enough for steam production (usually '••' or higher).
 - Verify that the steam control selector is set to a steam position.
 - The soleplate may be clogged with scale. Perform the descaling procedure.
- **Water drips from the soleplate:**
 - The temperature may be too low for steam. Increase the temperature setting.
 - The steam control selector might be set to a steam position while the iron is not hot enough.
 - Do not overfill the water tank.
- **Brown stains on fabric:**
 - The soleplate may be dirty. Clean the soleplate as described in the maintenance section.
 - Limescale may be present in the water tank. Perform the descaling procedure.

7. SPECIFICATIONS

Brand	Tefal
Model Number	FV5735
Power / Wattage	2400 watts
Continuous Steam Output	Up to 40 g/min
Steam Boost	45 grams (as per product title, typically refers to steam boost)
Water Tank Capacity	270 ml
Soleplate Material	Durilium Airglide (Stainless Steel base)
Special Features	Anti-Drip System, Fast Heating
Product Dimensions	34 x 14 x 18 cm

Item Weight	1.3 Kilograms
-------------	---------------

8. WARRANTY AND SUPPORT

Specific warranty details and customer support contact information are not provided within this instruction manual. Please refer to the product packaging, purchase documentation, or the official Tefal website for warranty terms and customer service contacts in your region.

© 2023 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question