

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Soundcore](#) /

› [Anker Soundcore Flare 2 Bluetooth Speaker Instruction Manual](#)

## Soundcore Flare 2

# Anker Soundcore Flare 2 Bluetooth Speaker Instruction Manual

Model: A3165011-F0

## 1. INTRODUCTION

The Soundcore Flare 2 is a portable Bluetooth speaker designed to deliver 360-degree immersive sound with a beat-driven light show. It features IPX7 waterproof protection, PartyCast technology for linking multiple speakers, and customizable EQ settings via the Soundcore app. This manual provides instructions for the proper setup, operation, and maintenance of your Soundcore Flare 2 speaker.

## 2. WHAT'S IN THE BOX

- Soundcore Flare 2 Speaker
- USB-C Charging Cable
- Quick Start Guide

## 3. PRODUCT OVERVIEW

The Soundcore Flare 2 speaker features a cylindrical design with dual light rings at the top and bottom. Controls are typically located on the top surface for easy access.

# INTENSE 360° SOUND



Image: Anker Soundcore Flare 2 speaker showcasing its 360-degree sound capabilities with vibrant light rings.



Image: Close-up of the Soundcore Flare 2 speaker's base, highlighting the beat-driven light show with 24 rainbow LEDs and DSP technology.

## Key Features:

- **360° Immersive Sound:** Delivers powerful, bass-driven audio in all directions.
- **Beat-Driven Light Show:** Features dual light-rings that pulse and shine to the rhythm of your music.
- **IPX7 Waterproof:** Designed to withstand spills, rain, and submersion in water.
- **PartyCast Technology:** Allows linking over 100 Flare 2 speakers for synchronized sound and light.
- **12-Hour Playtime:** Extended battery life for prolonged listening.
- **Soundcore App Control:** Customize EQ settings and light effects via the dedicated app.

## 4. SETUP

### 4.1 Charging the Speaker

1. Connect the USB-C charging cable to the charging port on the speaker.

2. Connect the other end of the cable to a USB wall charger (not included).
3. The LED indicator will show charging status. A full charge typically takes approximately 3.5 hours.

## 4.2 Powering On/Off

- To power on, press and hold the power button for 2 seconds.
- To power off, press and hold the power button for 2 seconds again.

## 4.3 Bluetooth Pairing

1. When powered on, the speaker will automatically enter Bluetooth pairing mode. The Bluetooth indicator will flash blue.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Soundcore Flare 2" from the list of devices.
4. Once connected, the Bluetooth indicator will turn solid blue.

## 4.4 Soundcore App Connection

Download the Soundcore app from your device's app store to unlock additional features like EQ customization and light show control.

1. Ensure your Soundcore Flare 2 is powered on and connected to your device via Bluetooth.
2. Open the Soundcore app. It should automatically detect and connect to your speaker.

# SOUNDCORE APP

Customize lights,  
sound, and more.



Image: The Soundcore Flare 2 speaker next to a smartphone displaying the Soundcore app interface for customizing sound and lights.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Controls

- **Play/Pause:** Press the Play/Pause button once.
- **Volume Up/Down:** Press the '+' or '-' buttons.
- **Next Track:** Press the '+' button for 2 seconds.
- **Previous Track:** Press the '-' button for 2 seconds.

### 5.2 PartyCast Technology

PartyCast allows you to link multiple Soundcore Flare 2 speakers for a synchronized audio and light experience.

1. Ensure all Flare 2 speakers are powered on.
2. Connect one Flare 2 speaker to your device via Bluetooth (this will be the primary speaker).

3. On the primary speaker, press and hold the PartyCast button for 2 seconds. The light ring will flash white.
4. On the secondary Flare 2 speakers, press the PartyCast button once. They will search for the primary speaker.
5. Once connected, the PartyCast indicator on all speakers will turn solid white, and audio/lights will synchronize.

### 5.3 Light Modes

Press the Light button on the speaker to cycle through different light show modes. Further customization is available via the Soundcore app.

### 5.4 BassUp Feature

Press the BassUp button to activate or deactivate enhanced bass. The button will illuminate when BassUp is active.

## 6. MAINTENANCE

---

### 6.1 Cleaning

- Ensure the speaker is powered off and disconnected from any power source before cleaning.
- Use a soft, damp cloth to wipe the exterior of the speaker.
- Do not use abrasive cleaners or solvents.

### 6.2 Water Resistance (IPX7)

The Soundcore Flare 2 is IPX7 rated, meaning it can be submerged in up to 1 meter of water for 30 minutes. To maintain water resistance:

- Ensure the charging port cover is securely closed before exposure to water.
- After exposure to water, dry the speaker thoroughly before charging.
- Do not expose the speaker to saltwater or other chemicals.

# FULLY WATERPROOF



Image: The Soundcore Flare 2 speaker being splashed with water, demonstrating its IPX7 waterproof rating.

## 6.3 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- For long-term storage, charge the battery every 3-6 months to prolong its lifespan.

## 7. TROUBLESHOOTING

### 7.1 Speaker Not Powering On

- Ensure the battery is charged. Connect the speaker to a power source using the USB-C cable.
- Try pressing and holding the power button for a longer duration (e.g., 5 seconds).

### 7.2 Cannot Pair via Bluetooth

- Ensure the speaker is in Bluetooth pairing mode (flashing blue indicator).
- Make sure Bluetooth is enabled on your device.

- Move your device closer to the speaker and away from obstructions.
- Forget "Soundcore Flare 2" from your device's Bluetooth list and try pairing again.
- Restart both the speaker and your device.

### **7.3 No Sound or Poor Sound Quality**

- Check the volume level on both the speaker and your connected device.
- Ensure the speaker is within the Bluetooth range (up to 10 meters) of your device.
- Disable and re-enable Bluetooth on your device.
- If using the Soundcore app, check the EQ settings.

### **7.4 PartyCast Not Connecting**

- Ensure all speakers are Soundcore Flare 2 models.
- Make sure all speakers are within close proximity to each other.
- Follow the PartyCast pairing steps carefully, ensuring one speaker is designated as primary.

## **8. SPECIFICATIONS**

---



Image: Diagram showing the dimensions of the Soundcore Flare 2 speaker: 3.5 inches diameter and 6.31 inches height.

Feature	Specification
Model Name	Soundcore Flare 2
Model Number	A3165011-F0
Dimensions (D x W x H)	3.5"D x 3.5"W x 6.31"H
Item Weight	1.29 pounds
Connectivity Technology	Bluetooth, USB

Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Speaker Maximum Output Power	20 Watts
Audio Output Mode	360-degree sound
Playtime	Up to 12 Hours (varies by volume and light usage)
Water Resistance Level	IPX7 (Waterproof)
Power Source	Battery Powered (1 Lithium Metal battery included)
Charging Time	Approximately 3.5 hours
Frequency Response	50 Hz (lower limit)
Control Method	App, Buttons

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

The Soundcore Flare 2 speaker comes with a limited warranty. Please refer to the warranty card included in your product packaging or visit the official Soundcore website for detailed warranty terms and conditions.

### 9.2 Customer Support

For technical support, troubleshooting assistance, or any other inquiries, please visit the official Soundcore support website or contact their customer service team. You can typically find contact information on the Soundcore website or in your product's quick start guide.

- **Online Support:** Visit [us.soundcore.com/pages/support](https://us.soundcore.com/pages/support) (or your regional Soundcore support page).
- **Email Support:** Refer to the Soundcore website for specific email addresses.