

Whirlpool AKP3534HIX

Whirlpool 71L Built-in Convection Oven AKP3534HIX User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Whirlpool 71L Built-in Convection Oven, model AKP3534HIX. Please read these instructions carefully before using the appliance and keep them for future reference.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and safety of your built-in oven. Ensure that the installation area meets the specified dimensions and ventilation requirements.



Figure 1: Whirlpool Built-in Oven Installation Dimensions. This diagram illustrates the required cabinet and oven dimensions for proper installation. Key measurements include a minimum cabinet width of 560 mm, a minimum depth of 550 mm, and a height of 600 mm for the cabinet opening. The oven itself measures approximately 595 mm in width, 595 mm in height, and 564 mm in depth. Specific cut-out dimensions are detailed for a flush fit, including a maximum 30 mm gap at the bottom for ventilation and a 5.5 mm gap for the door hinge clearance, allowing for an 89-degree maximum door opening angle. All measurements are in millimeters.

Pre-Installation Checks

- Verify that the electrical supply matches the oven's requirements.
- Ensure the cabinet material can withstand temperatures up to 90°C.
- Confirm adequate ventilation around the appliance.

Mounting the Oven

1. Carefully slide the oven into the prepared cabinet opening.
2. Secure the oven to the cabinet using the provided screws through the designated mounting holes.
3. Connect the oven to the electrical supply, ensuring all connections are secure and compliant with local regulations.

OPERATING INSTRUCTIONS

Your Whirlpool AKP3534HIX oven offers various cooking functions designed for versatility and efficiency.

Control Panel Overview

The control panel features a function selector knob, a temperature selector knob, and a digital display for timer and settings. Refer to the specific markings on your appliance for detailed control identification.

Cooking Functions

- **Fan Forced Air Cooking System:** This function distributes hot air evenly throughout the oven cavity, allowing for simultaneous cooking of different dishes without flavor transfer. Pre-heating is often not required, saving time and energy.
- **Turbo Grill:** The Turbo Grill combines the grill element with the fan, boosting hot air circulation around the grill zone. This results in faster and more even cooking, providing a 'Split Roast effect' for items that are crisp on the outside and succulent inside.
- **Conventional Cooking:** Utilizes top and bottom heating elements for traditional baking and roasting.
- **Grill:** Ideal for browning, toasting, and grilling smaller items.
- **Defrost:** Gently thaws frozen food using the fan without heat.
- The oven also includes 5 auto cooking functions for pre-programmed settings for common dishes. Consult the full manual for details on these specific functions.

Setting the Timer

Use the digital display and associated buttons to set cooking duration or a delayed start time. The oven will automatically switch off or alert you upon completion.

MAINTENANCE

Regular cleaning and maintenance ensure the longevity and optimal performance of your oven.

Cleaning the Oven Interior

- Allow the oven to cool completely before cleaning.
- Wipe the interior with a damp cloth and mild detergent. Avoid abrasive cleaners or scourers.
- For stubborn stains, use a specialized oven cleaner according to its instructions.

Cleaning the Exterior

Clean the exterior surfaces with a soft cloth and warm soapy water. For stainless steel finishes, use a non-abrasive cleaner specifically designed for stainless steel.

Replacing the Oven Lamp

Ensure the oven is disconnected from the power supply. Unscrew the protective glass cover, replace the bulb with a new one of the same type and wattage, then reattach the cover.

TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions.

Problem	Possible Cause	Solution
Oven does not heat	No power supply; incorrect settings	Check circuit breaker; ensure oven is plugged in; verify function and temperature settings.

Problem	Possible Cause	Solution
Food not cooking evenly	Incorrect rack position; overloaded oven; dirty fan	Use recommended rack positions; avoid overcrowding; clean fan area.
Oven light not working	Bulb is faulty or loose	Replace or tighten the oven lamp bulb (refer to Maintenance section).

SPECIFICATIONS

Detailed technical specifications for the Whirlpool AKP3534HIX Built-in Convection Oven.

- **Model:** AKP3534HIX
- **Capacity:** 71 Litres
- **Installation Type:** Built-In
- **Heating Method:** Convection
- **Fuel Type:** Electric
- **Maximum Grill Power:** 2500 W
- **Type of Grill:** Turbo
- **Number of Auto Cooking Functions:** 5
- **Appliance Dimensions (HxWxD):** 595 mm x 595 mm x 564 mm
- **Colour:** Silver
- **Finish Type:** Polished
- **Timer Function:** Available

WARRANTY AND SUPPORT

For warranty information, technical support, or service requests, please refer to the warranty card included with your product or visit the official Whirlpool website. Keep your purchase receipt as proof of purchase.

Whirlpool Customer Service: [Visit Whirlpool India Support](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0867M1FQ7>

More documents and user manuals: <https://manuals.plus/>