

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MYHGRC](#) /

> [MYHGRC K-1028E Universal Air Conditioner Remote Control User Manual](#)

MYHGRC K-1028E

MYHGRC K-1028E Universal Air Conditioner Remote Control User Manual

Model: **K-1028E** | Brand: **MYHGRC**

1. INTRODUCTION

The MYHGRC K-1028E Universal Air Conditioner Remote Control is designed to replace damaged or missing air conditioner controllers. This remote is compatible with approximately 1000 types of air conditioners, covering most major brands available on the market. It offers a comprehensive set of functions to manage your air conditioning unit effectively.

2. SAFETY INFORMATION

- **Battery Safety:** Always insert batteries with correct polarity (+/-). Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period. Dispose of used batteries responsibly.
- **Handling:** Avoid dropping the remote control or exposing it to water, direct sunlight, or extreme temperatures.
- **Cleaning:** Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.

3. PACKAGE CONTENTS

- 1 x MYHGRC K-1028E Universal A/C Remote Control
- *Note: 2 x AAA batteries are required and not included.*

4. PRODUCT OVERVIEW

The K-1028E remote features a lightweight, ergonomic design made from durable ABS plastic with soft plastic buttons for comfortable use. It includes an LCD screen for displaying settings and codes.



This image displays the front of the MYHGRC K-1028E Universal Air Conditioner Remote Control, showing its LCD screen and all primary function buttons. The remote is white with clearly labeled buttons for various air conditioner operations.

Key Features:

- Temperature adjustment (Up/Down)
- Multiple air conditioning modes: Cool, Heat, Fan
- Adjustable wind speed and direction (Swing functions)
- Automatic shutdown timer (TIME ON/TIME OFF)
- Integrated micro LED flashlight for night lighting

Button Functions:

- **ON/OFF:** Powers the air conditioner on or off.
- **TEMP ▲/▼:** Adjusts the temperature setting.

- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan).
- **WIND:** Adjusts fan speed.
- **LIGHT:** Activates the built-in LED flashlight.
- **M.SWING / A.SWING:** Controls horizontal and vertical air swing.
- **TIME ON / TIME OFF:** Sets the timer for automatic power on/off.
- **F.Cool / F.Heat:** May activate specific fast cooling or heating modes depending on AC model.
- **Set:** Initiates programming mode.
- **OK:** Confirms programming or settings.
- **CLOCK:** Sets the remote's internal clock.

5. SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) 1.5V AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



This image shows the back of the MYHGRC K-1028E remote control with the battery cover removed, revealing the compartment for two AAA batteries. The polarity markings (+/-) are visible, indicating correct battery insertion.

6. OPERATING INSTRUCTIONS

Programming the Remote Control:

The remote control must be programmed to your specific air conditioner unit. Follow these steps carefully:

1. **Step 1: Initiate Code Search**

Point the remote control directly at your air conditioner unit. Press and hold the **SET** button for approximately 3 seconds. The code in the lower right corner of the remote's LCD screen will begin to flash.

2. **Step 2: Automatic Code Search**

Press the **SET** button again to start the automatic code search procedure. The numbers on the LCD screen will change automatically, cycling through the available codes (000 to 999).

3. **Step 3: Confirm Code**

Listen for a "beep" sound from your air conditioner. This indicates that a compatible code has been found. Immediately press the "OK" button on the remote control to save the code. The flashing code will stop, and the pairing is successful.

Manual Code Adjustment (Optional): If you prefer to adjust the code manually during Step 2, you can press the "TEMP ▲" or "TEMP ▼" buttons to cycle through codes one by one. Once your AC beeps, press "OK".

Important Note: Some air conditioners may have multiple compatible codes. If the first code found does not enable all desired functions, repeat the programming procedure to find an alternative code that offers full functionality.

Basic Functions After Programming:

- **Power On/Off:** Press the "ON/OFF" button.
- **Adjusting Temperature:** Use the "TEMP ▲" or "TEMP ▼" buttons.
- **Changing Modes:** Press the "MODE" button repeatedly to cycle through Cool, Heat, Fan, Dry, or Auto modes.
- **Adjusting Fan Speed/Direction:** Use the "WIND" button for fan speed and "M.SWING" / "A.SWING" for air direction.
- **Setting Timer:** Use "TIME ON" or "TIME OFF" buttons to set desired automatic operation times.
- **Using LED Light:** Press the "LIGHT" button to activate the small LED flashlight.

7. TROUBLESHOOTING

- **Remote not responding to AC:**
Ensure the remote is pointed directly at the AC unit. Check if the batteries are correctly inserted and have sufficient power. Re-program the remote using the steps in Section 6. Try different compatible codes if the first one doesn't work fully.
- **Remote loses programming:**
This can sometimes occur if batteries are removed or become very low. Re-program the remote following the instructions in Section 6. It is recommended to note down the working code for your AC unit.
- **Certain functions not working:**
Even if the AC beeps during programming, some functions might not be fully supported by that specific code. Repeat the programming process and try to find another compatible code for your AC model that enables all desired functions.
- **LCD screen is blank or dim:**
Replace the AAA batteries with new ones.

8. SPECIFICATIONS



This image illustrates the MYHGRC K-1028E remote control from front, side, and back views, with measurements indicating its dimensions: approximately 13cm in length, 2.5cm in thickness, and 5cm in width. This provides a clear understanding of the remote's physical size.

- **Model:** K-1028E
- **Control Distance:** Up to 10 meters (33 feet)
- **Power Type:** DC 3V
- **Power Supply:** 2 x 1.5V AAA batteries (not included)
- **Product Dimensions:** Approximately 13 cm (5.12 in) x 5 cm (1.97 in) x 2 cm (0.79 in)
- **Product Weight:** Approximately 12g (0.4 oz)
- **Material:** ABS Plastic
- **Special Feature:** Universal compatibility with 1000+ AC models

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your MYHGRC K-1028E Universal Air Conditioner Remote Control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty details, as these may vary.