

Manuals.plus /

› JBL /

› JBL Boombox 2 Portable Bluetooth Speaker Instruction Manual

## JBL JBLBOOMBOX2BLKAM

# JBL Boombox 2 Portable Bluetooth Speaker Instruction Manual

Model: JBLBOOMBOX2BLKAM

Brand: JBL

## 1. INTRODUCTION

---

The JBL Boombox 2 is a powerful, portable Bluetooth speaker designed to deliver monstrous bass and rich sound for extended periods. With its robust design and IPX7 waterproof rating, it is suitable for various indoor and outdoor environments. This manual provides essential information for setting up, operating, and maintaining your JBL Boombox 2.

### Key Features:

- Powerful JBL Original Pro Sound and Monstrous Bass
- Portable Design with Iconic Grip Handle
- Up to 24 Hours of Playtime
- Wireless Bluetooth Streaming
- IPX7 Waterproof Rating
- JBL PartyBoost for Pairing Multiple Speakers
- Built-in Powerbank for Device Charging

## 2. PACKAGE CONTENTS

---

Ensure all items are present in the package:

- 1 x JBL Boombox 2 Speaker
- 1 x JBL branded power adaptor
- 1 x Quick start guide
- 1 x Safety sheet
- 1 x Warranty card

## 3. SETUP

### 3.1 Charging the Speaker

Before first use, fully charge the JBL Boombox 2. Connect the provided power adaptor to the speaker's charging port and then to a power outlet. The battery indicator lights will show the charging status. A full charge takes approximately 6.5 hours.



Image: Front view of the JBL Boombox 2 speaker, showcasing its design and controls.

### 3.2 Power On/Off

Press the power button located on the top panel to turn the speaker on or off. A sound indicator will confirm the action.



Image: Close-up of the top panel controls, including the power button, Bluetooth button, and volume controls.

### 3.3 Bluetooth Pairing

1. Turn on the JBL Boombox 2.
2. Press the Bluetooth button on the speaker. The Bluetooth indicator will flash, indicating it's in pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for "JBL Boombox 2" in the list of available devices.
4. Select "JBL Boombox 2" to connect. Once connected, the Bluetooth indicator will remain solid.

## 4. OPERATING INSTRUCTIONS

### 4.1 Audio Playback

- **Play/Pause:** Press the Play button once.
- **Next Track:** Press the Play button twice.
- **Previous Track:** Press the Play button three times.
- **Volume Control:** Use the '+' and '-' buttons on the speaker or your connected device to adjust volume.

### 4.2 JBL PartyBoost

JBL PartyBoost allows you to connect two or more JBL PartyBoost compatible speakers together for a stereo sound experience or to amplify the sound for a larger area.

1. Ensure both speakers are powered on and in Bluetooth pairing mode.
2. Press the PartyBoost button on both speakers. They will automatically connect.
3. Once connected, the PartyBoost button will illuminate. You can then play music from your device through the linked speakers.

### 4.3 Powerbank Function

The JBL Boombox 2 features a built-in powerbank. Connect your mobile device to the USB-A port on the speaker to charge it. This feature allows you to keep your devices powered while enjoying music.



Image: The JBL Boombox 2 highlighting its 24-hour playtime capability.

## 5. MAINTENANCE

### 5.1 Cleaning

To clean the speaker, use a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the charging port cover is securely closed before cleaning or exposing to water.

## 5.2 Waterproofing (IPX7)

The JBL Boombox 2 is IPX7 waterproof, meaning it can be submerged in water up to 1 meter (3.3 feet) for up to 30 minutes. Ensure all cable connections are removed and the protective cover is tightly sealed before exposing the speaker to water. Do not expose to salt water or other liquids besides fresh water.



Image: The JBL Boombox 2 shown on a beach, illustrating its IPX7 waterproof capability.

## 5.3 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to at least 50% to preserve battery life.

## 6. TROUBLESHOOTING

If you encounter issues with your JBL Boombox 2, refer to the following common solutions:

Problem	Possible Cause / Solution
No Power	Battery is depleted. Connect to power adaptor and charge. Ensure power outlet is functional.
No Sound	Volume is too low. Increase volume on speaker and connected device. Ensure device is properly paired via Bluetooth.
Bluetooth Disconnection	Device is out of range. Move device closer to speaker. Obstructions may interfere with signal. Re-pair the device.
Cannot Pair	Speaker is not in pairing mode. Press the Bluetooth button. Ensure no other devices are connected. Clear Bluetooth history on your device and try again.
PartyBoost Not Working	Ensure both speakers are JBL PartyBoost compatible. Press the PartyBoost button on both speakers simultaneously.

For more detailed troubleshooting, please refer to the official [Troubleshooting Guide \(PDF\)](#) or the [User Guide \(PDF\)](#).

## 7. SPECIFICATIONS

Feature	Detail
Model Name	JBL Boombox 2
Speaker Type	Portable Bluetooth Speaker
Connectivity Technology	Bluetooth, Wired
Wireless Communication Technology	Bluetooth
Battery Life	24 Hours
Charging Time	6.5 Hours
Water Resistance Level	IPX7 Waterproof
Speaker Maximum Output Power	160 Watts
Frequency Response	20 KHz
Product Dimensions	7.9"D x 19.1"W x 10.1"H
Item Weight	13 Pounds
Material	Plastic
Power Source	Battery Powered
Woofer Diameter	4 Inches
Included Components	1 x JBL Boombox 2, 1 x JBL branded power adaptor, 1 x Quick start guide, 1 x Safety sheet, 1 x Warranty card

## 8. WARRANTY & SUPPORT

The JBL Boombox 2 comes with a Limited Warranty. Please refer to the included Warranty Card for specific terms and conditions.

For further support, product registration, or to download the full user manual, visit the official JBL website or contact JBL customer service.

You can also access the official [User Guide \(PDF\)](#) for comprehensive information.