

[Manuals.plus](#) /

› [TENMOS](#) /

› TENMOS T302 Wireless Keyboard Mouse Combo User Manual

TENMOS T302

TENMOS T302 Wireless Keyboard Mouse Combo User Manual

Model: T302

1. PRODUCT OVERVIEW

The TENMOS T302 Wireless Keyboard Mouse Combo provides a convenient and efficient input solution for your computer. This set includes a 2.4GHz rechargeable wireless keyboard with retro round keycaps and a silent optical LED wireless mouse. Designed for ease of use and comfort, it is suitable for various computing environments.



Image 1.1: The TENMOS T302 Wireless Keyboard Mouse Combo, featuring a pink keyboard with round keycaps and a matching pink mouse with LED lighting.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1x Wireless Keyboard
- 1x Wireless Mouse
- 1x USB Charging Cable
- 1x User Manual (this document)
- 1x Nano USB Receiver (stored at the bottom of the mouse)

3. SETUP INSTRUCTIONS

3.1 Initial Charging

Before first use, it is recommended to fully charge both the keyboard and mouse for approximately 2 hours. Use the provided USB charging cable to connect the devices to a computer's USB port or a compatible USB charger.

- The blue light next to the mouse scroll wheel and the keyboard charging indicator will illuminate during charging.
- The indicator lights will turn off once the devices are fully charged.

3.2 Connecting the Devices

The keyboard and mouse connect wirelessly to your computer using a single Nano USB receiver.

1. **Locate the Nano USB Receiver:** The receiver is stored in a compartment at the bottom of the wireless mouse. Gently slide open the cover to retrieve it.
2. **Insert the Receiver:** Plug the Nano USB receiver into an available USB port on your computer.
3. **Power On:** Turn on the keyboard and mouse using their respective power switches. The devices should automatically connect to your computer. No additional drivers are typically required for most operating systems.



Image 3.2.1: The Nano USB receiver, which connects both the keyboard and mouse to your computer.

2.4G • RECHARGEABLE

Keyboard and Mouse Combo



Rechargeable Battery



Free Charging Cable



Auto Sleep



Image 3.2.2: Illustration of the rechargeable battery, charging cable, and auto-sleep feature for the keyboard and mouse combo.

4. OPERATING INSTRUCTIONS

4.1 Keyboard Functions

The keyboard features a standard QWERTY layout with additional function keys for quick access to common commands.

- **Function Keys (F1-F12):** These keys can perform multimedia and system functions when pressed in combination with the **Fn** key. Refer to the keycap legends for specific functions (e.g., volume control, media playback).
- **Retro Round Keycaps:** The design provides a distinct tactile typing experience.



Typewriter Design



2.4G Wireless



Floating Keycap



Multimedia Keys



Lasting Battery



Accurate Tracking



Image 4.1.1: Close-up of the TENMOS T302 keyboard highlighting its retro round keycaps and compact design.



Image 4.1.2: Detail of the retro typewriter-style keys, showing their individual design.

4.2 Mouse Functions

- **DPI Adjustment:** The mouse features a DPI switch on its top surface. Press this button to cycle through 3 DPI levels (800-1200-1600) to adjust cursor sensitivity.
- **LED Lighting:** The mouse includes 7 soothing LED lights that change color randomly, providing visual feedback and an aesthetic effect.
- **Silent Clicking:** The mouse is designed for quiet operation, minimizing click noise.



Image 4.2.1: The TENMOS T302 mouse displaying its colorful breathing LED light feature and highlighting its silent click capability.

5. MAINTENANCE

5.1 Cleaning

To maintain the performance and appearance of your keyboard and mouse:

- Use a soft, dry cloth to wipe down the surfaces.
- For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the device.
- Avoid using harsh chemicals or abrasive cleaners.

5.2 Battery Care

The built-in rechargeable batteries are designed for long-term use. To prolong battery life:

- Charge the devices when the battery indicator suggests low power.
- Avoid completely draining the battery frequently.

- If not in use for an extended period, charge the devices every few months to prevent deep discharge.

6. TROUBLESHOOTING

If you encounter issues with your TENMOS T302 combo, refer to the following common solutions:

- **Devices not responding:**
 - Ensure both the keyboard and mouse are powered on.
 - Check if the Nano USB receiver is securely plugged into a working USB port on your computer.
 - Verify that the devices are charged. Recharge if necessary.
 - Try plugging the USB receiver into a different USB port.
 - Restart your computer.
- **Intermittent connection:**
 - Ensure there are no large metallic objects or other wireless devices causing interference between the devices and the receiver.
 - Move the devices closer to the USB receiver.
- **Mouse cursor erratic or not moving:**
 - Clean the optical sensor at the bottom of the mouse.
 - Ensure you are using the mouse on a suitable surface (non-reflective, non-transparent).
 - Adjust the DPI setting using the DPI button on the mouse.
- **Keyboard keys not working:**
 - Ensure the keyboard is powered on and connected.
 - Check for any debris under the keycaps.
- **Charging issues:**
 - Ensure the charging cable is properly connected to both the device and the power source.
 - Try a different USB port or charging adapter.
 - Verify the charging indicator light is on during charging.
- **Compatibility with Mac OS:**
 - Please note that this product is **not fully compatible with Mac OS systems**. Some function keys or shortcut commands may not work as intended. Basic typing and mouse functionality should operate.

7. SPECIFICATIONS

Feature	Detail
Brand	TENMOS
Model Number	T3201
Connectivity Technology	2.4GHz Radio Frequency, USB
Special Feature	Rechargeable

Compatible Devices	Laptop, Desktop PC (Windows 2000, XP, Vista, Win 7, Win 8, Win 10)
Mouse DPI Levels	800-1200-1600
Keyboard Key Type	Retro Round Keycaps
Battery Type	Built-in Rechargeable (2 Product Specific batteries included)
Item Weight	1.74 pounds
Package Dimensions	17.83 x 6.14 x 1.65 inches
Color	Pink



Image 7.1: Dimensions of the keyboard (301mm x 148mm) and mouse (115mm x 58mm), along with compatibility icons for laptop, desktop PC, and Mac/Windows.

8. WARRANTY AND SUPPORT

TENMOS products are manufactured with quality and performance in mind. For specific warranty information and customer support, please refer to the warranty card included with your purchase or visit the official TENMOS website. Keep your purchase receipt for warranty claims. For further assistance, you may contact TENMOS customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question