

Manuals.plus /

› Technical Precision /

› Technical Precision Replacement Battery for Radio Shack 43-337 Cordless Phone

Technical Precision 43-337

Technical Precision Replacement Battery for Radio Shack 43-337 Cordless Phone

User Instruction Manual

1. PRODUCT OVERVIEW

This manual provides essential information for the safe and effective use of your Technical Precision replacement battery for Radio Shack 43-337 cordless phones. Please read these instructions carefully before installation and retain for future reference.



Image 1.1: Technical Precision Replacement Battery. This image displays the replacement battery, which is designed to power compatible Radio Shack 43-337 cordless phone models.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the battery and device:

- Do not disassemble, crush, puncture, or short-circuit the battery.
- Do not expose the battery to high temperatures (above 60°C / 140°F) or direct sunlight.
- Do not dispose of the battery in fire or water.
- Keep the battery away from children and pets.

- Use only the original or approved charging equipment for your cordless phone.
- If the battery leaks, avoid contact with skin and eyes. Rinse immediately with plenty of water and seek medical attention.
- Dispose of used batteries according to local regulations.

3. INSTALLATION (SETUP)

Follow these steps to correctly install the replacement battery into your cordless phone:

1. **Disconnect Power:** Ensure your cordless phone base unit is unplugged from the wall outlet and the handset is turned off.
2. **Remove Old Battery:** Locate the battery compartment on the back of your cordless phone handset. Open the compartment cover (usually by sliding or pressing a latch). Carefully disconnect the old battery from its connector and remove it.
3. **Insert New Battery:** Connect the new Technical Precision battery to the phone's battery connector. Ensure the connector is firmly seated.
4. **Position Battery:** Place the new battery into the compartment, ensuring it fits snugly without forcing.
5. **Close Compartment:** Replace the battery compartment cover, ensuring it clicks securely into place.
6. **Reconnect Power:** Plug your cordless phone base unit back into the wall outlet.

4. CHARGING AND INITIAL USE

For optimal performance, follow these charging guidelines:

1. **Initial Charge:** After installing the new battery, place the handset on its charging cradle. Allow the battery to charge continuously for at least 12-16 hours before its first use, even if the phone indicates a full charge sooner. This "conditioning" charge helps maximize battery life and performance.
2. **Regular Charging:** For daily use, return the handset to the charging cradle when not in use. This ensures the battery remains charged and ready.
3. **Battery Indicator:** Refer to your cordless phone's original user manual for specific battery level indicators and charging status.

5. MAINTENANCE

Proper maintenance extends the life of your battery:

- **Cleaning:** Keep the battery contacts and the phone's charging contacts clean and free of dust or debris. Use a dry, soft cloth for cleaning.
- **Storage:** If storing the battery for an extended period, charge it to about 50% capacity and store it in a cool, dry place. Recharge it every 3-6 months to prevent deep discharge.
- **Temperature:** Avoid exposing the battery to extreme temperatures, both hot and cold, as this can degrade performance and shorten its lifespan.

6. TROUBLESHOOTING

If you experience issues with your new battery, consider the following:

Problem	Possible Cause	Solution
Phone does not power on after battery installation.	Battery not properly connected or not charged.	Ensure battery connector is secure. Place handset on charger for initial 12-16 hour charge.
Short talk time or standby time.	Battery not fully conditioned or nearing end of life.	Perform a full 12-16 hour initial charge. If issue persists after several charge/discharge cycles, the battery may need replacement.
Charging indicator not working.	Dirty contacts or faulty charging cradle/phone.	Clean battery and phone charging contacts. Test with another compatible battery or phone if possible.

7. SPECIFICATIONS

Key specifications for the Technical Precision Replacement Battery:

- **Model:** Replacement for Radio Shack 43-337
- **Brand:** Technical Precision
- **Type:** Cordless Phone Battery
- **Reusability:** Rechargeable
- **Unit Count:** 1 Count
- *Note: Specific voltage and mAh capacity may vary. Refer to your original phone's specifications for compatibility.*

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Technical Precision replacement battery, please refer to the seller's policy or contact Technical Precision directly through their official channels. Keep your purchase receipt as proof of purchase.

This battery is not manufactured by Radio Shack.