

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal EY701D Easy Fry XXL Hot Air Fryer Instruction Manual

Tefal EY701D

Tefal EY701D Easy Fry XXL Hot Air Fryer Instruction Manual

Brand: Tefal | Model: EY701D

1. INTRODUCTION

The Tefal EY701D Easy Fry XXL Hot Air Fryer is designed to provide a healthy and convenient way to prepare a variety of meals. Utilizing advanced hot air technology, this appliance allows you to fry, roast, grill, and bake with little to no added oil, resulting in crispy and delicious food. This manual provides essential information for the safe and efficient use of your new appliance.



Image: The Tefal EY701D Easy Fry XXL Hot Air Fryer, showcasing its design and a basket filled with cooked fries. Key features include an XXL capacity suitable for up to 8 portions, 8 pre-set automatic cooking programs, and an intuitive digital touchscreen for easy operation. The appliance is also designed for energy efficiency and ease of cleaning.

KNUSPRIGES & GESUNDES FRITTIEREN MIT WENIG ODER OHNE ÖL



**SPARE BIS ZU
70%
ENERGIE***
mit Heißluftfritteusen von
Tefal

* vs. herkömmlichen Backöfen mit Energieklasse A.
Im Jahr 2022 durchgeführte Tests mit tiefgefrorenen Pommes frites.

**Außerdem schneller und energiesparender als ein
herkömmlicher Backofen mit Energieklasse A**

Image: The air fryer highlighting its ability to produce crispy and healthy fried food with minimal oil.

2. SETUP AND FIRST USE

2.1 Unpacking

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any stickers, promotional materials, or labels from the appliance.
3. Retain the packaging for future storage or transport.

2.2 Initial Cleaning

- Wipe the main unit with a damp cloth.
- Wash the removable basket and pan with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
- Ensure all parts are dry before assembly.

2.3 Placement and Power Connection

- Place the appliance on a stable, heat-resistant, and level surface, away from heat sources or water.
- Ensure adequate air circulation around the appliance; leave at least 10 cm of space on all sides.
- Plug the power cord into a grounded electrical outlet.

3. OPERATING INSTRUCTIONS

The Tefal EY701D features a user-friendly digital touchscreen interface for selecting cooking programs, adjusting temperature, and setting timers.



Image: A hand interacting with the digital touchscreen, showing the intuitive controls for operation.

3.1 Basic Operation

1. Place food in the cooking basket. Do not overfill.
2. Slide the basket and pan assembly back into the appliance until it clicks into place.

3. Press the power button to turn on the appliance.
4. Select a pre-set program or manually adjust temperature and time.

3.2 Pre-set Programs

The appliance includes 8 automatic cooking programs for optimal results:



8 AUTOMATISCHE KOCHMENÜS FÜR OPTIMALE ERGEBNISSE JEDES MAL

KOCH DIR DEINE HEIMAT
mit Tefal & Nelson Müller
Mehr Infos unter www.tefal.de

Pommes frites, Schweinsrippen, Fisch, Shrimps, Kuchen, Snacks, Burger und Hähnchen

Image: The air fryer displaying the 8 automatic cooking menus, including fries, cutlets, shrimp, cake, pizza, fish, grill, and roast.

- Fries
- Cutlets
- Shrimp
- Cake
- Pizza
- Fish
- Grill
- Roast

To use a pre-set program, simply touch the corresponding icon on the digital display. The appliance will automatically set the recommended temperature and cooking time.

3.3 Manual Settings

- **Temperature Control:** Adjust the temperature from 80°C to 200°C using the temperature control buttons.
- **Timer:** Set the cooking time up to 60 minutes using the timer control buttons. The appliance features an automatic shut-off function with an audible signal when the timer expires.

3.4 Cooking Process

- Press the Start/Stop button to begin cooking.
- For even cooking, especially with larger quantities or certain foods, shake the basket halfway through the cooking time. The appliance can be paused by pulling out the basket and will resume when reinserted.
- Once cooking is complete, carefully remove the basket and pan. Use heat-resistant tongs to remove food.

4. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your Tefal Easy Fry XXL.

4.1 Cleaning the Appliance

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads.
3. The removable basket and pan are dishwasher safe. However, to preserve the non-stick coating, hand washing with warm soapy water and a non-abrasive sponge is recommended.
4. Do not use metal utensils or harsh detergents, as these can damage the non-stick coating.
5. Clean the interior of the appliance with a damp cloth if necessary.

4.2 Storage

Ensure the appliance is clean and dry before storing. Store it in a cool, dry place, preferably in its original packaging.

5. TROUBLESHOOTING

If you encounter any issues with your Tefal EY701D, refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the main power switch (if applicable) is on.
- **Food is not cooked evenly:** Ensure the basket is not overfilled. Shake the basket halfway through cooking for better circulation. Adjust cooking time or temperature if needed.
- **Food is not crispy:** Ensure the temperature is set correctly. For some foods, a small amount of oil can be lightly sprayed for extra crispiness. Do not overfill the basket.
- **White smoke coming from the appliance:** This is usually caused by fat residue from previous use or excessive oil on the food. Clean the basket and pan thoroughly. Ensure no food particles are stuck in the heating element.
- **Appliance emits an unusual smell:** During first use, a slight odor may occur as manufacturing residues burn off. This is normal. If the smell persists or is strong, unplug the appliance and contact customer support.

6. PRODUCT SPECIFICATIONS

Detailed technical specifications for the Tefal EY701D Easy Fry XXL Hot Air Fryer:

Feature	Specification
Brand	Tefal
Model Number	EY701D
Color	Stainless Steel
Product Dimensions (L x W x H)	27.8 x 33.8 x 33.3 cm
Food Capacity	1.6 Kilograms
Volume Capacity	6 Liters
Power	1850 Watts
Voltage	220 Volts
Material	Metal
Noise Level	44 dB
Special Features	Temperature Control (80°C to 200°C)
Item Weight	5.6 Kilograms
Recommended Uses	Bake, Grill, Roast



Image: The air fryer with its key dimensions (width and height) indicated for reference.

7. WARRANTY INFORMATION

Tefal products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Tefal website. The warranty typically covers manufacturing defects for a specified period from the date of purchase.

8. CUSTOMER SUPPORT

For further assistance, product registration, or to find authorized service centers, please visit the official Tefal website or contact their customer service department. Contact details can usually be found in the product packaging or on the official website.

Official Tefal Website: www.tefal.com

