

[Manuals.plus](#) /

> [Tefal](#) /

> Tefal FZ7738 ActiFry Genius+ Air Fryer Instruction Manual

Tefal FZ7738

Tefal FZ7738 ActiFry Genius+ Air Fryer Instruction Manual

MODEL: FZ7738

1. INTRODUCTION

Thank you for choosing the Tefal FZ7738 ActiFry Genius+ Air Fryer. This appliance is designed to provide a healthy way to enjoy your favorite fried foods with little to no oil. Its intelligent features, including automatic stirring and precise temperature control, ensure consistent and delicious results. Please read this manual carefully before using the appliance for the first time and keep it for future reference.



Image 1.1: The Tefal FZ7738 ActiFry Genius+ Air Fryer, shown with a bowl of golden fries, a recipe book, and a measuring spoon for oil, illustrating its core function for healthy frying.

2. SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.

- Always place the appliance on a stable, heat-resistant surface, away from water splashes.
- Do not immerse the appliance body, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Keep children and unauthorized persons away from the appliance during operation.
- Do not touch hot surfaces. Use handles or knobs. The cooking pan and lid become very hot during and after use.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer, as this may cause injuries.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

3. PRODUCT OVERVIEW

Components

- Lid (removable)
- Control Panel with Digital Display
- Cooking Pan (removable)
- Automatic Stirring Arm (removable)
- Handle
- Air Outlet
- Measuring Spoon for Oil

Key Features

- **9 Automatic Programs:** Pre-set cooking programs for various dishes including fries, coated snacks, meatballs, vegetables, chicken, desserts, and specific 'One Pot' settings.
- **Intelligent Temperature Control:** Automatically adjusts cooking temperature for optimal results.
- **High-Speed Airflow:** Ensures faster cooking and crispier textures.
- **Automatic Stirring Arm:** Gently stirs ingredients during cooking, eliminating the need for manual shaking and ensuring even cooking.
- **Low Oil Cooking:** Achieves crispy results with minimal or no added oil, reducing fat content by up to 99%.
- **Easy Cleaning:** Removable parts are dishwasher safe.

9 INTELLIGENTE PROGRAMME ZUM KOCHEN EINER UNBEGRENZTEN ANZAHL VON REZEPTEN



99% WENIGER
ZUGABE VON
FETT*



AUTOMATISCHES RÜHREN:
FÜR EIN NOCH
KNUSPRIGERES
ENDERGEBNIS



INTELLIGENTE
TEMPERATURREGULIERUNG



ENDLOS VIELE
REZEPTE



Im Vergleich zu 700 g Tiefkühlpommes, die in anderen Heißluftfritteusen von Tefal zubereitet wurden. 99% weniger Fett: 1 kg frische Pommes frites frittiert mit 14 ml Öl bis zu einem Gewichtsverlust von -55% im Vergleich zu traditionellen Fritteusen mit 2 l Öl

Image 3.1: An infographic highlighting the core benefits and features of the ActiFry Genius+, such as minimal oil usage, automatic stirring, and intelligent temperature control.

4. SETUP

1. **Unpack:** Carefully remove the appliance and all accessories from the packaging. Remove any protective films or stickers.
2. **Initial Cleaning:** Before first use, wash the cooking pan, stirring arm, and lid in warm, soapy water or in a dishwasher. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the ActiFry Genius+ on a flat, stable, heat-resistant surface. Ensure there is adequate space around the appliance for proper air circulation (at least 10 cm from walls or other appliances). Do not place it directly under a wall cabinet.
4. **Assemble:** Insert the stirring arm into the center of the cooking pan. Place the cooking pan into the main unit. Close the lid securely.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance is now ready for use.

5. OPERATING INSTRUCTIONS

Control Panel Overview



Image 5.1: A detailed view of the ActiFry Genius+ control panel, showing the digital display and various function buttons.

- **Digital Display:** Shows cooking time, program selection, and temperature.
- **Program Selection Buttons:** Icons representing the 9 automatic cooking programs.
- **Start/Pause Button:** Initiates or temporarily stops the cooking cycle.
- **Timer/Temperature Adjustment Buttons (+/-):** Used to adjust cooking time or temperature in manual mode.
- **Stirring Arm On/Off Button:** Activates or deactivates the stirring arm.

Cooking with Automatic Programs

1. Prepare your ingredients and place them evenly in the cooking pan.
2. If required by the recipe, add a small amount of oil using the provided measuring spoon.
3. Close the lid securely.
4. Select one of the 9 automatic programs by pressing the corresponding icon on the control panel. The display will show the default cooking time and temperature for that program.
5. Press the Start/Pause button to begin cooking. The stirring arm will activate automatically (unless deactivated).
6. The appliance will automatically stop and beep when the cooking cycle is complete.

Manual Mode

1. Place ingredients in the cooking pan and close the lid.
2. Press the manual mode button (often represented by a chef's hat icon).
3. Use the +/- buttons to set your desired cooking time and temperature.
4. Press the Start/Pause button to begin cooking.

**HIGH SPEED AIRFLOW: BIS ZU 2X
SCHNELLERE GARERGEBNISSE***



***Im Vergleich zu 700 g gefrorenen Pommes frites, die in anderen Tefal Heißluftfritteusen zubereitet werden.**

Image 5.2: The ActiFry Genius+ with its lid open, showcasing chicken pieces cooking inside, surrounded by a variety of prepared dishes.

WENIG BIS GAR KEIN ÖL - FRITTIEREN MIT 99% WENIGER FETT



Image 5.3: Demonstrating the minimal oil requirement, a hand adds a small amount of oil to fries in the ActiFry Genius+ cooking pan.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your ActiFry Genius+.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool down completely before disassembling or cleaning.
2. **Dishwasher Safe Parts:** The lid, cooking pan, and stirring arm are dishwasher safe. For best results, place them on the top rack of your dishwasher.
3. **Hand Washing:** If washing by hand, use warm water and a non-abrasive sponge with dish soap. Rinse thoroughly and dry completely.
4. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water.
5. **Air Outlet:** Ensure the air outlet at the back of the appliance is free from food debris. Use a soft brush if necessary.

6. **Storage:** Once clean and dry, store the appliance in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; lid not closed properly.	Check power cord connection; test outlet with another appliance; ensure lid is securely closed.
Food not cooking evenly.	Stirring arm not installed; too much food in the pan; stirring arm blocked.	Ensure stirring arm is correctly installed; do not overload the pan; check for obstructions around the stirring arm.
Food not crispy enough.	Too much moisture in food; insufficient cooking time/temperature; too much oil.	Pat food dry before cooking; increase cooking time or temperature; use recommended amount of oil.
Smoke coming from the appliance.	Grease residue from previous use; cooking fatty food.	Clean the appliance thoroughly; ensure proper ventilation. If smoke persists, unplug immediately.

8. SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	FZ7738
Power	1500 Watts
Capacity	1.2 Kilograms (for food)
Dimensions (L x W x H)	43.3 x 30.3 x 23.8 cm
Weight	1 Kilogram
Material	Plastic
Special Feature	Temperature Control, Automatic Stirring Arm
Voltage	230 Volts

9. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or any questions regarding your Tefal FZ7738 ActiFry Genius+ Air Fryer, please contact Tefal customer support. Contact information can typically be found on the official Tefal website or in

the documentation provided with your appliance.

Always ensure you have your model number (FZ7738) and proof of purchase available when contacting support.

© 2025 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B086CV1LX5>

More documents and user manuals: <https://manuals.plus/>