

Hisense 58R6E

Hisense 58-inch Class 4K Smart LED TV Model 58R6E User Manual

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Hisense 58-inch Class 4K Smart LED TV, Model 58R6E. This television features 4K Ultra High Definition (UHD) resolution, High Dynamic Range (HDR) support, and the integrated Roku TV operating system, offering a wide array of streaming content and smart functionalities. Please read these instructions carefully to ensure proper use and to maximize your viewing experience.

WHAT'S IN THE BOX

Before proceeding with the setup, please verify that all components are present:

- Hisense 58-inch Class 4K Smart LED TV (Model 58R6E)
- TV Stand (2 pieces)
- Remote Control (Roku TV remote)
- Power Cord
- Quick Start Guide
- Screws for Stand Attachment

SETUP

1. Attaching the TV Stand

Carefully place the TV screen-down on a soft, clean surface to prevent scratches. Align the stand pieces with the mounting holes on the bottom of the TV. Secure the stand using the provided screws. Ensure the stand is firmly attached before placing the TV upright.

2. Connecting Power

Plug the power cord into the TV's power input, then plug the other end into a standard electrical outlet. The

TV will enter standby mode.

3. Initial Power-On and Guided Setup

Press the power button on the remote control to turn on the TV. The Roku TV guided setup will appear on the screen. Follow the on-screen instructions to:

- Select your language.
- Connect to your Wi-Fi network.
- Activate your Roku account (a free account is required for full functionality).
- Scan for local over-the-air channels (if an antenna is connected).

4. Connecting External Devices

Your Hisense Roku TV includes multiple input ports for connecting external devices such as cable boxes, game consoles, Blu-ray players, and sound systems. Use HDMI cables for optimal picture and sound quality. Refer to the port labels on the back of your TV for correct connections.

OPERATING THE TV

1. Roku TV Home Screen Navigation

The Roku TV interface is designed for ease of use. The main home screen provides access to all your entertainment options.



This image illustrates the main home screen of the Hisense Roku TV. On the left, a navigation menu shows options like Home, Featured Free, My Feed, Search, Streaming Channels, and Settings. The main area displays large tiles for different inputs such as Cable TV, Game console, and Antenna, along with popular streaming services like Netflix, Vudu, YouTube, Pandora, ESPN, and Hulu. The top right corner indicates the time and an 'HDR' badge, signifying High Dynamic Range content support. The bottom banner displays 'Hisense • Roku TV' and '4K UHD'.

Use the directional pad on your Roku remote to navigate the menu on the left and the application tiles on

the right. Press the **OK** button to select an item.

- **Home:** Returns you to the main home screen.
- **Streaming Channels:** Access your installed streaming applications.
- **Settings:** Adjust TV picture, sound, network, and system settings.

2. Accessing Inputs

From the home screen, select the corresponding tile for your connected device:

- **Cable TV:** For your cable or satellite box.
- **Game console:** For gaming systems.
- **Antenna:** For over-the-air broadcast channels.

3. Using Streaming Applications

Your Roku TV comes pre-loaded with popular streaming services and allows you to add many more from the Roku Channel Store. Simply select the application tile (e.g., Netflix, YouTube, Hulu) from the home screen to launch it. An active internet connection is required for streaming.

4. HDR Functionality

The TV supports High Dynamic Range (HDR) content, which provides enhanced contrast and a wider range of colors. When HDR content is detected, an 'HDR' badge may appear on the screen, indicating that the TV is displaying content in HDR mode.

MAINTENANCE

Cleaning the TV Screen

To clean the screen, first turn off the TV and unplug the power cord. Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (avoiding harsh chemicals or abrasive materials) and wipe carefully. Do not spray liquid directly onto the screen.

General Care

Keep the TV in a well-ventilated area, away from direct sunlight, heat sources, and excessive dust. Avoid placing heavy objects on the TV or blocking ventilation openings.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common solutions:

- **No Power:** Ensure the power cord is securely plugged into both the TV and the electrical outlet. Try a different outlet.
- **No Picture/Sound:** Verify that the correct input source is selected on the Roku TV home screen. Check all cable connections to external devices. For no sound, ensure volume is not muted or too low.
- **Poor Picture Quality:** Check the resolution of the content being played. For streaming, ensure a stable internet connection. Adjust picture settings in the TV's menu.

- **Wi-Fi Connection Issues:** Go to **Settings > Network > Set up connection** to re-establish your Wi-Fi connection. Ensure your router is working correctly and within range.
- **Remote Control Not Working:** Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV's IR sensor.

For more detailed troubleshooting, visit the Hisense support website or consult the full Roku TV user guide available online.

SPECIFICATIONS

| Feature | Specification |
|--------------------------------|-----------------------------|
| Model Name | 58R6E |
| Screen Size | 58 Inches (148 cm diagonal) |
| Resolution | 4K UHD (2160P) |
| Display Technology | LED |
| Supported Internet Services | Roku TV |
| Connectivity Technology | Wi-Fi |
| Aspect Ratio | 16:9 |
| Product Dimensions (L x W x H) | 51.2 x 9.6 x 32.3 inches |
| Item Weight | 34.9 pounds |
| Manufacturer | Hisense |

WARRANTY AND SUPPORT

Your Hisense TV is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, service inquiries, or to access additional resources, please visit the official Hisense support website or contact their customer service department. Keep your purchase receipt and product serial number handy for any warranty claims.