

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BoxWave](#) /
- › [BoxWave AccuPoint Active Stylus User Manual for Onyx Boox M96](#)

## BoxWave AccuPoint Active Stylus

# BoxWave AccuPoint Active Stylus User Manual

Model: AccuPoint Active Stylus (Metallic Silver)



## 1. PRODUCT OVERVIEW

---

The BoxWave AccuPoint Active Stylus is an electronic stylus designed to provide a natural writing and drawing experience on compatible touchscreens, such as the Onyx Boox M96. It operates without the need for Bluetooth pairing, utilizing electronic pulses to interact with the screen.



Image 1.1: The BoxWave AccuPoint Active Stylus in Metallic Silver.

### Key Features:

- **No Pairing Required:** Operates instantly without Bluetooth connection.
- **Ultra-Accurate Tip:** Features a 2mm fine tip for precise input.
- **Long Battery Life:** Provides up to 12 hours of continuous use on a single charge.
- **Durable Construction:** Made with a solid brushed aluminum barrel.
- **Convenient Charging:** Recharges via an included MicroUSB cable.

### Important Notes:

- This stylus does **not** support Palm Rejection.

- This stylus does **not** support Pressure Sensitivity.
- The Onyx Boox M96 device is not included with the stylus.

## 2. SETUP

### 2.1 Charging the Stylus

Before first use, or when the battery is low, charge the AccuPoint Active Stylus using the provided MicroUSB cable.

1. Locate the MicroUSB charging port on the stylus.
2. Connect the MicroUSB cable to the stylus.
3. Plug the other end of the MicroUSB cable into any standard USB power source (e.g., computer USB port, wall adapter).
4. An indicator light will show the charging status. Refer to the 'Fast Charging' image for light indications.



Image 2.1: The stylus charging process, showing indicator light colors for power on (blue), charging (red), and full charge (green).



# Conveniently Charge

Image 2.2: The AccuPoint Active Stylus connected to a MicroUSB cable for charging.

## 2.2 Turning On/Off

To turn the stylus on or off, simply press the power button located on the barrel of the stylus.

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Usage

The AccuPoint Active Stylus is designed for immediate use without any complex setup or pairing. Once powered on, it interacts with your device's touchscreen.

1. Ensure the stylus is turned on (indicator light will be blue).
2. Gently touch the 2mm pen tip to your device's touchscreen.
3. Use the stylus to tap, swipe, draw, or write as you would with a traditional pen on paper.



Image 3.1: A hand using the AccuPoint Active Stylus to interact with a tablet screen.



# Higher Accuracy & Sensitivity



Image 3.2: The AccuPoint Active Stylus positioned on a tablet screen, illustrating its precision.

## 3.2 Understanding the Tips

The stylus features a fine tip for precise input and may include a FiberMesh tip for broader interactions.



Image 3.3: Close-up view of the stylus showing the built-in charging port, indicator light, 1.9mm extra fine tip, and FiberMesh tip. It also indicates no Bluetooth is required.

## 4. MAINTENANCE

### 4.1 Cleaning

To maintain optimal performance and appearance:

- Wipe the stylus body with a soft, dry, lint-free cloth.
- Avoid using harsh chemicals, abrasive cleaners, or solvents.
- Keep the stylus tip clean and free from debris.

### 4.2 Storage

Store the stylus in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure it is fully charged before storage and periodically recharge it to maintain battery health.

## 5. TROUBLESHOOTING

### 5.1 Stylus Not Responding

- **Check Power:** Ensure the stylus is turned on. Press the power button and check for the blue indicator light.
- **Charge Battery:** If the stylus does not turn on or the light is dim, the battery may be depleted. Connect it to a power source using the MicroUSB cable and allow it to charge.
- **Clean Tip:** Ensure the stylus tip is clean and free from any obstructions.
- **Device Compatibility:** Confirm your device (Onyx Boox M96) is compatible with active styluses.

### 5.2 Charging Issues

- **Cable Connection:** Verify that the MicroUSB cable is securely connected to both the stylus and the power source.
- **Power Source:** Try a different USB power source or wall adapter to rule out issues with the power supply.
- **Cable Integrity:** Inspect the MicroUSB cable for any signs of damage. Try using a different MicroUSB cable if available.

## 6. SPECIFICATIONS

Feature	Specification
Model Name	AccuPoint Active Stylus
Color	Metallic Silver
Material	Aluminum
Tip Size	2mm (Ultra Fine)
Battery Life	Up to 12 hours
Charging Interface	MicroUSB
Item Weight	1.3 ounces
Batteries Required	Yes (1 Product Specific battery included)

## 7. WARRANTY AND SUPPORT

Information regarding a specific warranty for the BoxWave AccuPoint Active Stylus was not provided in the product data. For any product-related inquiries or technical support, please refer to the contact information provided by BoxWave Corporation at the point of purchase or on their official website.

Please note that limited third-party technical support for the **Onyx Boox M96 device** (up to 3 inquiries via electronic messaging) may be available, but this is not affiliated with or endorsed by ONYX and pertains to the device, not the stylus itself.

