

UBay AA59-00559A

UBay AA59-00559A Replacement Remote Control Instruction Manual

Model: AA59-00559A | Brand: UBay

1. INTRODUCTION

This instruction manual provides essential information for the proper use and care of your UBay AA59-00559A replacement remote control. Designed to be compatible with various Samsung LED HDTV models, this remote offers a convenient way to control your television functions. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

2. COMPATIBILITY

The UBay AA59-00559A remote control is compatible with a wide range of Samsung LED HDTV models. It is a direct replacement for the original AA59-00559A remote and can also substitute for AA59-00558A. Known compatible models include, but are not limited to:

- PN64E7000FFXZA, UN46ES7100FXZA, PN60E8000GFXZA, UN60ES7550F
- PN51E6500, PN51E6500EF, PN51E7000, UN40EH6030F, UN40ES6500F, UN46ES6500F, UN46ES6500FXZA
- UN46ES6580F, UN46ES6580FXZA, UN46ES6850FXZA, UN46ES6600F, UN46ES6600FXZA
- UN50ES6500, UN50ES6500F, UN50ES6500FXZA, UN50ES6580F, UN50ES6580FXZA
- UN55ES6600F, UN55ES6600FXZA, UN60ES6500FXZA, UN65ES6500, UN65ES6500F, UN65ES6500FXZA
- UN55ES6550, UN55ES6500F, UN55ES6500FXZA, UN55ES6580F, UN55ES6580FXZA
- PN51E6500EFXZA, PN51E7000FF, PN60E6500EFXZA, PN64E7000FF
- UN32ES6500, UN32ES6500F, UN32ES6500FXZA, UN40ES6550, UN40ES6580, UN46ES6550, UN46ES6580

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 1: Back view of the remote control, illustrating the battery compartment for AAA battery installation.

3.2 Initial Use

This UBay AA59-00559A replacement remote control is pre-programmed and does not require any additional setup or pairing with your Samsung TV. Once batteries are correctly installed, it should function immediately with compatible models. Simply point the remote towards your television and begin use.

4. OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your Samsung LED HDTV. Below is a general overview of the main buttons and their functions.





Figure 2: Front view of the UBay AA59-00559A remote control, displaying all functional buttons.

4.1 Key Button Functions

- **Power** (●): Turns the TV on or off.
- **Source**: Selects the input source (HDMI, AV, Component, etc.).
- **Set Up / Watch TV / Device**: Buttons for universal remote functions, typically used for initial setup or switching between TV and other devices.
- **Number Pad (0-9)**: Directly enters channel numbers.
- **Pre-CH**: Returns to the previously viewed channel.
- **Volume (+/- VOL)**: Adjusts the volume level.
- **Mute**: Silences the TV audio.
- **Channel (CH Up/Down)**: Changes channels sequentially.
- **CH List**: Displays the channel list.
- **Menu**: Opens the TV's main menu.
- **Tools**: Accesses quick settings or context-sensitive options.
- **Search**: Initiates a search function within the TV's interface.
- **Info**: Displays information about the current program or input.

- **Directional Pad (Up/Down/Left/Right) & Enter:** Navigates through menus and confirms selections.
- **Return:** Goes back to the previous screen or menu.
- **Exit:** Closes the current menu or application.
- **Color Buttons (A, B, C, D):** Provide access to specific functions depending on the TV menu or application.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback on connected devices or TV's media player.
- **P.SIZE (Picture Size):** Adjusts the aspect ratio or picture size.
- **CC (Closed Caption):** Toggles closed captions on or off.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are installed correctly with the correct polarity (+/-).
 - Replace old batteries with fresh AAA batteries.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing contact.
 - If only certain buttons fail, it might indicate internal damage or wear.
- **Interference:** Bright lights or other electronic devices can sometimes interfere with the remote's signal. Try using the remote in a different environment or moving potential sources of interference.

7. SPECIFICATIONS

Feature	Detail
Model Number	AA59-00559A
Brand	UBay
Connectivity Technology	Infrared (IR)

Feature	Detail
Compatible Devices	Samsung LED HDTVs
Power Source	2 x AAA Batteries (not included)
Product Dimensions	9 x 1.8 x 0.7 inches
Item Weight	3 ounces
Special Feature	Ergonomic design

8. WARRANTY INFORMATION

Specific warranty details for this UBay product may vary. Please refer to the product packaging or contact the seller directly for information regarding warranty coverage and terms. Keep your purchase receipt as proof of purchase.

9. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your UBay AA59-00559A remote control, please contact the seller or manufacturer through the platform where the product was purchased. Provide your order details and a clear description of the issue for prompt support.