

[Manuals.plus](#) /

› [KESSER](#) /

› KESSER Foldable Transport Cart with Roof User Manual

KESSER 1

KESSER Foldable Transport Cart User Manual

Model: 1

1. PRODUCT OVERVIEW

The KESSER foldable transport cart is designed for versatile use, providing a robust and convenient solution for transporting goods, children, or equipment. Its durable construction and thoughtful features ensure ease of use and longevity. This manual provides essential information for the safe and efficient operation and maintenance of your transport cart.



Figure 1: KESSER Foldable Transport Cart with Roof

Key Features:

- **Versatile Design:** Spacious loading area, additional XXL bag at the rear, and various holders provide ample space for excursions, festivals, or other leisure activities.
- **Foldable:** Can be compactly folded for easy storage and transport.
- **Comfort:** Thickly padded chassis offers comfort for passengers.
- **Safety:** Equipped with front brakes for secure stopping.
- **Practical Compartments:** Two additional pockets for refreshments at the front and an XXL pocket with zipper at the rear for storage.
- **Durable Construction:** Solid steel tube frame with a maximum load capacity of 100 kg.
- **Maneuverability:** 360° swivel solid rubber front wheels and a manual drawbar for easy maneuvering.
- **Weather Resistant:** Water and dirt-resistant nylon fabric.
- **Removable Roof:** Provides shade and protection.

2. COMPONENTS

Familiarize yourself with the main components of your KESSER transport cart to ensure proper assembly and operation.

- Main Frame (Steel Tubes)
- Fabric Body (Nylon)
- Wheels (Solid Rubber, 360° Swivel Front Wheels)
- Handlebar / Drawbar (Padded)
- Removable Roof
- Front Brakes
- Storage Pockets (Mesh and Zippered)



K&M KESSER®
-OUTDOOR-

VERBESSERTE KONTROLLE

Entdecken Sie den Bollerwagen mit ausgezeichneter Lenkung und 360°-Rädern für grenzenlose Mobilität! Mühelos und präzise manövrieren Sie in jede Richtung, selbst in engsten Kurven. Perfekt für alle Abenteuer – dieser Bollerwagen bietet Ihnen maximale Flexibilität auf jeder Strecke!

Figure 2: Detail of the cart's wheels, front brake, and ergonomic handle.



Figure 3: Robust 360° wheels with non-slip design, suitable for various terrains including sand, grass, and gravel.

3. SETUP AND FOLDING

Unfolding the Cart:

1. Place the folded cart on a flat, stable surface.
2. Grasp the top edges of the cart and pull them outwards until the frame fully extends and locks into place.
3. Ensure all locking mechanisms are securely engaged.
4. Attach the removable roof by inserting its support poles into the designated slots on the cart frame.

Folding the Cart:

1. Remove any contents from the cart.
2. Detach the removable roof and fold it for storage.
3. Locate the central pull strap or handle inside the cart's base.

4. Pull the strap upwards firmly. The cart frame will begin to collapse inwards.
5. Continue pulling until the cart is fully folded into its compact form.
6. Secure the folded cart with any integrated straps or clips to prevent it from unfolding during transport or storage.



Figure 4: The cart easily folds into a compact size, fitting into a car trunk for convenient transport.



K KESSER®
-OUTDOOR-

SCHNELLER AUFBAU FÜR SPONTANE AUSFLÜGE

Mit seinem schnellen und flexiblen Aufbau sind Sie sofort startklar, ohne lästiges Hantieren. In nur wenigen Minuten sind Sie bereit für spontane Ausflüge mit Ihren Liebsten. Der Kesser Bollerwagen passt sich Ihrem Tempo an!

Figure 5: Quick setup allows for spontaneous outings, making the cart ready in minutes.

4. OPERATING INSTRUCTIONS

Maneuvering the Cart:

- Hold the padded drawbar firmly with both hands.
- The 360° swivel front wheels allow for easy steering and turning, even in tight spaces.
- For stability on uneven terrain, maintain a steady pace and be mindful of the cart's balance.

Loading the Cart:

- Distribute weight evenly within the cart's loading area to maintain balance and prevent tipping.
- Do not exceed the maximum load capacity of 100 kg.
- Utilize the mesh pockets for beverages and the zippered XXL pocket for smaller items or valuables.

Using the Brakes:

- The cart is equipped with front brakes. To engage, press down on the brake levers located near the front wheels.
- Ensure the brakes are fully engaged when parking the cart, especially on inclines.
- To release the brakes, lift the levers.



K&I KESSER®
-OUTDOOR-

EIN UNVERGESSLICHES ERLEBNIS FÜR DIE GANZE FAMILIE

Mit dem Kesser Bollerwagen genießen Sie wertvolle Momente mit ihren Liebsten bei höchster Sicherheit, bestem Komfort und optimalem Wetterschutz. Genug Platz für Gepäck, Speisen, Getränke oder für die Kleinen.

Figure 6: The KESSER cart provides ample space for family outings, offering comfort and UV protection with its removable roof.

5. MAINTENANCE

Regular maintenance will extend the life of your KESSER transport cart.

- **Cleaning:** The nylon fabric is water and dirt-resistant. Wipe down the fabric and frame with a damp cloth and mild soap as needed. Avoid harsh chemicals.
- **Wheel Care:** Periodically check the wheels for debris and ensure they spin freely. Clean any dirt or mud from the wheel mechanisms.
- **Frame Inspection:** Regularly inspect the steel frame for any signs of damage, bends, or loose connections.

Tighten any loose screws or bolts.

- **Storage:** When not in use, fold the cart and store it in a dry, cool place away from direct sunlight to prevent material degradation.

6. TROUBLESHOOTING

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
Cart difficult to fold/unfold	Mechanism obstructed or stiff.	Ensure no items are blocking the folding mechanism. Apply a small amount of silicone spray to moving parts if stiff.
Wheels not turning smoothly	Debris caught in wheels or axle.	Remove any debris (dirt, hair, string) from the wheels and axles. Check for damage to the wheels.
Cart feels unstable during transport	Uneven weight distribution or overloaded.	Redistribute the load evenly. Do not exceed the maximum load capacity of 100 kg.
Brakes not engaging/disengaging properly	Brake mechanism dirty or misaligned.	Clean the brake mechanism. Check for any obstructions. If issues persist, contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the KESSER Foldable Transport Cart.

Specification	Value
Dimensions (L x W x H)	120 cm x 60 cm x 100 cm
Height without roof (from ground)	65 cm
Length with extended drawbar	150 cm
Loading Area (L x W x H)	77 cm x 45 cm x 28 cm
Wheel Diameter	20 cm
Maximum Load Capacity	100 kg
Materials	Steel tubes, 600D Oxford Nylon
Product Weight	Approx. 12.5 kg
Special Features	Compact, Durable, Foldable, Stain Resistant
Recommended Use	Outdoor, Indoor

EIGENSCHAFTEN



Länge / cm: ca. 120 cm
Breite / cm: ca. 60 cm
Höhe / cm: ca. 100 cm
Innenmaße : 80 x 45 cm



Gewicht : ca. 12,5 kg



Maximale Belastung bis zu 100kg

MATERIAL



Hochwertiges und witterungsbeständiges 600D Oxford Nylon



Figure 7: Detailed dimensions of the KESSER transport cart in both open and folded states.

8. WARRANTY AND SUPPORT

KESSER products are manufactured with high-quality materials and undergo strict quality control. For information regarding warranty coverage, please refer to the purchase documentation or contact your retailer.

If you encounter any issues or have questions not covered in this manual, please contact KESSER customer support through the official website or your point of purchase. Please have your model number (1) and purchase details ready when contacting support.