

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Remington](#) /

› [Remington AC9300 Hair Dryer User Manual](#)

## Remington AC9300

# Remington AC9300 Hair Dryer User Manual

Model: AC9300 | Brand: Remington

## INTRODUCTION

---

Thank you for choosing the Remington AC9300 Hair Dryer. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new hair dryer. Please read all instructions carefully before use and keep this manual for future reference.

## IMPORTANT SAFETY WARNINGS

---

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER** - As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:
  - Always unplug this appliance immediately after using.
  - Do not use while bathing or in a shower.
  - Do not place or store appliance where it can fall or be pulled into a tub or sink.
  - Do not place in or drop into water or other liquid.
  - If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING** - To reduce the risk of burns, electrocution, fire, or injury to persons:
  - An appliance should never be left unattended when plugged in.
  - Close supervision is necessary when this appliance is used by, on, or near children or invalids.
  - Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
  - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
  - Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
  - Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair away from the air inlets.

## PRODUCT OVERVIEW

---

The Remington AC9300 is a powerful 2200W hair dryer designed for efficient and effective hair styling. It features advanced technology for optimal performance.



Front view of the Remington AC9300 Hair Dryer, showcasing its sleek blue design and air intake grille.



The Remington AC9300 Hair Dryer equipped with its concentrator nozzle, ideal for precise styling.



The Remington AC9300 Hair Dryer shown with the diffuser attachment, perfect for enhancing natural curls and waves.

## Key Features:

- 2200W powerful AC motor for fast drying.
- Ionic Technology for frizz-free results.
- Multiple heat and speed settings.
- Cool shot function to set styles.
- Includes concentrator nozzle and diffuser.

## SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove the hair dryer and all accessories from the packaging. Retain packaging for storage or future transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if the cord or plug is damaged.
3. **Power Connection:** Ensure your power outlet voltage matches the appliance's voltage (220 Volts). Plug the hair dryer into a suitable electrical outlet.

#### 4. Attaching Accessories:

- **Concentrator Nozzle:** For precise drying and styling, align the concentrator nozzle with the front of the dryer and push it firmly into place.
- **Diffuser:** For enhancing natural curls and adding volume, align the diffuser with the front of the dryer and push it firmly into place.

## OPERATING INSTRUCTIONS

---

### Controls:

- **Power Switch:** Turns the dryer ON/OFF.
- **Heat Settings:** Adjusts the temperature of the airflow. Typically Low, Medium, High.
- **Speed Settings:** Controls the fan speed. Typically Low, High (2 speeds available).
- **Cool Shot Button:** Provides a burst of cool air to set your style. Press and hold for cool air.

### Drying Your Hair:

1. Towel-dry your hair to remove excess water.
2. Plug the hair dryer into a suitable power outlet.
3. Select your desired heat and speed settings. Start with lower settings for delicate hair and increase as needed.
4. For general drying, move the dryer continuously around your head, keeping it a few inches away from your hair.
5. For precise styling, attach the concentrator nozzle and direct the airflow to specific sections of hair using a brush.
6. For enhancing curls, attach the diffuser and gently cup sections of hair in the diffuser bowl, lifting towards the scalp.
7. Once your hair is almost dry, use the Cool Shot button to set your style and add shine.
8. After use, switch off the dryer and unplug it from the power outlet. Allow it to cool down before storing.

## CARE AND MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Remington AC9300 Hair Dryer.

#### 1. Cleaning the Air Filter:

The rear air filter should be cleaned regularly to prevent overheating and maintain drying efficiency.

- Ensure the hair dryer is switched off and unplugged.
- Gently twist or pull off the rear grille (refer to your specific model's design for removal).
- Remove any accumulated lint, dust, or hair from the filter screen using a soft brush or cloth.
- Replace the rear grille securely.

#### 2. General Cleaning:

Wipe the exterior of the hair dryer with a damp cloth. Do not use abrasive cleaners or solvents.

#### 3. Storage:

When not in use, unplug the appliance. Allow it to cool, then store it in a dry place, out of reach of children. Do not wrap the cord around the appliance, as this can cause premature wear and breakage of the cord.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Hair dryer does not turn on.	Not plugged in; power outlet not working; internal thermal cut-out activated.	Ensure plug is fully inserted. Test outlet with another appliance. Unplug and allow to cool for 10-15 minutes, then try again.
Airflow is weak or inconsistent.	Blocked air intake filter.	Clean the rear air filter as described in the "Care and Maintenance" section.
Hair dryer overheats and shuts off.	Blocked air intake filter; prolonged use.	Clean the air filter. Unplug the dryer and allow it to cool down completely before resuming use.
Unusual noise or smell.	Internal issue; foreign object.	Immediately unplug the dryer. Do not use. Contact customer support for assistance.

## SPECIFICATIONS

- **Model:** AC9300
- **Power:** 2200W
- **Voltage:** 220 Volts
- **Color:** Blue
- **Material:** Polyester
- **Dimensions (L x W x H):** 25.4 x 5.08 x 6.86 cm (10 x 2 x 2.7 inches)
- **Weight:** 1 Kilogram (2.2 lbs)
- **Number of Speeds:** 2
- **Noise Level:** 80 dB
- **Special Feature:** Ionic Technology
- **Included Components:** Concentrator nozzle, Diffuser

## WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Remington website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

**Remington Official Website:** [www.remingtonproducts.com](http://www.remingtonproducts.com)

Please note that availability of spare parts information is not specified in the product details provided.