

Severin PG 8114

SEVERIN SENOA DigitalBOOST Electric Grill PG 8114 User Manual

Model: PG 8114 | Brand: Severin

1. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance for the first time. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not operate if the power cord or plug is damaged.
- **Burn Prevention:** The grill features SafeTouch housing, designed to keep external surfaces cool during operation, minimizing the risk of burns. However, the grilling surface and heating elements will be extremely hot. Always use heat-resistant gloves when handling hot components.
- **Water Tray:** Always fill the water tray with water before use. This helps to reduce smoke and collect dripping fats, preventing flare-ups. Ensure the water level is maintained during grilling.
- **Ventilation:** Use the grill in a well-ventilated area, especially when used indoors.
- **Children and Pets:** Keep children and pets away from the hot grill.
- **Stability:** Place the grill on a stable, heat-resistant surface.
- **Cleaning:** Always unplug the grill and allow it to cool completely before cleaning.

2. PRODUCT OVERVIEW

The SEVERIN SENOA DigitalBOOST Electric Grill PG 8114 is a high-performance electric grill designed for both indoor and outdoor use. It features a stainless steel grill grate, a powerful 3000W heating element, and an OLED digital display for precise temperature control.

Key Features:

- **DigitalBOOST Technology:** Achieves 500 °C in the boost zone for perfect searing.

- **Quick Start:** Heats up in just 10 minutes.
- **SafeTouch Housing:** Reduces the risk of burns by keeping external surfaces cool.
- **OLED Digital Display:** Integrated timer and thermometer for precise cooking.
- **Easy Cleaning:** Detachable, dishwasher-safe stainless steel parts.
- **Versatile Use:** Suitable for both indoor and outdoor grilling.

Components:

Familiarize yourself with the main components of your grill:

- Grill housing with SafeTouch handles
- Heating element with integrated control unit and OLED display
- Stainless steel grill grate
- Reflector tray / Water tray
- Windshield (optional, for outdoor use)
- Power cord with plug



Figure 1: SEVERIN SENOA DigitalBOOST Electric Grill PG 8114, main view.



Figure 2: Exploded view showing the grill's individual components, including the housing, water tray, heating element, and grill grate.

3. SETUP

The SEVERIN SENOA DigitalBOOST Electric Grill PG 8114 requires minimal assembly. Follow these steps to prepare your grill for first use:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or transport.
2. **Placement:** Place the grill housing on a flat, stable, and heat-resistant surface. Ensure there is adequate

clearance around the grill for ventilation.

3. **Water Tray:** Insert the reflector/water tray into the grill housing. Fill the tray with approximately 1 liter of water. Ensure the water level is between the MIN and MAX markings.
4. **Heating Element:** Carefully place the heating element with the integrated control unit into its designated slot above the water tray. Ensure it is securely seated. *A safety switch prevents operation if the heating element is not correctly positioned.*
5. **Grill Grate:** Place the stainless steel grill grate onto the heating element frame.
6. **Windshield (Optional):** If using outdoors or desiring additional splash protection, attach the windshield to the grill grate.
7. **Power Connection:** Plug the power cord into a suitable grounded electrical outlet.



Figure 3: Ensure the power cord is securely connected to a grounded outlet.

4. OPERATING INSTRUCTIONS

Operating your SEVERIN SENOA DigitalBOOST Electric Grill is straightforward. Follow these steps for optimal grilling results:

1. **Preheating:** Turn the control knob to the desired temperature setting. The OLED display will show the current temperature and target temperature. For quick searing, activate the **Boost Zone** function. The grill will reach 500 °C in approximately 10 minutes.
2. **Temperature Monitoring:** The integrated thermometer on the OLED display provides real-time temperature readings, allowing for precise cooking control.
3. **Grilling:** Once the desired temperature is reached, place your food on the grill grate. Avoid overcrowding the grill to ensure even cooking.
4. **Cooking Time:** Use the integrated timer on the OLED display to monitor cooking duration.
5. **Boost Zone Usage:** For perfect grill marks and quick searing of meats, utilize the dedicated 500 °C Boost Zone.
6. **After Grilling:** Once cooking is complete, turn the control knob to the 'OFF' position and unplug the appliance. Allow the grill to cool down completely before cleaning.

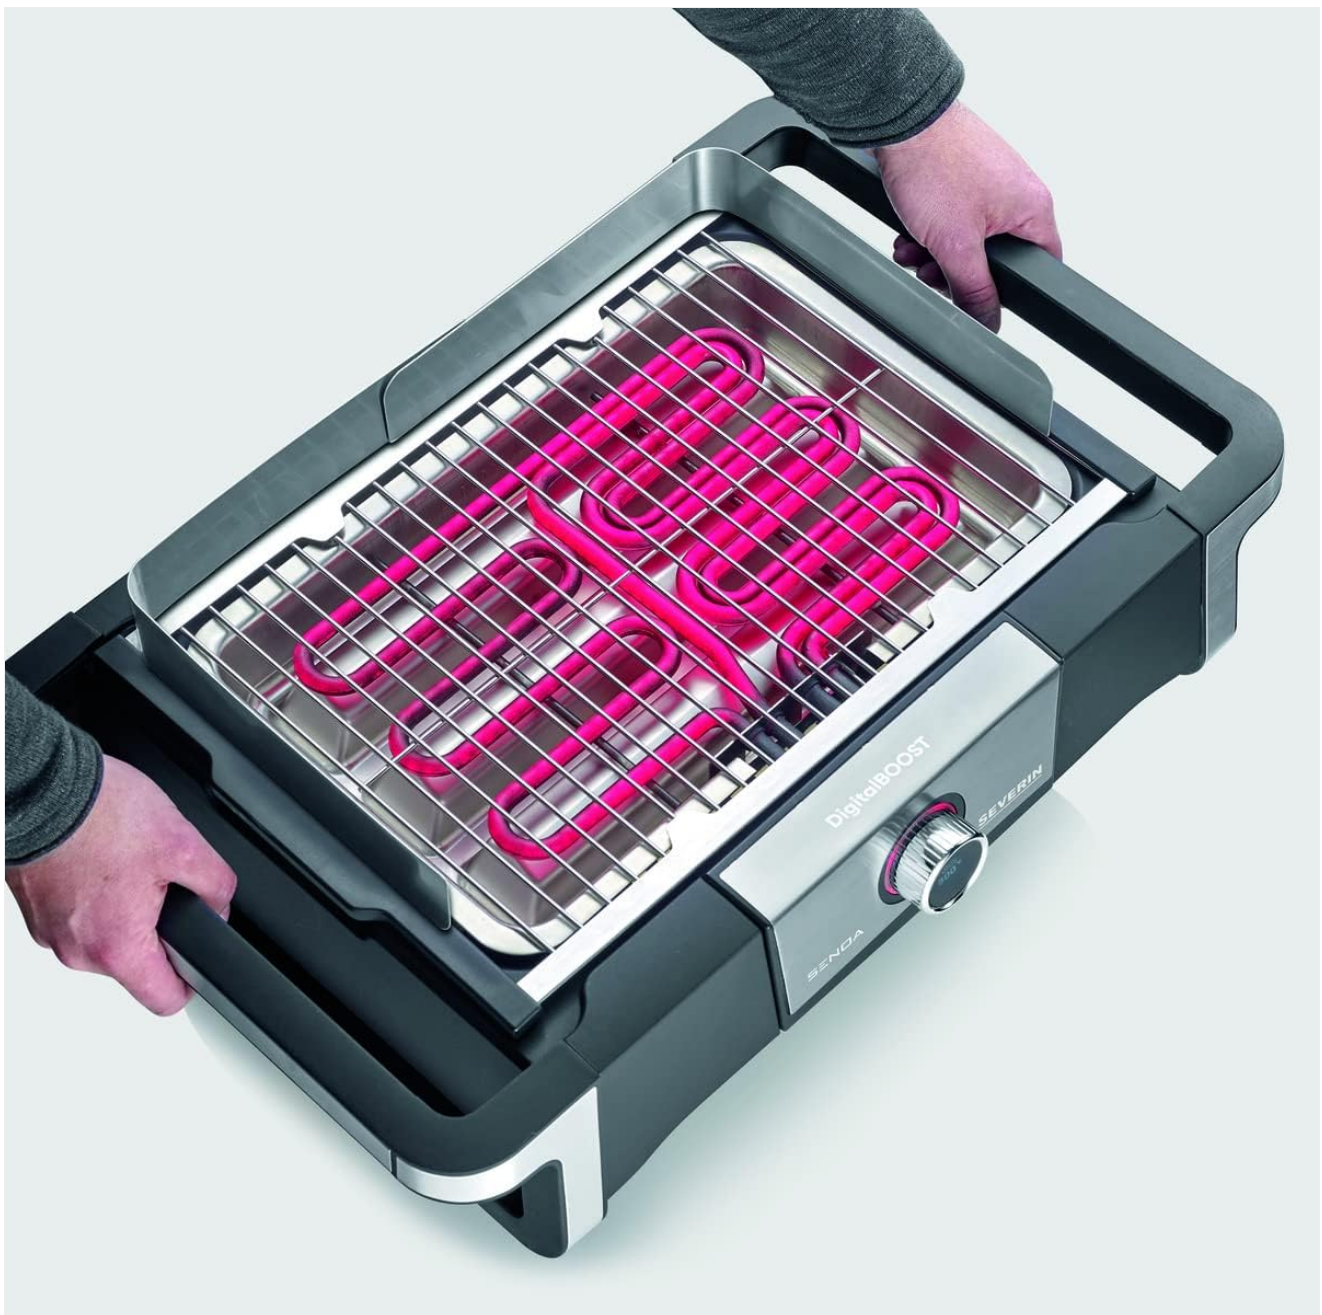


Figure 4: The heating element reaching optimal temperature for grilling.



Asado fácil en interiores y exteriores

Figure 5: The grill in use, demonstrating its suitability for outdoor gatherings.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your grill. Always ensure the grill is unplugged and completely cool before cleaning.

1. **Disassembly:** Remove the grill grate, windshield (if attached), heating element, and water tray from the main housing.
2. **Grill Grate and Windshield:** The stainless steel grill grate and windshield are dishwasher safe. For stubborn residue, soak in warm soapy water before scrubbing with a non-abrasive brush or sponge.
3. **Water Tray:** Empty any remaining water and fat from the water tray. Wash the tray with warm soapy water.
4. **Heating Element:** The heating element and control unit should **not** be immersed in water. Wipe the heating element with a damp cloth. For burnt-on residue, gently scrape with a plastic scraper after ensuring the element is cool.
5. **Grill Housing:** Wipe the exterior of the grill housing with a damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the SafeTouch surface.

6. **Reassembly:** Ensure all parts are thoroughly dry before reassembling the grill. Store in a dry place.

6. TROUBLESHOOTING

If you encounter issues with your SEVERIN SENOA DigitalBOOST Electric Grill, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Grill does not turn on or heat up.	• Power cord not properly plugged in. • Heating element not correctly positioned. • Power outlet malfunction.	• Check if the power cord is securely plugged into a working outlet. • Ensure the heating element is fully and correctly seated in its slot. The grill has a safety switch that prevents operation if not properly assembled. • Test the outlet with another appliance.
Excessive smoke during grilling.	• Water tray is empty or has insufficient water. • Excessive fat dripping onto the heating element.	• Ensure the water tray is filled to the recommended level before and during grilling. • Trim excess fat from meat before grilling.
Food not cooking evenly.	• Grill overcrowded. • Uneven heat distribution (rare).	• Avoid placing too much food on the grill at once. Cook in batches if necessary. • Ensure the grill has preheated sufficiently.

7. SPECIFICATIONS

Detailed technical specifications for the SEVERIN SENOA DigitalBOOST Electric Grill PG 8114:

- **Model Name:** PG 8114
- **Brand:** Severin
- **Power:** 3000 Watts
- **Voltage:** 230 Volts
- **Dimensions (L x W x H):** 62 cm x 41 cm x 17 cm (approx. 4.1 x 6.2 x 1.7 meters as per product data, but likely 62cm x 41cm x 17cm based on typical grill sizes and other data points)
- **Weight:** 4.22 Kilograms
- **Cooking Surface Area:** 9960 Square Centimeters
- **Material:** Stainless Steel
- **Special Feature:** Digital OLED Display, SafeTouch Housing, Boost Zone (500 °C)
- **Fuel Type:** Electric
- **Recommended Use:** Indoor and Outdoor
- **Assembly Required:** No

8. WARRANTY AND SUPPORT

Your SEVERIN SENOA DigitalBOOST Electric Grill PG 8114 comes with a manufacturer's warranty.

- **Warranty Period:** Three-year manufacturer's warranty.
- **Claiming Warranty:** In case of a defect during the warranty period, please contact the retailer where you purchased the product or the official Severin customer support. Keep your proof of purchase.
- **Customer Support:** For technical assistance, spare parts, or general inquiries, please refer to the contact information provided on the official Severin website or in the included user manual.