

UBay RM-C1240

UBay RM-C1240 Replacement Remote Control Instruction Manual

For JVC LCD TV Models

1. INTRODUCTION

This manual provides comprehensive instructions for the UBay RM-C1240 Remote Control, designed as a direct replacement for various JVC LCD TV models. Please read this manual carefully before use to ensure proper operation and to maximize the lifespan of your device.

Product Model: RM-C1240

Compatible JVC TV Models:

- LT-19EM74, LT-24EM74, LT-28EM74, LT-29EM75
- LT-32EM75, LT-40EM75, LT-42EM74, LT-43EM75
- LT-48EM75, LT-49EM75, LT-55EM75

2. SETUP

2.1 Battery Installation

The UBay RM-C1240 Remote Control requires two (2) 1.5V AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

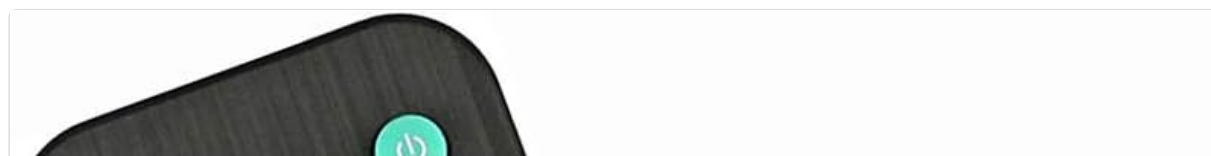




Image: Angled view of the RM-C1240 remote control. The battery compartment is located on the back of the device.
Ensure correct battery polarity during installation.

No programming or pairing is required for this remote control. Once batteries are installed, it is ready for immediate use with compatible JVC LCD TV models.

3. OPERATING INSTRUCTIONS

This section outlines the basic functions and button layout of the RM-C1240 remote control.





Image: Front view of the RM-C1240 remote control, showing the layout of all buttons for TV operation.

3.1 Button Functions

Button	Function
Power (Green)	Turns the TV on or off.
Number Buttons (0-9)	Direct channel selection.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the TV channel up or down.
MUTE	Mutes or unmutes the TV audio.
MENU	Accesses the TV's main menu.
SOURCE	Selects input sources (e.g., HDMI, AV, USB).
Navigation (Up, Down, Left, Right, OK)	Navigates through menus and confirms selections.
EXIT	Exits the current menu or function.
EPG	Accesses the Electronic Program Guide.
FAV	Accesses favorite channels list.
ASPECT	Changes the screen aspect ratio.
SLEEP	Sets the sleep timer.
USB	Switches to USB input mode.
HDMI, AV, TV, VGA	Direct selection of respective input sources.

Button	Function
Media Playback Controls	Play, Pause, Stop, Fast Forward, Rewind, Next Track, Previous Track, Repeat.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote control not working.	• Check if batteries are inserted correctly with correct polarity. • Replace old batteries with new 1.5V AAA alkaline batteries. • Ensure there are no obstructions between the remote control and the TV's infrared sensor. • Verify the remote control is pointed directly at the TV.
Buttons are unresponsive or sticky.	• Clean the remote control surface with a soft, dry cloth. • Ensure no liquid has spilled on the remote.
Remote works intermittently.	• Batteries may be low; replace them. • Ensure consistent line of sight to the TV's IR sensor.

6. SPECIFICATIONS

- **Model:** RM-C1240
- **Brand:** UBay
- **Compatible Devices:** JVC LCD Televisions (Specific models listed in Introduction)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x 1.5V AAA Alkaline Batteries (not included)

- **Product Dimensions:** 8.7 x 1.8 x 0.7 inches (approximately)
- **Item Weight:** 2.89 ounces (approximately)

7. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the retailer or the original product listing where the item was purchased. For technical support or further inquiries, please contact the seller directly.
