

[Manuals.plus](#) /

› [Braun](#) /

› Braun MultiQuick 5 Vario Hand Blender MQ 5245 WH Instruction Manual

Braun MQ 5245 WH

Braun MultiQuick 5 Vario Hand Blender MQ 5245 WH Instruction Manual

Model: MQ 5245 WH

INTRODUCTION

Thank you for choosing the Braun MultiQuick 5 Vario Hand Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read these instructions carefully before first use and keep them for future reference.

For your safety, always observe the safety warnings and precautions outlined in this manual.

WHAT'S IN THE BOX

Your Braun MultiQuick 5 Vario Hand Blender package includes the following components:

- 1 x Braun MultiQuick 5 Vario Hand Blender Motor Unit
- 1 x Blending Shaft (Stainless Steel)
- 1 x 600ml BPA-free Plastic Beaker
- 1 x 500ml Chopper Attachment
- 1 x Stainless Steel Whisk Attachment



Image: The main motor unit of the Braun MultiQuick 5 Vario Hand Blender.



Image: Overview of the Braun MultiQuick 5 Vario Hand Blender and its included attachments.

SETUP

Attaching and Detaching Accessories

To attach an accessory (blending shaft, whisk gear box, or chopper lid), align the accessory with the motor unit and twist until it

clicks securely into place. To detach, press the release buttons on the sides of the motor unit and twist to remove the accessory.



Image: Demonstrating how to detach the blending shaft from the motor unit by pressing the release buttons.

Chopper Assembly

1. Place the chopper blade onto the center pin of the chopper bowl.
2. Add your ingredients to the chopper bowl.
3. Place the chopper lid onto the bowl, ensuring it is properly seated.
4. Attach the motor unit to the chopper lid, twisting until it locks.

Whisk Assembly

1. Insert the whisk into the whisk gear box.
2. Attach the whisk gear box to the motor unit, twisting until it locks.

Blending Shaft Assembly

Attach the blending shaft directly to the motor unit, twisting until it clicks into place.

Your browser does not support the video tag.

Video: This video demonstrates the assembly of the chopper, blending shaft, and whisk attachments, and how to adjust the speed settings on the Braun MultiQuick 5 Vario Hand Blender.

OPERATING INSTRUCTIONS

Speed Control

The MultiQuick 5 Vario features a variable speed wheel with 21 speed settings, allowing for precise control. Rotate the wheel at the top of the motor unit with your thumb to select the desired speed. Lower speeds are suitable for softer ingredients and larger quantities, while higher speeds are for harder ingredients and finer results.



Image: A hand demonstrating the ergonomic grip and the speed dial on the Braun MultiQuick 5 Vario Hand Blender.

Using the Blending Shaft

1. Attach the blending shaft to the motor unit.
2. Immerse the blending shaft into the ingredients in the 600ml beaker or another suitable container. Ensure the liquid level is

below the maximum fill line.

3. Press and hold the power button to start blending. Move the blender up and down gently for even results.
4. Release the power button to stop.

Using the Chopper Attachment

1. Assemble the chopper as described in the Setup section.
2. Place the chopper on a stable, flat surface.
3. Press and hold the power button on the motor unit to begin chopping. Use short pulses for coarse chopping or hold longer for finer results. Do not operate continuously for more than 1 minute.
4. Release the power button to stop.

Using the Whisk Attachment

1. Assemble the whisk as described in the Setup section.
2. Place the whisk into the ingredients in the 600ml beaker or another suitable container.
3. Press and hold the power button to start whisking. Move the whisk in a circular motion for even aeration.
4. Release the power button to stop.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

- **Always unplug the appliance before cleaning.**
- The motor unit should only be wiped with a damp cloth. Do not immerse it in water or other liquids.
- All attachments (blending shaft, beaker, chopper bowl, chopper blade, whisk, whisk gear box) are dishwasher-safe. For best results, rinse them immediately after use.
- Exercise caution when handling the chopper blade and blending shaft blades as they are very sharp.
- Store the appliance and its accessories in a dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in, power outlet fault, motor unit not properly attached to accessory.	Check power connection, try another outlet, ensure motor unit is securely locked onto the accessory.
Motor stops during operation.	Overheating due to prolonged use or too much load.	Unplug the appliance and let it cool down for at least 30 minutes. Reduce ingredient quantity or processing time.
Ingredients not blending/chopping effectively.	Too many ingredients, not enough liquid (for blending), incorrect speed setting.	Reduce ingredient quantity, add more liquid (for blending), adjust to a higher speed setting.

SPECIFICATIONS

Feature	Specification
Model	MQ 5245 WH
Power	1000 Watts

Feature	Specification
Voltage	220 Volts
Speed Settings	21 Variable Speeds
Control Type	Push Button
Beaker Capacity	600 ml (BPA-free)
Chopper Capacity	500 ml
Blade Material	Stainless Steel
Dishwasher Safe Parts	Yes
Dimensions (D x W x H)	5.7 x 5.7 x 40 cm

WARRANTY AND SUPPORT

This Braun MultiQuick 5 Vario Hand Blender comes with an International Warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details.

For technical support, service, or spare parts, please contact your local Braun service center or the retailer where you purchased the product. Keep your proof of purchase for warranty claims.

© 2026 Braun. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question