

Manuals.plus /

› Dreamegg /

› Dreamegg D11 Portable White Noise Sound Machine User Manual

Dreamegg D11

Dreamegg D11 Portable White Noise Sound Machine User Manual

Model: D11

INTRODUCTION

This manual provides instructions for the safe and effective use of your Dreamegg D11 Portable White Noise Sound Machine. Please read this manual thoroughly before operating the device and retain it for future reference.

SAFETY INFORMATION

- Keep volume at or below 77 decibels to protect hearing.
- Use only the provided USB-C cable for charging.
- Ensure the device is recharged properly.
- This D11 sound machine has a built-in rechargeable battery; no battery replacement is required.
- The device might be in low power due to transportation and storage. If so, please charge it for better usage.

PACKAGE CONTENTS

- Dreamegg D11 Portable White Noise Sound Machine
- USB-C Charging Cable
- User Manual

DEVICE OVERVIEW

The Dreamegg D11 is a compact and portable sound machine designed to create a peaceful environment with various sounds and a night light function.



Image: Front view of the Dreamegg D11 Portable White Noise Sound Machine, showing the illuminated spiral night light and speaker grille.

Adjustable Night Light



Image: Side view of the Dreamegg D11, highlighting the control buttons for power, light, volume, and sound selection.

SETUP

Charging the Device

1. Connect the provided USB-C cable to the charging port on the device.
2. Plug the other end of the USB-C cable into a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. The device is fully charged when the indicator changes or turns off (refer to specific LED behavior in the full manual if available).

USB-C Rechargeable

One charge lasts a long time



Image: The Dreamegg D11 sound machine connected to a USB-C charging cable, illustrating its rechargeable capability.

OPERATING INSTRUCTIONS

Power On/Off

- To power on the device, **long press** the power button for 2 seconds.
- To power off the device, **long press** the power button for 2 seconds again.

Sound Selection

The D11 offers 21 soothing sounds, categorized as White Noise, Nature Sounds, and Baby Sounds.

- Press the "Sound" button to cycle through the available sound categories.
- Within each category, press the "Sound" button again to select a specific sound.

21 Soothing Sounds



6 White Noise



8 Nature Sounds



7 Baby Sounds



Image: A visual representation of the 21 soothing sounds available on the Dreamegg D11, categorized into White Noise, Nature Sounds, and Baby Sounds.

Volume Adjustment

- Press the "+" button to increase the volume.
- Press the "-" button to decrease the volume.
- The device features 32 adjustable volume levels.

Night Light Function

- Press the "Light" button to turn the night light on or off.
- While the night light is on, press and hold the "Light" button to adjust the brightness.
- The night light provides a warm hue, suitable for nursery use or mid-night feeding.

Portable Sound Machine

Use in baby carriers, car seats, strollers, etc



Image: The Dreamegg D11 with its adjustable night light, depicted in a nursery setting with a mother and baby, illustrating its use for gentle illumination.

Timer Settings

The D11 includes a timer function for automatic shut-off.

- Press the "Timer" button to select a duration: 30 minutes, 60 minutes, 90 minutes, or non-stop play.

- The selected timer setting will be indicated by a light or specific feedback (refer to full manual for details).

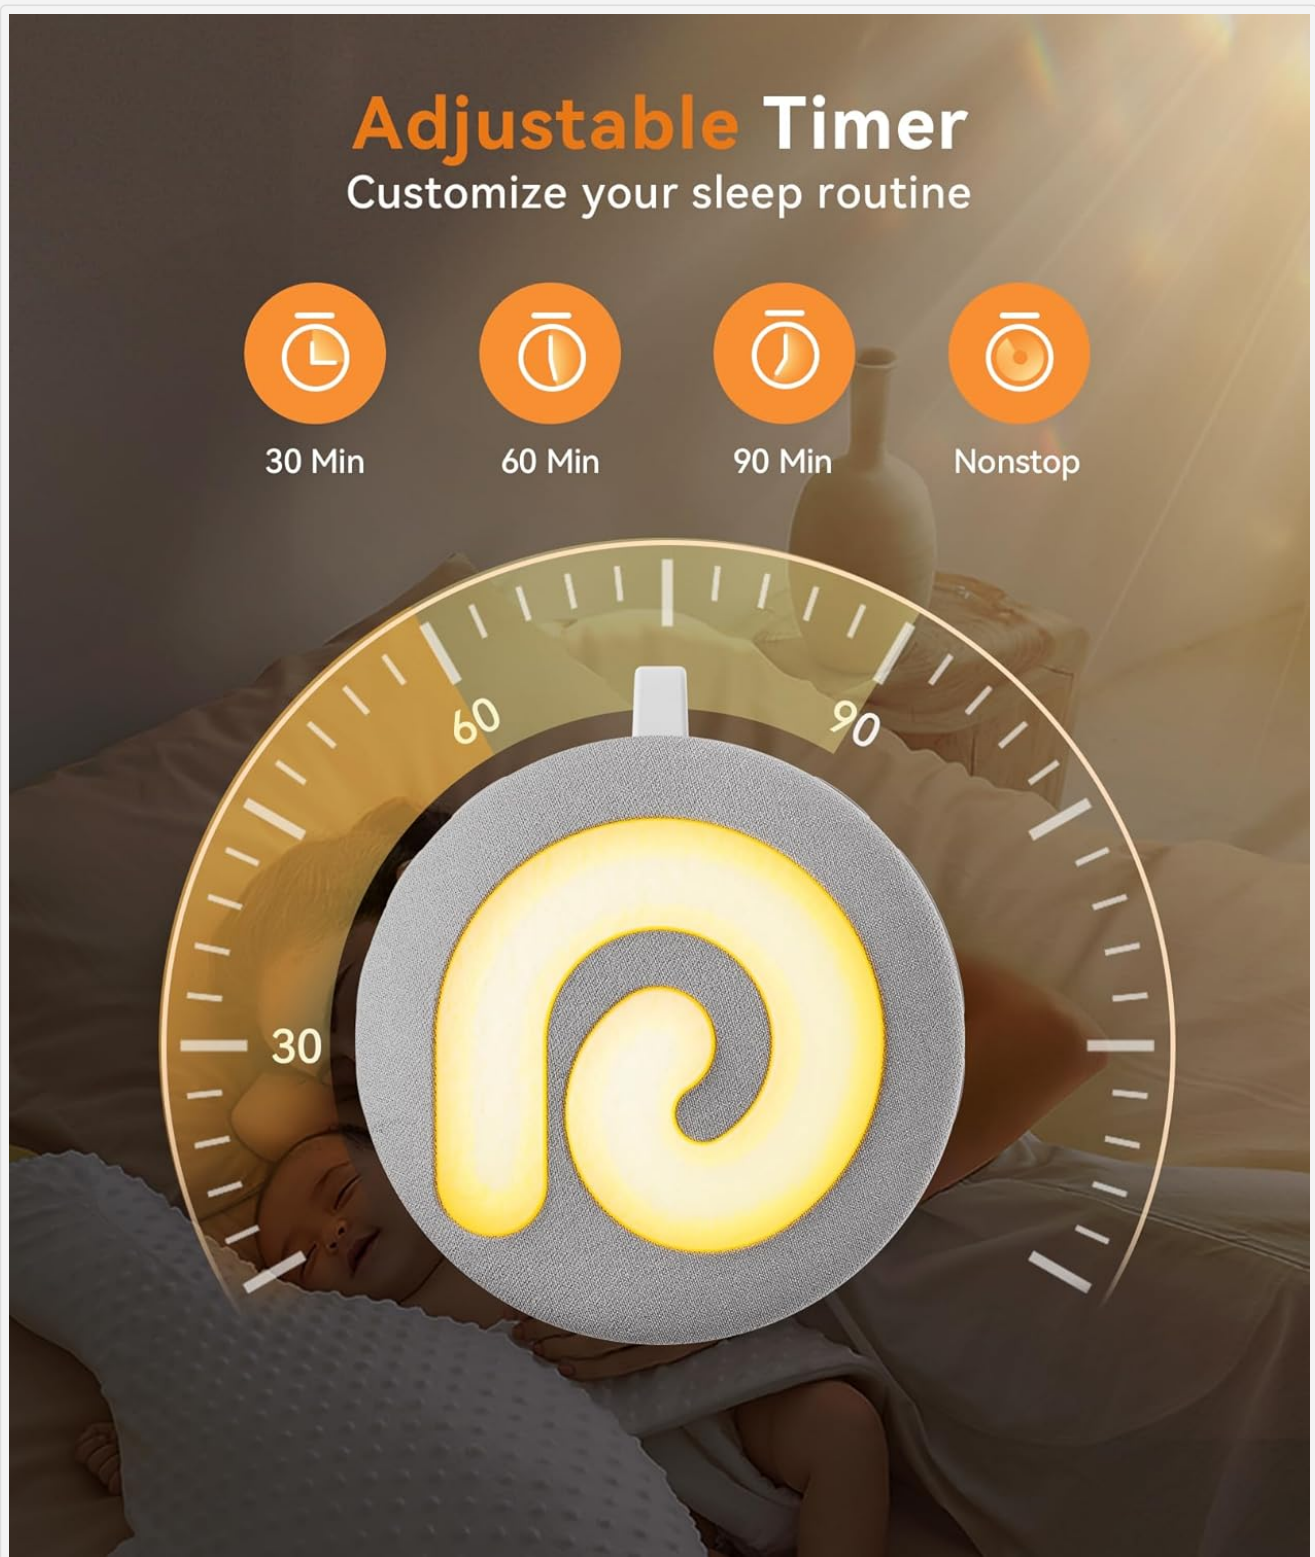


Image: The Dreamegg D11 displaying its adjustable timer options, including 30, 60, 90 minutes, and a non-stop mode, with a sleeping baby in the background.

Child Lock Function

To prevent accidental button presses, activate the child lock.

- Locate the child lock switch/button on the device (refer to diagram in full manual).
- Engage the child lock to disable button functionality.

Child Lock

Make your parenting worry-free



Child Lock



Smooth Design



Image: The Dreamegg D11 with its child lock feature, shown with a baby nearby, emphasizing its safety design.

Memory Function

The device remembers your last sound, light, and volume settings when powered off and on, eliminating the need to reconfigure settings each time.

MAINTENANCE

To ensure the longevity and proper functioning of your Dreamegg D11, follow these simple maintenance guidelines:

- Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

- Store the device in a cool, dry place when not in use.
- Avoid dropping the device or subjecting it to strong impacts.

TROUBLESHOOTING

If you encounter any issues with your Dreamegg D11, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. **Long press** the power button for 2 seconds.
- **No sound:** Check the volume level and ensure it is not muted. Verify that a sound is selected.
- **Night light not working:** Ensure the night light function is activated and adjust brightness if necessary.
- **Buttons unresponsive:** Check if the child lock function is engaged. Disengage it to restore button functionality.

For further assistance, please contact Dreamegg customer support.

SPECIFICATIONS

Feature	Detail
Model Number	D11
Product Dimensions	3.35 x 3.35 x 1.77 inches
Weight	5.6 ounces
Power Source	Battery Powered (1 Lithium Ion battery included)
Material	Plastic
Sound Options	21 (White Noise, Nature Sounds, Lullabies, etc.)
Volume Levels	32
Timer Options	30, 60, 90 minutes, Non-stop
Night Light	Adjustable brightness, warm hue

WARRANTY AND SUPPORT

Warranty Information

The Dreamegg D11 Portable White Noise Sound Machine comes with a 365-day warranty from the date of purchase. This warranty covers manufacturing defects and ensures reliable quality.

For warranty claims or service, please retain your proof of purchase.

Customer Support

For any questions, technical assistance, or support needs, please contact Dreamegg customer service. Contact information can typically be found on the product packaging or the official Dreamegg website.

FCC Certified: This sound machine has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in part 15 of the FCC rules.

