

[Manuals.plus](#) /

› [UBay](#) /

› UBay AKB73275501 Remote Replacement User Manual

UBay UBay AKB73275501

UBay AKB73275501 Remote Replacement User Manual

For LG Blu-Ray Disc Home Theater Systems

INTRODUCTION

This manual provides instructions for the UBay AKB73275501 Replacement Remote Control, designed for use with various LG Blu-Ray Disc Home Theater Systems. This remote is pre-programmed and requires no additional setup for compatible models. Please read this manual thoroughly to ensure proper operation and maintenance of your remote control.

PRODUCT OVERVIEW





Image 1: Front view of the UBay AKB73275501 remote control. This image displays the full layout of the remote, including the power button, number pad, navigation controls, volume, and various function buttons for Blu-Ray disc home theater systems.



Image 2: Angled view of the UBay AKB73275501 remote control. This perspective shows the remote's side profile and button placement, emphasizing its ergonomic shape.

The UBay AKB73275501 is a direct replacement remote control for various LG Blu-Ray Disc Home Theater Systems. It is designed to provide full functionality without the need for complex programming. Key features include:

- Pre-programmed for immediate use with compatible LG models.
- Controls essential functions such as power, volume, input selection, disc playback, and menu navigation.
- Ergonomic design for comfortable handling.
- Dedicated buttons for Blu-Ray specific functions.

SETUP

1. Battery Installation

The remote control requires batteries for operation. Batteries are not included in the package.

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

2. Initial Use

This remote control is pre-programmed for compatible LG Blu-Ray Disc Home Theater Systems. No additional programming or setup is required. Once batteries are installed, the remote is ready for use.

OPERATING INSTRUCTIONS

Point the remote control directly at the infrared sensor on your LG Blu-Ray Disc Home Theater System. Ensure there are no obstructions between the remote and the system.

Basic Functions:

- **Power (●):** Turns the home theater system on or off.
- **Number Pad (0-9):** Used for direct input of track numbers or other numerical selections.
- **Volume (+/-):** Adjusts the audio output level.
- **Mute:** Silences the audio output.
- **Input/AV:** Selects the input source for the home theater system.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and confirm selections.
- **Play/Pause (▶ / ||):** Controls media playback.
- **Stop (■):** Stops media playback.
- **Skip (◀◀ / ▶▶):** Skips to the previous or next track/chapter.
- **Back:** Returns to the previous menu or screen.
- **Home:** Accesses the main home menu of the system.
- **Disc Menu/Title/Pop Up:** Accesses disc-specific menus.

For detailed functions of specific buttons, refer to the user manual of your LG Blu-Ray Disc Home Theater System.

MAINTENANCE

Cleaning the Remote:

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or aerosol sprays, as they may damage the remote's internal components or finish.

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

Storage:

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working or unresponsive.	- Batteries are dead or incorrectly installed. - Obstruction between remote and home theater system. - Remote is out of range. - Infrared sensor on home theater system is blocked or faulty. - Remote control is faulty.	- Replace batteries with new AAA batteries, ensuring correct polarity. - Remove any objects blocking the line of sight between the remote and the system. - Move closer to the home theater system. - Ensure the system's IR sensor is clean and unobstructed. - If all other solutions fail, the remote may be defective.
Certain buttons do not function.	- Button is stuck or damaged. - Remote is not fully compatible with a specific function of your system.	- Gently press the button multiple times to see if it frees up. - Verify your LG home theater model is listed as compatible. While this remote is a replacement, some advanced or model-specific functions might not be supported.

SPECIFICATIONS

Feature	Detail
Model Number	UBay AKB73275501
Compatible Devices	LG Blu-Ray Disc Home Theater Systems (e.g., LHB335, LHB336, LHB535, LHB536, LHB975, LHB976, BH5140S, S54S1S, S54T1W, HB906SBPD, HB906PAWPD, HB906SCPR, HB906PAW, HB906PAW-PD, HB906SB, HB906SB-PD, HB906SC, HB906SC-PR, HB906TA, HB906TAW)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	9.3 x 1.8 x 0.7 inches
Item Weight	3 ounces
Special Feature	Ergonomic

WARRANTY AND SUPPORT

Specific warranty information for the UBay AKB73275501 remote control is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please contact the seller or manufacturer directly. Please retain your purchase receipt as proof of purchase for any warranty claims.

OFFICIAL PRODUCT VIDEOS

There are no official product videos provided by the seller for this item.

© 2024 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question