

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nestor & Gamble](#) /
- › [Nestor&Gamble Universal Dishwasher Basket Wheel Set Instruction Manual](#)

Nestor & Gamble Universal Dishwasher Basket Wheel Set

Nestor&Gamble Universal Dishwasher Basket Wheel Set Instruction Manual

Model: Universal Dishwasher Basket Wheel Set

PRODUCT OVERVIEW

The Nestor&Gamble Universal Dishwasher Basket Wheel Set is designed to restore smooth and effortless movement to your dishwasher's upper and lower baskets. This set provides 16 precisely fitting replacement wheels, ensuring your dishes no longer clatter or get stuck when loading or unloading.

Each set includes 8 wheels for the upper basket and 8 wheels for the lower basket. Manufactured from durable, heat-resistant polypropylene, these wheels are built to match the quality of original components and are compatible with a wide range of dishwasher brands.

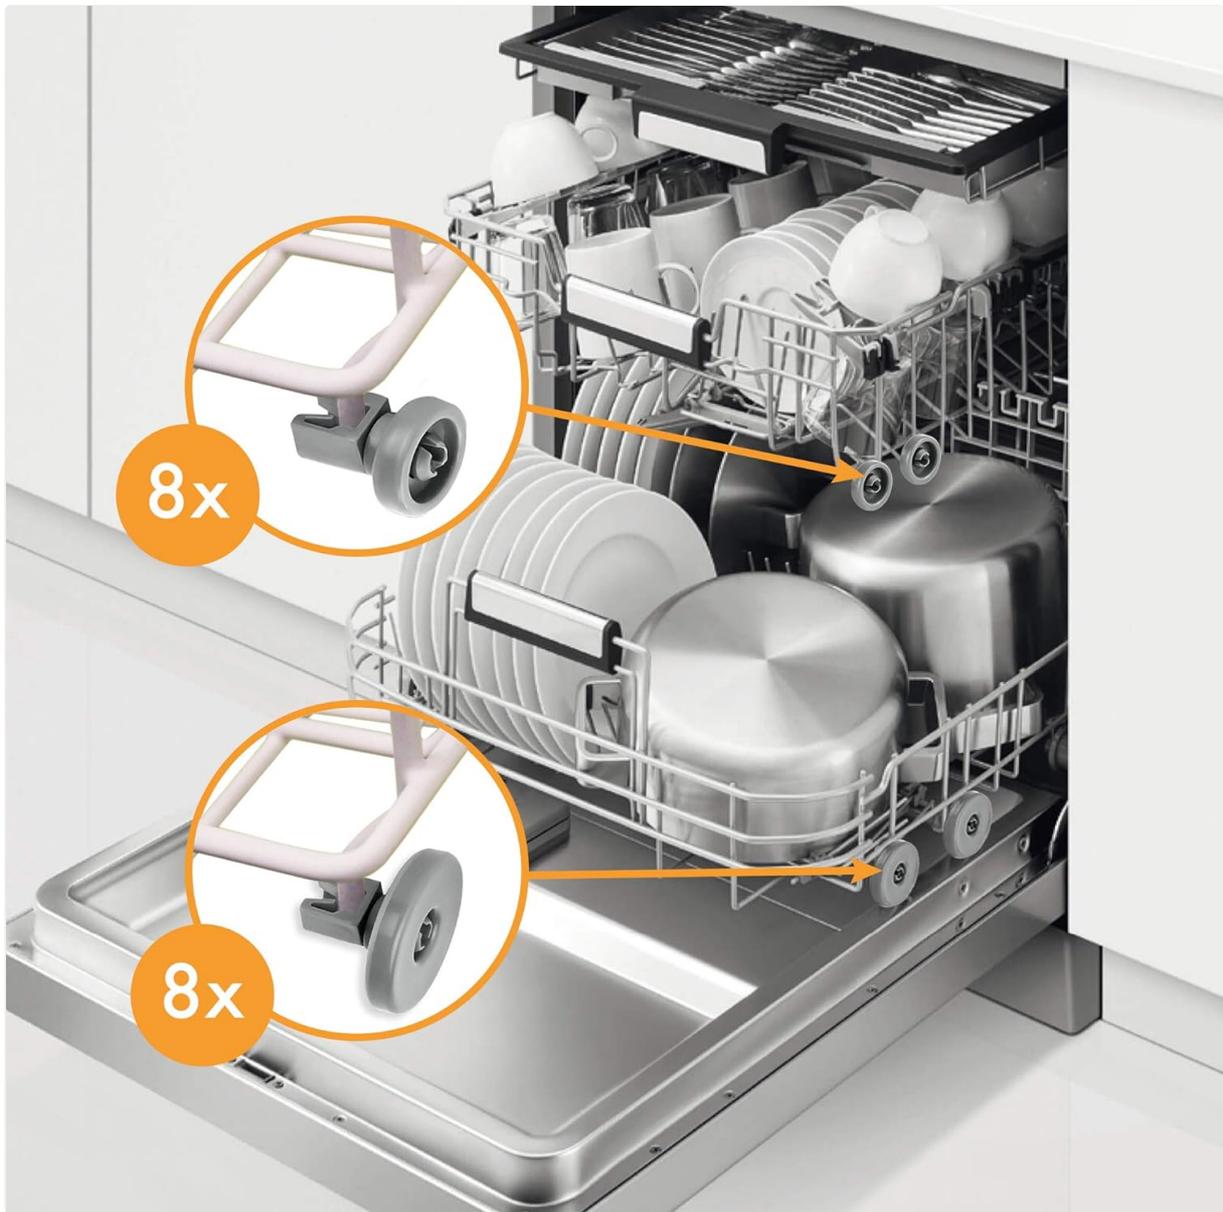


Figure 1: The Nestor&Gamble Universal Dishwasher Basket Wheel Set, showing 8 wheels for the upper basket and 8 wheels for the lower basket.

COMPATIBILITY

This universal wheel set is designed for compatibility with dishwashers from all major manufacturers. The durable polypropylene material ensures a long service life.

UNIVERSELLE KORBROLLEN

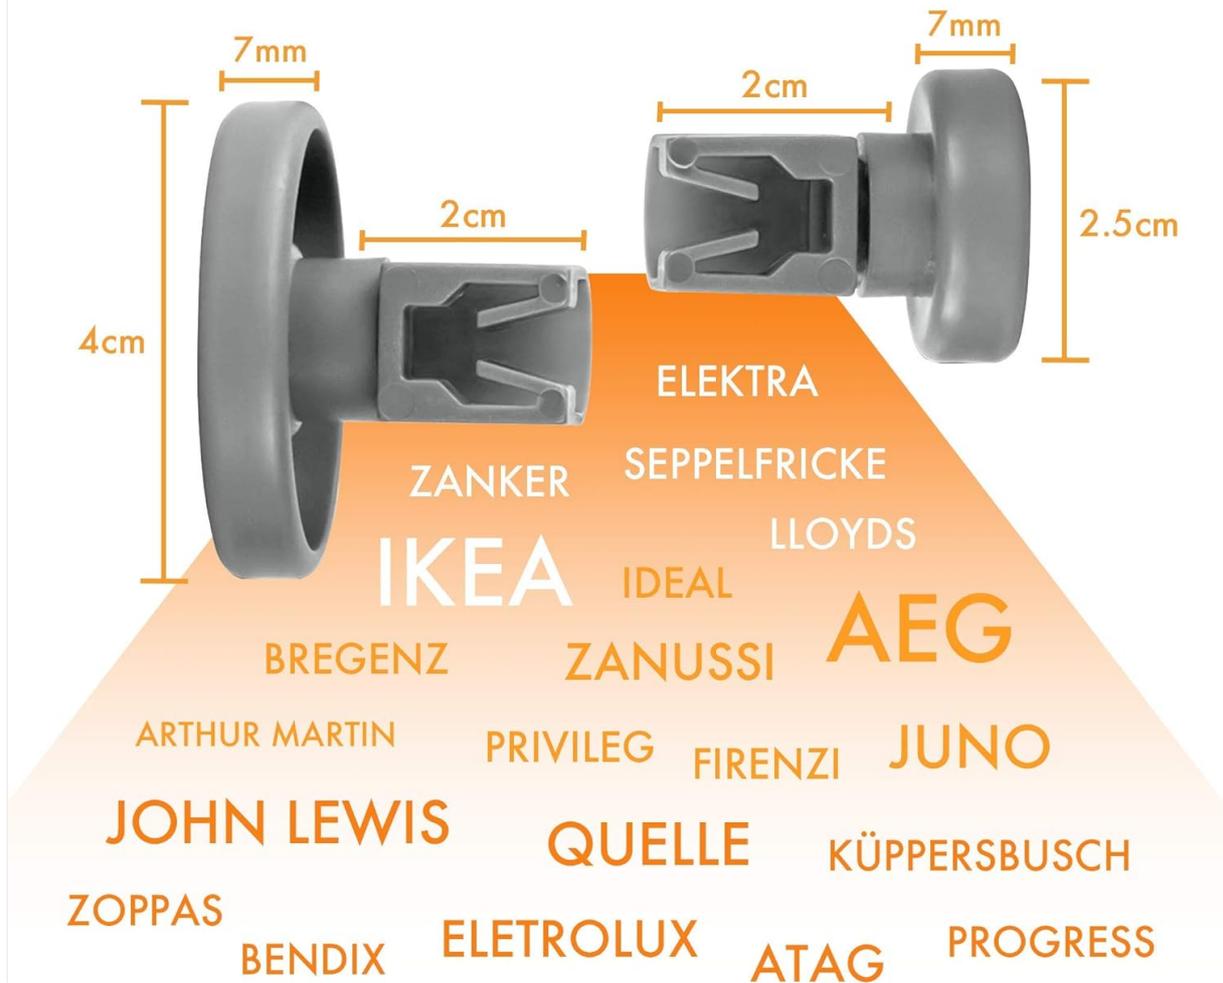


Figure 2: Universal compatibility with various dishwasher brands and key dimensions for the upper (25mm diameter, 8mm tread) and lower (40mm diameter, 7mm tread) basket wheels.



Figure 3: High-quality, durable polypropylene material ensures universal fit and long-life performance.

SETUP AND INSTALLATION

Replacing your dishwasher basket wheels is a simple, tool-free process that takes approximately two minutes per basket. For optimal performance, it is recommended to replace all wheels simultaneously.

- 1. Prepare the Basket:** Remove the dishwasher basket from the dishwasher. Place it upside down on a flat, stable surface to easily access the wheels.
- 2. Remove Old Wheels:** Gently pull off the old wheels from the basket frame with a slight tilting motion.
- 3. Clean Mounting Area:** Clean the areas where the new wheels will be mounted using hot water and a small amount of dish soap. Ensure the area is free of debris.
- 4. Install New Wheels:** Position a new wheel onto the frame and press it firmly until it clicks securely into place. Repeat for all remaining wheels.

KINDERLEICHTE MONTAGE



Figure 4: Step-by-step installation: 1. Pull off the old wheel. 2. Press on the new wheel until it clicks.

OPERATING

Once the new wheels are installed, your dishwasher baskets will glide smoothly and quietly. This eliminates the jarring and clattering often associated with worn or broken wheels, improving the overall user experience of your dishwasher.

LEICHTGÄNGIGES ROLLEN



Figure 5: Enjoy smooth and effortless rolling of your dishwasher basket, free from bumps or sticking.

MAINTENANCE

The Nestor&Gamble dishwasher basket wheels are made from durable polypropylene and require minimal maintenance. Periodically inspect the wheels for any signs of wear or damage. If a wheel becomes stiff or damaged, follow the installation steps to replace it.

- **Cleaning:** If debris or food particles accumulate around the wheels, clean them with warm soapy water.
- **Replacement:** While designed for longevity, the lifespan of the wheels can vary depending on usage frequency and dishwasher conditions. Replace wheels as needed to maintain smooth operation.

TROUBLESHOOTING

- **Wheels do not fit:**

Ensure you are using the correct size wheel for the basket (25mm diameter for upper, 40mm diameter for lower). While universal, some older or very specific models might have different requirements. Double-check the dimensions against your existing wheels.

- **Basket still clatters or sticks:**

Verify that all old wheels have been completely removed and replaced with new ones. Ensure each new wheel

is securely clicked into place. Check the basket rails for any obstructions or damage that might impede smooth movement.

- **Wheels break prematurely:**

Although made from durable material, excessive force during installation or heavy loads in the basket can cause damage. Ensure baskets are not overloaded and that wheels are installed correctly without undue stress.

SPECIFICATIONS

Brand	Nestor & Gamble
Product Type	Universal Dishwasher Basket Wheel Set
Quantity	16 wheels (8 for upper basket, 8 for lower basket)
Upper Basket Wheel Diameter	25 mm
Upper Basket Wheel Tread Width	8 mm
Lower Basket Wheel Diameter	40 mm
Lower Basket Wheel Tread Width	7 mm
Color	Grey
Material	Durable Polypropylene
Closure Type	Click-fit
Package Dimensions	14.1 x 11.1 x 5.9 cm
Item Weight	80 g

WARRANTY AND SUPPORT

Nestor & Gamble products are manufactured to high-quality standards. For specific warranty information or support regarding your Universal Dishwasher Basket Wheel Set, please refer to the retailer's return policy or contact Nestor & Gamble customer service directly through their official channels. While no explicit warranty period is provided in this manual, standard consumer rights apply.

If you are unsure about compatibility or have any questions, please reach out to the seller or manufacturer for assistance.