

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Maxxter](#) /

› [Maxxter Web Cam ACT-BCAM-01 USB User Manual](#)

## Maxxter Maxxter Web Cam ACT-BCAM-01 USB

# Maxxter Web Cam ACT-BCAM-01 USB User Manual

Model: ACT-BCAM-01 | Brand: Maxxter

## INTRODUCTION

This user manual provides comprehensive instructions for the Maxxter Web Cam ACT-BCAM-01 USB. This compact and versatile camera is designed for various recording needs, offering high-definition video capture and ease of use. Please read this manual thoroughly before operating the device to ensure proper functionality and safety.

## SAFETY INFORMATION

- Do not expose the device to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water and other liquids. It is not waterproof.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Use only the provided USB cable for charging and data transfer.

## PACKAGE CONTENTS



Image: Maxxter Web Cam ACT-BCAM-01 USB, USB cable, and mounting accessories.

Please check the package contents upon unboxing. The standard package should include:

- Maxxter Web Cam ACT-BCAM-01 USB Unit
- USB Cable
- User Manual (this document)
- Mounting Bracket/Clip

## PRODUCT OVERVIEW



Image: Front and side view of the Maxxter Web Cam ACT-BCAM-01 USB, showing the lens and control buttons.



Image: Top-down view of the Maxxter Web Cam ACT-BCAM-01 USB, highlighting the button layout.



Image: Diagram illustrating key features such as 140-degree wide viewing angle, night vision, motion detection, support for storage cards, and the 360-degree adjustable bracket. Dimensions are also shown.

## Key Components:

- **Lens:** High-definition camera lens for video recording.
- **USB Port:** For charging and data transfer.
- **MicroSD Card Slot:** For expandable storage (card not included).
- **Power/Mode Button:** To turn the device on/off and switch between modes.
- **Record Button:** To start and stop recording.
- **Indicator Lights:** Provide status feedback (e.g., power, recording, charging).

## SETUP

---

### 1. Charging the Device:

1. Connect the small end of the USB cable to the camera's USB port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The indicator light will show charging status (e.g., solid red while charging, off when fully charged).

### 2. Inserting a MicroSD Card:

1. Ensure the camera is turned off.
2. Locate the MicroSD card slot on the side of the camera.
3. Gently insert a MicroSD card (Class 10 or higher, up to 32GB recommended) into the slot until it clicks into place.
4. To remove, push the card in slightly until it springs out.

## OPERATING INSTRUCTIONS

---

### Power On/Off:

- **To Power On:** Press and hold the Power/Mode button for 2-3 seconds. The indicator light will illuminate.

- **To Power Off:** Press and hold the Power/Mode button for 5-6 seconds until the indicator light turns off.

## Video Recording:

1. Ensure the camera is powered on and a MicroSD card is inserted.
2. Press the Record button once to start video recording. The indicator light will flash.
3. Press the Record button again to stop recording. The indicator light will stop flashing and return to standby mode.

## Motion Detection Recording:

This feature allows the camera to record only when motion is detected, conserving battery and storage space.

1. While in standby mode, press the Power/Mode button twice quickly to enter motion detection mode. The indicator light will change (refer to device specific light pattern).
2. The camera will automatically start recording when motion is detected and stop when motion ceases.
3. To exit motion detection mode, press the Power/Mode button once.

## Connecting to Computer:

To access recorded files, connect the camera to your computer using the provided USB cable. The camera will appear as a removable disk drive.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth. Do not use liquid cleaners or solvents.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery; Device malfunction.	Charge the camera for at least 2 hours. If still unresponsive, contact support.
Cannot record video.	No MicroSD card; Card full or corrupted; Incorrect card format.	Insert a MicroSD card. Check card capacity. Format the card (FAT32) on a computer. Try a different card.
Computer does not recognize the camera.	Faulty USB cable; Driver issue; Incorrect connection mode.	Try a different USB port or cable. Restart your computer. Ensure the camera is powered on when connected.
Poor video quality.	Low light conditions; Dirty lens; Incorrect settings.	Ensure adequate lighting. Clean the camera lens.

## SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model	Maxxter Web Cam ACT-BCAM-01 USB
Brand	Maxxter
Connectivity Technology	USB
Video Resolution	720p or 1080p
Max Focal Length	22 Millimeters
Special Features	Low light capability, Motion detection
Dimensions (L x W x H)	20 x 30 x 20 cm
Weight	40 grams
Supported Storage	MicroSD (SDHC)
Video Capture Format	MP4
Audio Format	PCM, AAC
Focus Type	Manual Focus
Water Resistance	Not waterproof

## WARRANTY AND SUPPORT

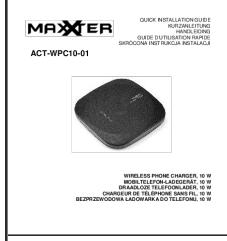
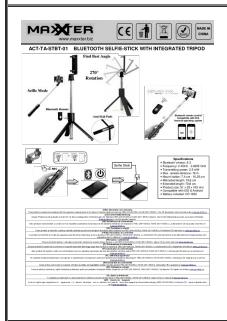
For warranty information and technical support, please refer to the official Maxxter website or contact your local retailer. Keep your purchase receipt as proof of purchase.

*Note: Information regarding spare parts availability and software updates is not available at this time.*

© 2024 Maxxter. All rights reserved.

## Related Documents - Maxxter Web Cam ACT-BCAM-01 USB

	<p><a href="#"><u>Maxxter ACT-BCAM-01 HD Body Cam User Manual and Specifications</u></a></p> <p>Comprehensive user manual and specifications for the Maxxter ACT-BCAM-01 HD Body Cam, covering operation, charging, recording modes, photo, night vision, and technical details.</p>
	<p><a href="#"><u>Maxxter ACT-BCAM-01 HD Body Camera User Manual</u></a></p> <p>This document provides operating instructions, charging information, video recording modes (720p, 1080p, motion sensor), photo mode, night vision, and file management for the Maxxter ACT-BCAM-01 HD Body Camera.</p>

 <p><b>MAXXTER</b> ACT-DACW-01</p> <p>DIGITAL ALARM CLOCK WITH WIRELESS CHARGING FUNCTION DISPOSITIVO DE DESPERTADOR DIGITAL CON CARGA INALÁMBRICA RÉVEIL NUMÉRIQUE AVEC FONCTION DE CHARGEMENT SANS FIL DIGITAL ALARMEUHR MIT WIRELESS CHARGING-FUNKTION ЦИФРОВЫЙ РЕЛЕЙНЫЙ ДИСПЛЕЙ С ФУНКЦИЕЙ БЕЗДАТНОГО ЗАРЯДКИ DISPOSITIVO DE ALARMA DIGITAL CON FUNCIÓN DE CARGA INALÁMBRICA DISPOSITIVO DIGITALE CON FUNZIONE DI CARICA INALAMBRICA</p>	<p><a href="#"><b>Maxxter ACT-DACW-01 Digital Alarm Clock with Wireless Charging User Manual</b></a></p> <p>This user manual provides instructions for the Maxxter ACT-DACW-01 Digital Alarm Clock with Wireless Charging Function. It covers features, specifications, product overview, and detailed operating instructions for setting time, date, and alarms, as well as display and power-saving settings.</p>
 <p><b>MAXXTER</b> ACT-WPC10-01</p> <p>WIRELESS PHONE CHARGER: 10 W DISPOSITIVO DE CARGA INALÁMBRICA: 10 W CHARGEUR DE TÉLÉPHONE SANS FIL: 10 W BEZDRŽOVACÍ DEVICE NA CHARGOVÁNÍ MÓBILNÉHO TELEFONU: 10 W</p>	<p><a href="#"><b>Maxxter ACT-WPC10-01 Wireless Phone Charger 10W Quick Installation Guide</b></a></p> <p>Quick installation guide for the Maxxter ACT-WPC10-01 wireless phone charger. Features include 10W fast wireless charging compatible with Qi-certified devices. Specifications include input and output voltages and rated power.</p>
 <p><b>MAXXTER</b> ACT-DACW-01</p> <p>DIGITAL ALARM CLOCK WITH WIRELESS CHARGING FUNCTION DISPOSITIVO DE DESPERTADOR DIGITAL CON CARGA INALÁMBRICA RÉVEIL NUMÉRIQUE AVEC FONCTION DE CHARGEMENT SANS FIL DIGITAL ALARMEUHR MIT WIRELESS CHARGING-FUNKTION ЦИФРОВЫЙ РЕЛЕЙНЫЙ ДИСПЛЕЙ С ФУНКЦИЕЙ БЕЗДАТНОГО ЗАРЯДКИ DISPOSITIVO DE ALARMA DIGITAL CON FUNCIÓN DE CARGA INALÁMBRICA DISPOSITIVO DIGITALE CON FUNZIONE DI CARICA INALAMBRICA</p>	<p><a href="#"><b>Maxxter Digital Alarm Clock with Wireless Charging Function</b></a></p> <p>Information about the Maxxter Digital Alarm Clock with Wireless Charging Function, featuring dual alarms, a large LCD display, and wireless charging capabilities. Includes specifications and multilingual descriptions.</p>
 <p><b>MAXXTER</b> ACT-TA-STBT-01</p> <p>BLUETOOTH SELFIE STICK WITH INTEGRATED TRIPOD DISPOSITIVO DE SELFIE CON STICK INALÁMBRICO CON TRIPOD INTEGRADO SELFIE STICK AVEC STICK INALAMBRIQUE INTEGRÉ BLUETOOTH SELFIE STICK MIT INTEGRIERTER TRIPOD БЛЮТУЗ СЕЙФИ СТИК С ИНТЕГРИРОВАННЫМ ТРИПОДОМ DISPOSITIVO DE SELFIE CON STICK INALÁMBRICO CON TRIPOD INTEGRADO SELFIE STICK CON STICK INALAMBRICO INTEGRADO</p>	<p><a href="#"><b>Maxxter ACT-TA-STBT-01 Bluetooth Selfie Stick with Integrated Tripod User Guide</b></a></p> <p>User guide for the Maxxter ACT-TA-STBT-01 Bluetooth selfie stick with integrated tripod. Learn about its features, specifications, and responsible disposal.</p>