



Manuals.plus /

› KAKDA-STORE /

› KAKDA-STORE RM-D1155 Universal Remote Control User Manual

KAKDA-STORE RM-D1155

KAKDA-STORE RM-D1155 Universal Remote Control User Manual

Model: RM-D1155

1. INTRODUCTION

Thank you for choosing the KAKDA-STORE RM-D1155 Universal Remote Control. This remote is designed to provide convenient control for a variety of devices, including Air Conditioners, Televisions, DVB-T2 receivers, and Satellite Television Receivers, particularly those compatible with Huayu systems. This manual will guide you through the setup, operation, and maintenance of your new remote control.

2. SETUP

2.1 Battery Installation

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2.1: Battery compartment with cover removed, showing battery placement.

2.2 Initial Device Pairing/Programming

The RM-D1155 is a universal remote. Depending on your specific device (TV, DVB-T2, Air Conditioner, Satellite Receiver), it may require a programming code or an automatic search function to establish communication. Please refer to the specific programming instructions provided with your device or search for compatible codes online if direct operation is not achieved immediately after battery installation. For Huayu compatible devices, the remote may function directly.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your RM-D1155 remote control.



Figure 3.1: Front view of the RM-D1155 Universal Remote Control.

Button	Function
TV Power (Red)	Turns the TV power ON/OFF.
DVB Power (Green)	Turns the DVB/Satellite Receiver power ON/OFF.
SUB-T	Activates/Deactivates subtitles.
FAV	Accesses favorite channels list.
AV/TV	Switches between AV input and TV tuner.
VOL+ / VOL-	Increases / Decreases volume.
MUTE	Mutes / Unmutes audio.
CH+ / CH-	Changes channels up / down.
GOTO	Go to a specific time or chapter during playback.
TEXT	Accesses Teletext function.
USB	Switches to USB input or media playback.
PAGE+ / PAGE-	Navigates through pages or lists.
MENU	Opens the main menu of the device.
EXIT	Exits the current menu or function.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selection.
EPG	Accesses Electronic Program Guide.
INFO	Displays program information.
Number Buttons (0-9)	Direct channel selection or data input.
TV/RADIO	Switches between TV and Radio modes.
Playback Controls (Rewind, Play/Pause, Fast Forward, Previous, Stop, Next)	Controls media playback functions.
REC (Red)	Initiates recording (if supported by the device).
Color Buttons (Red, Green, Yellow, Blue)	Functions vary by device and menu context.

4. MAINTENANCE

4.1 Cleaning the Remote

To maintain the remote control's appearance and functionality:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.
- Ensure no moisture enters the battery compartment or button crevices.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of old batteries responsibly according to local regulations.

4.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly installed with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote's infrared emitter and the device's receiver. Obstructions can block the signal.
 - Make sure you are within the effective operating range of the remote.
- **Specific buttons not working:**
 - Clean the remote control, especially around the buttons, to remove any dirt or debris that might be obstructing them.
 - If the remote is universal, ensure it is correctly programmed for the specific device you are trying to control.
- **Device not responding to commands:**
 - Verify that the device itself is powered on and functioning correctly.
 - If the remote is universal, try reprogramming it for the device.

6. SPECIFICATIONS

- **Brand:** KAKDA-STORE
- **Model:** RM-D1155
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Air Conditioner, Television, DVB-T2 Receiver, Satellite Television Receiver (Huayu compatible)
- **Power Source:** 2 x AAA Batteries (not included)

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer directly. As this is a universal remote, specific programming assistance may also be available from the manufacturer of the device you are trying to control.