

DmofwHi D-GNK902A

DmofwHi Gooseneck Electric Kettle (Model D-GNK902A) Instruction Manual

Model: D-GNK902A | Brand: DmofwHi

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your DmofwHi Gooseneck Electric Kettle. Please read these instructions thoroughly before first use and retain for future reference. This 1.0L electric kettle is designed for heating water for beverages such as coffee and tea, featuring a gooseneck spout for precise pouring control and a 100% stainless steel interior.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact the manufacturer for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The kettle body will become hot during operation. Avoid direct contact with the kettle body while heating and immediately after

boiling. Always use the anti-slip grip handle.

- Ensure the lid is securely closed during operation to prevent hot water from splashing.
- This kettle features boil-dry protection. If the kettle is accidentally switched on without water, it will automatically shut off. Allow the kettle to cool completely before refilling and restarting.

PRODUCT OVERVIEW

Familiarize yourself with the components of your DmofwHi Gooseneck Electric Kettle.



Image 1: Front view of the DmofwHi Gooseneck Electric Kettle in green, showing the gooseneck spout, handle, lid, and power base.

- **Gooseneck Spout:** Designed for precise pouring control, ideal for pour-over coffee.
- **Lid:** Removable lid for easy filling and cleaning.
- **Handle:** Ergonomic, anti-slip grip handle for safe handling.
- **Kettle Body:** 1.0L capacity, constructed from 304 stainless steel.
- **Power Base:** Detachable base with power cord and ON/OFF switch.

- **Indicator Light:** Illuminates when the kettle is heating.
- **MAX Fill Line:** Located inside the kettle, indicates maximum water level.

304 Stainless Steel Interior

—.

Safety Food- Grade Material

Purest Water



Image 2: Close-up of the kettle's interior, highlighting the 304 stainless steel construction and the 'MAX' fill line.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water up to the MAX fill line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure it is away from the edge of the counter and out of reach of children.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your kettle (120V/60Hz).

OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Remove the lid and fill the kettle with fresh, cold water. Do not fill below the MIN mark or above the MAX fill line (1.0L). Overfilling may cause boiling water to spill out.
2. **Secure the Lid:** Place the lid back onto the kettle securely.
3. **Place on Base:** Position the kettle firmly onto the power base.
4. **Start Boiling:** Press the ON/OFF switch located on the power base. The indicator light will illuminate, signifying that the kettle is heating.
5. **Automatic Shutoff:** The kettle will automatically turn off once the water reaches a rolling boil. The indicator light will extinguish.
6. **Pouring:** Carefully lift the kettle from its base using the handle. The gooseneck spout allows for controlled and precise pouring, ideal for pour-over coffee or tea.
7. **Re-boiling:** If you need to re-boil water immediately after it has shut off, wait a few seconds for the internal thermostat to reset, then press the ON/OFF switch again.



Image 3: Demonstrates pouring water from the gooseneck kettle into a pour-over coffee setup.

Precise Control



Elegant Gooseneck Spout for
Refined Pour-Over Coffee

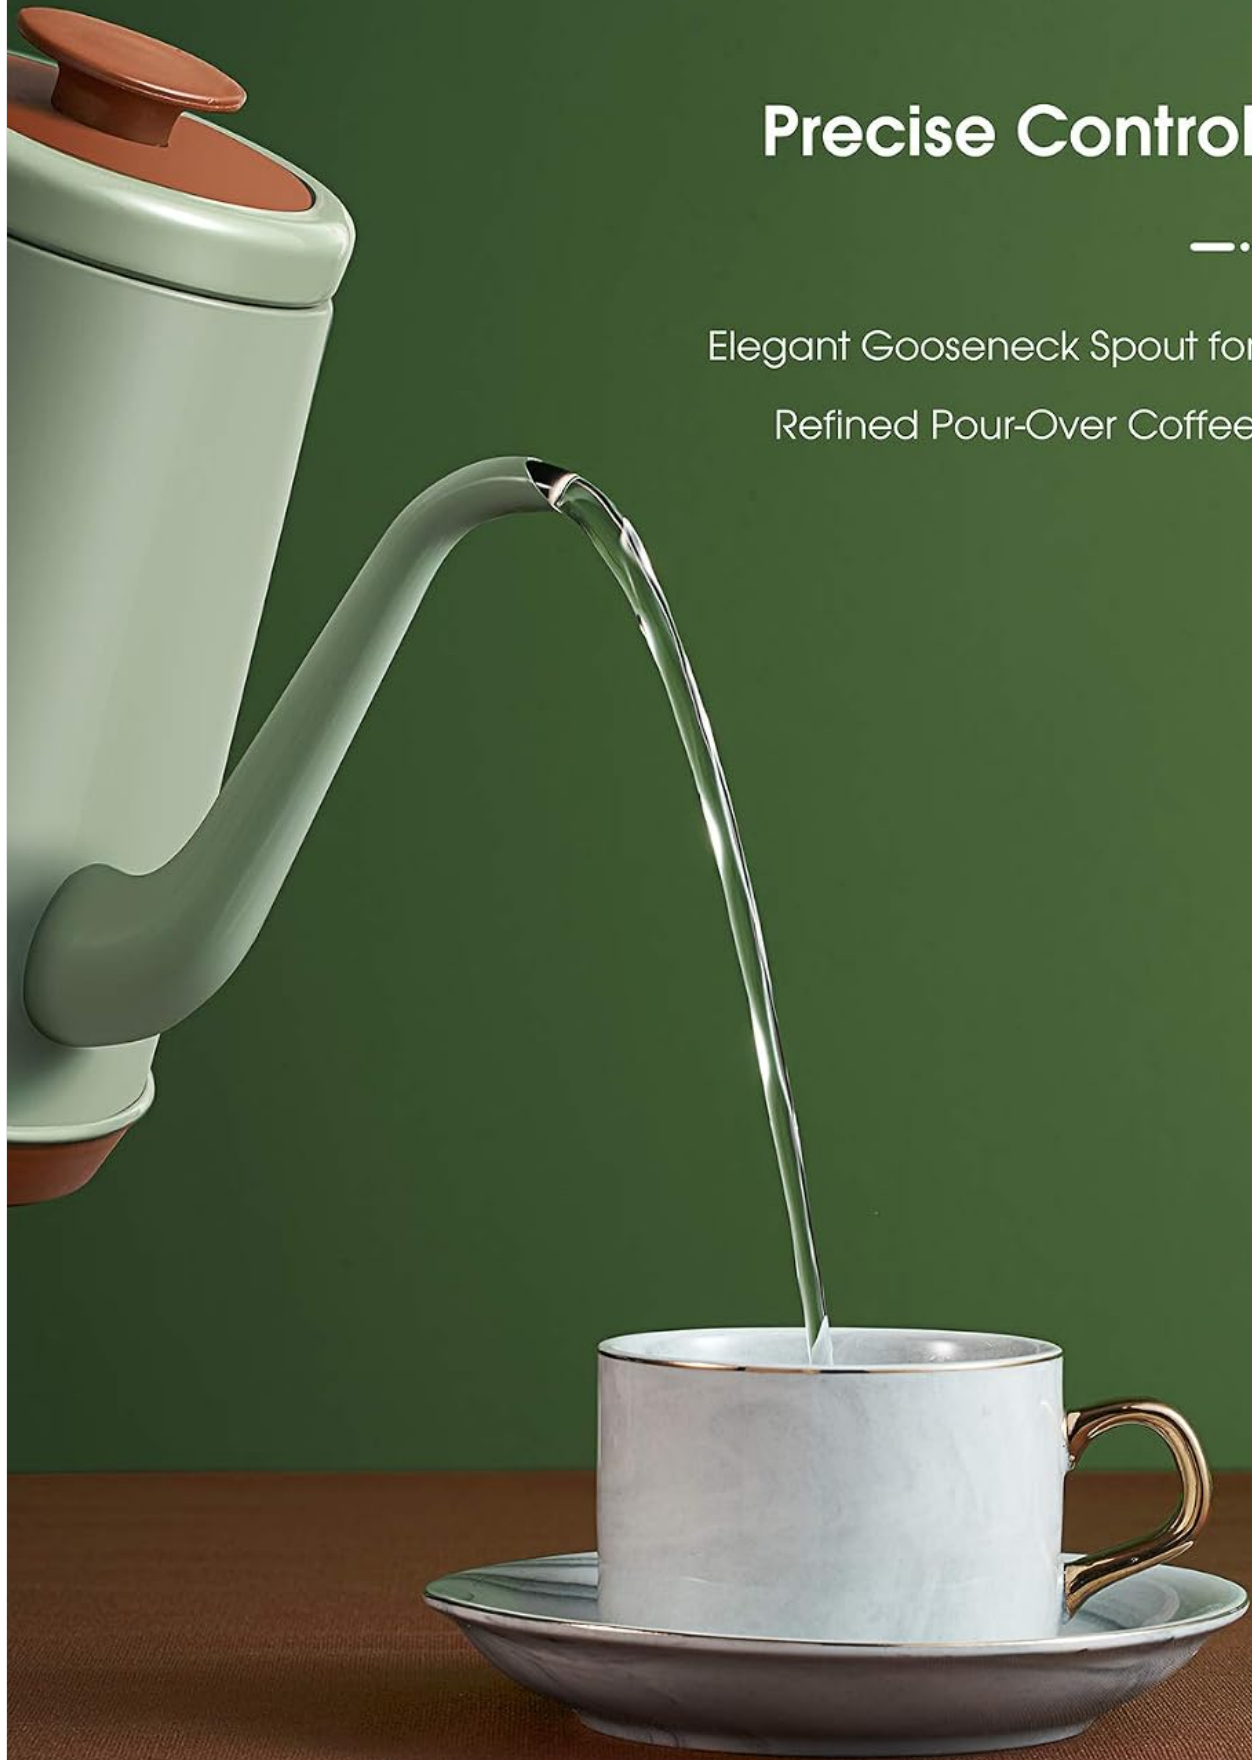


Image 4: Illustrates the precise control offered by the gooseneck spout when pouring into a small cup.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your kettle.

- **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Interior Cleaning (Hand Wash):** The interior of the kettle can be cleaned by hand. Use a soft sponge and mild dish soap if necessary. Rinse thoroughly.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
 - a. Fill the kettle with a mixture of one part white vinegar and two parts water.
 - b. Bring the mixture to a boil and then let it stand for at least 30 minutes, or longer for heavy deposits.
 - c. Discard the mixture and rinse the kettle thoroughly with fresh water several times.
 - d. For stubborn deposits, a non-abrasive descaling solution designed for kettles can be used following the product's instructions.
- **Storage:** When not in use, store the kettle in a dry place. You can wrap the power cord around the base for neat storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Kettle not properly seated on the base. Power cord not plugged in. No power at the outlet. Boil-dry protection activated.	Ensure kettle is correctly placed on the power base. Check if the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Allow the kettle to cool down completely (approx. 15-20 minutes) before refilling and restarting.
Water takes too long to boil.	Excessive limescale buildup. Kettle overfilled.	Descale the kettle as per the "Maintenance and Cleaning" section. Ensure water level is between MIN and MAX lines.
Kettle switches off before boiling.	Boil-dry protection activated (if kettle was low on water). Limescale buildup affecting sensor.	Allow kettle to cool down, then refill to appropriate level and restart. Descale the kettle.
Water has an unusual taste.	New kettle residue. Limescale buildup.	Perform initial cleaning steps again (boil and discard water several times). Descale the kettle.

SPECIFICATIONS

Brand:	DmofwHi
Model Name:	Electric Kettle (D-GNK902A)
Capacity:	1.0 Liter
Material:	304 Stainless Steel Interior
Color:	Green
Special Features:	Automatic Shut-Off, Boil Dry Protection, Indicator Light, Overheat Protection, Removable Lid
Power:	1000W
Voltage:	120V/60Hz (Standard US)
Product Dimensions:	5.5"L x 10"W x 9"H
Item Weight:	2.2 Pounds (approx. 1 kg)
Manufacturer:	FeiweiHome
UPC:	674345754340
Country of Origin:	China

WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact DmofwHi customer support directly. Keep your purchase receipt as proof of purchase.

If you encounter any issues or have questions regarding your DmofwHi Gooseneck Electric Kettle, please contact the manufacturer or seller for assistance. Contact details are typically available on the product packaging or the brand's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question