

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TENMIYA](#) /

› [TENMIYA A26 Portable Bluetooth Speaker User Manual](#)

TENMIYA A26

User Manual for Portable Bluetooth Speaker

Brand: TENMIYA | Model: A26

INTRODUCTION

Thank you for purchasing the TENMIYA A26 Portable Bluetooth Speaker. This speaker is designed to provide a rich audio experience with its double subwoofer and Bluetooth 5.0 connectivity. It supports various playback modes including FM radio, TF/SD card, USB flash drive, and AUX input. This manual provides detailed instructions for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity.

PACKAGE CONTENTS

Please check the package carefully to ensure all items are present:

- 1 x A26 Bluetooth speaker (built-in 4000 mAh rechargeable lithium battery)
- 1 x Remote control (without battery)
- 1 x AUX cable
- 1 x USB cable
- 1 x Phone holder
- 1 x User manual
- 1 x Retail box

PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your TENMIYA A26 speaker.



Figure 1: Front view of the TENMIYA A26 Portable Bluetooth Speaker, showing the main speaker unit and the included remote control. The speaker features dual woofers and a central control panel.

4000mAh battery

10 Hours playtime

Five Tuning Control

- Master Volume Tuning
- Bass Tuning
- Treble Tuning
- Microphone Echo Tuning
- Microphone Volume Tuning



Figure 2: Side view of the TENMIYA A26 speaker, illustrating its dimensions (5x8x9.5 inches) and various input ports including MicroSD, AUX, IR remote control, Mic, Bluetooth, and USB sockets. A phone holder is integrated on top.

Multi-functional Speaker

SUPPORT
BLUETOOTH

5.0

Wireless range up to 100 feet.



Bluetooth



Microphone



FM Radio



TF Card Play



AUX Play



USB Play

Figure 3: Diagram highlighting the multi-functional capabilities of the TENMIYA A26 speaker, including Bluetooth 5.0 support (up to 100 feet wireless range), Microphone input, FM Radio, TF Card Play, AUX Play, and USB Play.

SETUP GUIDE

- Charging the Speaker:** Before first use, fully charge the speaker using the provided USB cable. Connect the USB cable to the speaker's charging port and a compatible USB power adapter (not included). The red light will turn off when fully charged.
- Remote Control Batteries:** The remote control requires two AAA 1.5 Volt batteries (not included). Insert them into the remote control's battery compartment, observing the correct polarity.
- Power On/Off:** Press and hold the power button on the speaker or remote control to turn the unit ON or OFF.

OPERATING INSTRUCTIONS

1. Bluetooth Mode

- Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a voice prompt.
- Enable Bluetooth on your device (smartphone, tablet, laptop, etc.).
- Search for "A26" in your device's Bluetooth list and select it to pair.

4. Once successfully paired, you will hear a confirmation sound. You can now play audio wirelessly from your device.
5. The effective wireless transmission range is up to 100 feet.

2. FM Radio Mode

1. Press the "MODE" button on the speaker or remote control to switch to FM Radio mode.
2. To automatically search and save available stations, long press the "Play/Pause" button. The speaker will scan and store stations.
3. Use the "Previous/Next" buttons to navigate between saved stations.
4. Alternatively, use the numeric keypad on the remote control to manually enter the frequency of your desired station.

3. AUX Input Mode

1. Connect one end of the provided 3.5mm AUX cable to the AUX port on the speaker.
2. Connect the other end of the AUX cable to the audio output jack of your external device (MP3 player, computer, TV, etc.).
3. The speaker will automatically switch to AUX mode. If not, press the "MODE" button until AUX mode is selected.
4. Play audio from your connected device.

4. USB Flash Drive / TF (SD) Card Playback

1. Insert a USB flash drive or TF/SD card (with MP3 music files) into the corresponding port on the speaker.
2. The speaker will automatically detect the storage device and begin playing music. If not, press the "MODE" button to switch to the correct mode.
3. Use the playback controls (Play/Pause, Previous/Next) on the speaker or remote control to manage your music.

5. Microphone Connection (Karaoke)

1. Connect a microphone (not included) to the MIC input port on the speaker.
2. Adjust the Microphone Volume and Echo Tuning using the dedicated controls on the speaker or remote control for desired effects.
3. You can use this feature for karaoke or as a PA system.

6. Remote Control Functions

The intelligent remote control allows you to manage all speaker functions remotely. Ensure batteries are correctly installed.

- **Power:** Turn speaker ON/OFF.
- **MODE:** Switch between Bluetooth, FM, AUX, USB, TF Card modes.
- **Volume +/-:** Adjust master volume.
- **EQ:** Select different equalizer presets (e.g., Rock, Pop, Jazz, Classical, Country, Normal).
- **Treble/Bass +/-:** Adjust treble and bass levels independently.
- **Play/Pause:** Play or pause current track/radio.
- **Previous/Next:** Skip tracks or change radio stations.
- **Numeric Keypad:** Direct input for FM frequencies or track numbers.

7. Phone Holder

The integrated phone holder on top of the speaker can securely hold your smartphone or tablet, providing a convenient viewing angle while enjoying audio or video content.

MAINTENANCE AND CARE

- Keep the speaker away from water, moisture, and direct sunlight. This product is NOT waterproof.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping or subjecting the speaker to strong impacts.
- When not in use for extended periods, store the speaker in a cool, dry place and charge it periodically to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not pressed correctly.	Charge the speaker fully. Press and hold the power button for a few seconds.
No sound.	Volume too low; Incorrect mode selected; Device not connected properly.	Increase volume. Press MODE button to select correct input. Reconnect Bluetooth/AUX cable.
Bluetooth connection fails.	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker.	Ensure speaker is in Bluetooth mode. Turn on device Bluetooth. Move device closer to speaker (within 100ft).
Remote control not working.	No batteries; Incorrect battery polarity; Obstruction between remote and speaker.	Insert two AAA 1.5V batteries. Check battery polarity. Ensure clear line of sight to speaker's IR receiver.
Loud startup/low battery announcements.	This is a fixed feature of the speaker.	The volume of these announcements cannot be adjusted. Ensure the speaker is charged to avoid low battery alerts.

SPECIFICATIONS

Feature	Detail
Product Type	A26 Bluetooth Speaker
Speaker Output Power	10W*2 + 5W*2 (Total 30W peak)
Speaker Driver Size	2.5" * 4
Frequency Response	60Hz-20KHz
Input Impedance	10 kΩ
Input Voltage	DC 5V-1A

Feature	Detail
Product Size	5*8*9.5 inches (16.54"D x 7.09"W x 9.06"H)
Playing Time	Up to 10 hours (at 60% volume)
Battery Capacity	4000mAh (4E+3 Milliamp Hours)
Functions	Bluetooth, MP3 music player, FM radio, TF Card, AUX, USB music player, Remote control, EQ, Karaoke
Compatible Devices	Computer, MP3/MP4 players, Smart Phones, Laptop, Tablet
Wireless Communication	Bluetooth 5.0
Control Method	Remote
Color	Black
Item Weight	4.42 pounds
Is Waterproof	FALSE

OFFICIAL PRODUCT VIDEOS

There are no official product videos from the seller available for this product at this time.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or the official TENMIYA website. Keep your purchase receipt for warranty claims.