

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Spirich](#) /

› [Spirich Floor Corner Cabinet \(Model SS20-SPT-BA411W\) Instruction Manual](#)

Spirich SS20-SPT-BA411W

Spirich Floor Corner Cabinet (Model SS20-SPT-BA411W) Instruction Manual

Brand: Spirich | Model: SS20-SPT-BA411W

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your new Spirich Floor Corner Cabinet. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image 1: The Spirich Floor Corner Cabinet, designed to fit neatly into room corners.

2. IMPORTANT SAFETY INFORMATION

WARNING:

- Always secure the cabinet to the wall using the provided hardware for stability to prevent tipping.
- Be cautious when adjusting the shelf to avoid pinch injuries.
- Do not allow children to climb on the unit.
- Do not place excessively heavy items on shelves or drawers.

3. PACKAGE CONTENTS

Before assembly, verify that all parts and hardware are present and undamaged. If any items are missing or damaged, do not proceed with assembly. Contact customer service for assistance.

3.1 Components:

- Top Panel
- Side Panels (Left and Right)
- Bottom Panel
- Back Panels
- Doors (x2)
- Adjustable Shelf (x1)
- Base Support Pieces

3.2 Hardware:

- Screws (various sizes)
- Dowel Rods
- Cam Locks and Pins
- Hinges (x2 pairs)
- Door Knobs (x2)
- Magnetic Catches (x2)
- Anti-tipping Hardware (wall anchor, strap)

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow these steps carefully. It is recommended to have a second person for assistance during certain steps.

4.1 Tools Required:

- Phillips Head Screwdriver
- Hammer (optional, for dowels)

4.2 Step-by-Step Assembly:

1. **Unpack and Identify Parts:** Carefully unpack all components and hardware. Lay them out on a clean, soft surface to prevent scratches. Refer to the parts list to identify each piece.
2. **Assemble the Base:** Attach the base support pieces to the bottom panel using the provided screws and dowel rods. Ensure all connections are secure.
3. **Attach Side Panels:** Connect the side panels to the bottom panel and the base using cam locks and pins. Ensure the pre-drilled holes for the adjustable shelf are facing inwards.
4. **Install Adjustable Shelf Supports:** Insert the shelf pins into the desired holes on the inner sides of the cabinet.
5. **Insert Adjustable Shelf:** Place the adjustable shelf onto the installed shelf pins.
6. **Attach Top Panel:** Secure the top panel to the assembled frame using cam locks and pins.
7. **Install Back Panels:** Slide or screw the back panels into place. Ensure they are flush with the back edges of the cabinet.
8. **Attach Hinges to Doors:** Secure the hinges to the cabinet doors using the smaller screws.
9. **Attach Doors to Cabinet:** Mount the doors to the cabinet frame by attaching the hinges to the pre-drilled holes on the side panels.
10. **Install Door Knobs:** Attach the door knobs to the front of each door.
11. **Install Magnetic Catches:** Secure the magnetic catches to the inside top frame of the cabinet, aligning them with

the metal plates on the doors to ensure proper closure.

- Secure to Wall:** For safety and stability, attach the anti-tipping hardware to the top back of the cabinet and secure it to a wall stud.



Image 2: Detailed dimensions and internal layout of the cabinet, highlighting the adjustable shelf.

5. OPERATING INSTRUCTIONS

5.1 Opening and Closing Doors:

The cabinet features two doors with magnetic catches. To open, gently pull the door knobs. To close, push the doors firmly until the magnetic catches engage, holding them securely in place.



Image 3: Cabinet with one door open, showcasing the interior storage space.

5.2 Adjusting the Shelf:

The interior shelf is adjustable to accommodate items of various heights. To adjust, carefully remove any items from the shelf. Lift the shelf off its pins, reposition the pins to the desired height, and then place the shelf back onto the pins. Ensure the shelf is level and securely seated before placing items back on it.



Image 4: Close-up view of the cabinet's features, including the adjustable shelf mechanism.

6. MAINTENANCE

6.1 Cleaning:

Wipe the cabinet surfaces with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the finish. Dry immediately with a clean cloth.

6.2 General Care:

- Periodically check all screws and connections to ensure they remain tight.
- Avoid exposing the cabinet to excessive moisture or direct sunlight for prolonged periods.
- Do not drag the cabinet when moving it; always lift to prevent damage to the base and floor.

7. TROUBLESHOOTING

7.1 Doors Not Aligning Properly:

If the cabinet doors do not align correctly (e.g., gaps are too large, doors overlap, or doors stick out/sink in), the hinges may need adjustment. Most cabinet hinges allow for three-way adjustment:

- **Side-to-Side Adjustment:** Turn the center screw on the hinge to fine-tune the door spacing. Turning clockwise typically moves the door closer to the cabinet frame, reducing the gap.
- **Depth Adjustment:** Turn the innermost screw on the hinge to move the hinge (and thus the door) forward or backward relative to the cabinet frame. This helps adjust if the doors are sticking out or sinking into the cabinet.
- **Height Adjustment:** Loosen the two screws that attach the hinge plate to the cabinet frame. Adjust the door up or down as needed, then re-tighten the screws.

Make small adjustments and check the door alignment after each turn. Once aligned to your preference, tighten all screws to secure the adjustment.

7.2 Cabinet Instability:

If the cabinet feels wobbly, ensure all assembly screws and cam locks are fully tightened. Confirm that the anti-tipping hardware is securely fastened to a wall stud. If the floor is uneven, consider placing shims under the base for stability.

8. SPECIFICATIONS

Feature	Detail
Brand	Spirich
Model Number	SS20-SPT-BA411W
Color	White
Material	Engineered Wood
Product Dimensions (W x D x H)	23.62" x 12.4" x 31.89"
Item Weight	27.4 Pounds
Weight Limit	35 Pounds
Number of Shelves	2 (1 adjustable)
Mounting Type	Floor Mount
Assembly Required	Yes
UPC	788601002585

9. WARRANTY AND CUSTOMER SUPPORT

For any questions, replacement parts, or assistance with assembly, please contact our customer service team. We are committed to providing quick and courteous support.

Please refer to your purchase documentation for specific warranty details. If you have any issues, please contact the seller directly.

Contact Information:

Email: us.service@spirichllc.com

