

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY RC 4318 P Replacement Remote Control for Telefunken 4K TV

ALLIMITY RC 4318 P

ALLIMITY RC 4318 P Replacement Remote Control for Telefunken 4K TV

INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY RC 4318 P replacement remote control. It is designed to function with various Telefunken 4K TV models, offering a direct replacement for your original remote. Please read this guide carefully to ensure proper setup and operation.

SETUP

Battery Installation

The ALLIMITY RC 4318 P remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: No programming or pairing is typically required for this infrared replacement remote control. It should work directly with compatible Telefunken 4K TV models once batteries are installed.

OPERATING INSTRUCTIONS

The ALLIMITY RC 4318 P remote control provides full functionality for your compatible Telefunken 4K TV. Below is a general overview of the key buttons and their functions. Refer to the images for visual identification.



Image 1: Front view of the ALLIMITY RC 4318 P remote control, showing all buttons.



Image 2: Angled view of the ALLIMITY RC 4318 P remote control, highlighting its ergonomic design.

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select TV channels.
- **Volume Up/Down (V+/V-):** Adjusts the audio volume.
- **Channel Up/Down (P+/P-):** Changes TV channels sequentially.
- **Mute:** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **BACK:** Returns to the previous menu or screen.
- **EXIT:** Exits the current menu or application.
- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.

- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV menu or application.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Control playback of media content.

Ensure a clear line of sight between the remote control and the TV's infrared sensor for optimal performance.

COMPATIBLE TELEFUNKEN 4K TV MODELS

This replacement remote control is compatible with the following Telefunken 4K TV models:

- 40DTF531
- 49DTU652
- D32F289M4CWII
- D32H289N4CWD
- D40U297M4CW
- D43U297N4CWH
- D43U700M4CWH
- D50U293N4CWH
- D55U297N4CWH
- JT-55UBS300
- L24H472F4CWV-WI
- SOMNIA24ESTV
- TE43292S31Y2P
- XU43E512
- 32DTH531
- 55DTU652
- D32H287M4CWI
- D32H289N4CWI
- D40U298N4CWH
- D43U600M4CWII
- D49U700M4CWH
- D50U600M4CWII
- D65U400N4CWH
- JT-65UBS300
- L55U405N4CWH
- SOMNIA40DSTV
- TFL32SWB17/2
- XU55E512

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Always

replace both batteries at the same time with new ones of the same type (AAA).

- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your ALLIMITY RC 4318 P remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Remove any obstructions.
 - Move closer to the TV. The maximum effective range is approximately 10 meters.
- **Specific Buttons Not Working:**
 - This could indicate a faulty button or internal damage. If other buttons work, try cleaning around the unresponsive button.
- **TV Not Responding to Any Remote:**
 - Ensure the TV itself is powered on and not in standby mode.
 - Try using the physical buttons on the TV (if available) to confirm the TV is functional.
 - Unplug the TV from the power outlet for a few minutes, then plug it back in. This can reset the TV's internal systems.

If these steps do not resolve the issue, please contact the seller for further assistance.

SPECIFICATIONS

Brand	ALLIMITY
Model Number	RC 4318 P (QH-RC4318-O)
Connectivity Technology	Infrared (IR)
Special Feature	Ergonomic design
Power Source	2 x AAA Batteries (not included)
Maximum Range	10 Meters
Compatible Devices	Various Telefunken 4K TV models (see "Compatible Telefunken 4K TV Models" section)

WARRANTY AND SUPPORT

Specific warranty information for the ALLIMITY RC 4318 P remote control is not provided in the product details. For any warranty claims, technical support, or further assistance, please contact the original seller or manufacturer directly.

