

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MPM](#) /

› [MPM MRK-17 Multifunctional Food Processor User Manual](#)

## MPM MRK-17

# MPM MRK-17 Multifunctional Food Processor User Manual

Model: MRK-17 | Brand: MPM

## IMPORTANT SAFETY INSTRUCTIONS

Please read this instruction manual carefully before using the appliance and keep it for future reference. Incorrect operation may cause damage to the appliance or injury to the user.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Keep hands and utensils out of the processing bowl while operating to prevent severe personal injury and/or damage to the food processor.
- Blades are sharp. Handle with extreme care when assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Ensure the lid is securely locked in place before operating the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

## PRODUCT OVERVIEW

The MPM MRK-17 is a versatile multifunctional food processor designed to simplify various kitchen tasks. It combines the functions of a chopper, blender, and slicer, making it ideal for preparing fruits, vegetables, dough, and more.



Image: The main unit of the MPM MRK-17 Food Processor, showcasing its compact design.



Image: The MPM MRK-17 Food Processor displayed with all its included accessories on a modern kitchen counter.

## Components List

- Motor Unit (Hand Blender)
- Large Processing Bowl (2 Liters capacity)
- Lid with feeding chute
- Chopping Blade
- Two Cutting Discs (for slicing and grating)
- Two Potato Cutter Attachments (different sizes for fries)
- Kneader Attachment
- Stainless Steel Whisk Head
- Measuring Cup



Image: A detailed view of all individual components and accessories included with the food processor.

## SETUP AND ASSEMBLY

---

### Before First Use

1. Unpack all components and accessories.
2. Wash the processing bowl, lid, chopping blade, cutting discs, potato cutter attachments, kneader, whisk head, and measuring cup in warm soapy water. Rinse thoroughly and dry.
3. Wipe the motor unit with a damp cloth. Do not immerse it in water.

### Assembling the Food Processor

Follow these steps to assemble the food processor for your desired task:

1. Place the processing bowl onto the motor unit base, ensuring it locks securely into position.
2. Insert the desired attachment (e.g., chopping blade, slicing disc, kneader) onto the central shaft inside the bowl. Ensure it sits firmly.
3. Place the lid onto the processing bowl, aligning the tabs and rotating until it locks securely. The appliance will not operate if the lid is not correctly locked.
4. For slicing or grating, use the feeding chute on the lid to add ingredients.

## OPERATION

---

## General Operation

The MPM MRK-17 features 6 speed settings and a Turbo function for maximum power.

1. Ensure the appliance is correctly assembled and the lid is locked.
2. Plug the appliance into a suitable power outlet (220 Volts).
3. Turn the speed control dial on the motor unit to select your desired speed (1-6).
4. For short bursts of maximum power, press and hold the 'Turbo' button.
5. After use, turn the speed dial to '0' and unplug the appliance.



Image: Close-up of the speed control dial and Turbo button on the motor unit.

## Using the Chopping Blade

The chopping blade is ideal for processing fruits, vegetables, nuts, and herbs.

- Insert the chopping blade onto the central shaft in the processing bowl.
- Add ingredients to the bowl. Do not overfill.
- Secure the lid and operate at desired speed. Use pulse action for coarse chopping.

**1. WÜRFELN**

**2. KARTOFFEL  
PÜRIEREN**

**3. HACKEN UND  
SCHNEIDEN**

**4. TEIG KNETEN**

**5. SCHAUM  
SCHLAGEN**

600 ml

400 ml

2000 ml



**MEHRERE FUNKTIONEN**

Image: The food processor actively chopping vegetables, demonstrating its efficiency.

### Using the Slicing/Grating Discs

Use the two cutting discs for uniform slicing or grating of vegetables and cheese.

- Place the desired cutting disc onto the central shaft.
- Secure the lid.
- Feed ingredients through the chute using the food pusher.



Image: Close-up view of the two double-sided cutting discs for various slicing and grating tasks.

## Using the Potato Cutter Attachments

The appliance includes two attachments for cutting potatoes into fries of different sizes.

- Assemble the potato cutter attachment according to the diagram in the manual (refer to image of functions).
- Place peeled potatoes into the feeding chute and push down gently.

## Using the Kneader

The kneader attachment is suitable for preparing dough for bread, cookies, or mixing thick sauces.

- Attach the kneader to the central shaft.
- Add ingredients for dough or sauce.
- Operate at a low to medium speed until desired consistency is achieved.

## Using the Whisk Attachment

The stainless steel whisk head allows you to use the MRK-17 as an immersion blender for whipping cream or egg whites.

- Attach the whisk head to the motor unit.
- Immerse the whisk into the ingredients.
- Operate at a suitable speed until light and fluffy.



Image: A close-up of the stainless steel whisk attachment.

## CLEANING AND MAINTENANCE

---

### Disassembly for Cleaning

1. Always unplug the appliance before disassembling.
2. Carefully remove the lid from the processing bowl.
3. Remove the attachment (blade, disc, kneader, whisk) from the central shaft. Handle sharp blades with extreme caution.
4. Remove the processing bowl from the motor unit base.

### Cleaning Instructions

- The processing bowl, lid, chopping blade, cutting discs, potato cutter attachments, kneader, and whisk head are **dishwasher safe** for convenient cleaning.
- Alternatively, wash these parts in warm soapy water, rinse, and dry thoroughly.
- Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or any other liquid.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surfaces.

### Storage

Store the appliance and its accessories in a dry, safe place, out of reach of children. Ensure all parts are clean and dry before storage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Lid not securely locked; Bowl not correctly assembled.	Check power connection; Ensure lid is locked; Reassemble bowl correctly.
Poor processing performance.	Overfilling the bowl; Ingredients too large; Incorrect speed setting.	Reduce quantity of ingredients; Cut ingredients into smaller pieces; Adjust speed or use Turbo function.
Motor stops during operation.	Overload protection activated.	Unplug, remove some ingredients, let motor cool down for 15-20 minutes before restarting.

## SPECIFICATIONS

Feature	Detail
Brand	MPM
Model Number	MRK-17
Color	Black
Product Dimensions (L x W x H)	2.79 x 24.64 x 16.51 cm (13.58 x 7.48 x 11.42 inches)
Capacity	2 Liters
Power	800 Watts
Voltage	220 Volts
Material	Stainless Steel
Number of Speeds	6
Noise Level	44 Decibels
Control Type	Push Button / Dial
Item Weight	2 Kilograms
Country of Origin	USA



Image: Diagram illustrating the dimensions of the MPM MRK-17 Food Processor.

## WARRANTY AND SUPPORT

---

### Warranty Information

This MPM MRK-17 Food Processor comes with a **2-year warranty on spare parts** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

### Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact MPM customer support. Contact details can typically be found on the manufacturer's official website or on your product packaging.

