

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BOIFUN](#) /

› [BOIFUN 15.6-inch Portable DVD Player Model BFN-161 Instruction Manual](#)

## BOIFUN BFN-161

# BOIFUN 15.6-inch Portable DVD Player Model BFN-161 Instruction Manual

Your guide to setting up and using your BOIFUN Portable DVD Player.

## 1. INTRODUCTION

Thank you for purchasing the BOIFUN 15.6-inch Portable DVD Player, Model BFN-161. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and keep it for future reference.



Image: The BOIFUN 15.6-inch Portable DVD Player, showcasing its large, high-quality display.

## 2. PRODUCT OVERVIEW

### Key Features

- High-Resolution Display:** 15.6-inch (1280\*800) LED LCD panel for clear visuals.
- Flexible Viewing:** Screen rotates 270 degrees and flips 180 degrees for optimal viewing angles.
- Superior Audio:** Equipped with high-quality dual speakers for an immersive sound experience.
- Multi-Format Support:** Compatible with CD, CD±R, CD±RW, VCD, MINI DVD, DVD, DVD±R, DVD±RW, MP3, JPEG, and more. Supports files from SD cards and USB memory (up to 32GB).
- TV Synchronization:** AV input/output allows connection to a TV for a larger screen viewing experience.

- **Anti-Shock Technology:** Protects disc playback from interruptions caused by vibrations.
- **Region-Free & CPRM Compatible:** Plays legitimate DVDs from all regions and supports CPRM for recorded digital broadcasts.
- **Extended Playback:** Built-in 5000mAh battery provides over 5 hours of continuous playback.
- **Multiple Charging Options:** Includes AC adapter and car charger for versatile power.
- **Last Memory Function:** Resumes playback from the last stopped position.

## Package Contents

- BOIFUN 15.6-inch Portable DVD Player
- Remote Control
- AC Power Adapter
- Car Charger
- AV Cable
- Instruction Manual



Image: The portable DVD player and its included accessories.

## 3. SETUP

### 3.1 Charging the Device

Before first use, fully charge the portable DVD player. Use the provided AC adapter for home charging or the car charger for in-vehicle use.

- **AC Adapter:** Connect the AC adapter to the DC IN port on the player and plug it into a wall outlet.
- **Car Charger:** Connect the car charger to the DC IN port and plug it into your vehicle's cigarette lighter socket.

The charging indicator light will illuminate during charging and turn off when fully charged. The internal battery has overcharge, over-discharge, and overheat protection.



Image: The AC adapter and car charger for powering the device.

### 3.2 Inserting a Disc

1. Open the disc cover by gently pressing the OPEN button.
2. Place the DVD or CD onto the spindle with the label side facing up. Ensure the disc is securely seated.
3. Close the disc cover until it clicks into place.

Your browser does not support the video tag.

Video: Demonstrates how to open the disc tray, insert a DVD, and close the tray for playback.

### 3.3 Connecting to a TV

Use the provided AV cable to connect the portable DVD player to a television for a larger viewing experience.

1. Connect one end of the AV cable to the AV OUT port on the DVD player.
2. Connect the other end of the AV cable to the corresponding AV IN ports on your television (Yellow for video, Red and White for audio).
3. Select the correct AV input source on your television.



Image: The portable DVD player connected to a television, displaying synchronized content.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Playback

After inserting a disc and powering on the device, playback will usually start automatically. Use the control buttons on the player or the remote control for functions like Play, Pause, Stop, Fast Forward, Rewind, and Chapter Skip.

### 4.2 Screen Rotation and Adjustment

The screen can be rotated 270 degrees and folded back 180 degrees to convert the player into a tablet-like display. This allows for flexible viewing in various environments, such as mounting it in a car.



Image: The portable DVD player demonstrating its 270-degree screen rotation and 180-degree flip capabilities.

### 4.3 Using USB and SD Card

Insert a USB flash drive into the USB port or an SD card into the SD card slot. The player will automatically detect the media and allow you to browse and play supported files (e.g., MP3, JPEG).



▲ お手軽ホームシアター！  
画面をホームシアタープロジェクターを共用可能



▲ 子供から高齢者まで楽に使える、  
▼ 一人や家族、楽しく過ごす、のんびりの時間



Image: The portable DVD player showing its compatibility with USB drives and SD cards for media playback.

### 4.4 Last Memory (Resume) Function

The player features a last memory function that allows it to resume playback from the exact point where it was last stopped, even after being powered off.

Your browser does not support the video tag.

Video: Highlights features including battery life, memory function, and TV screen synchronization.

### 4.5 Parental Control

The device includes a parental level function. Refer to the on-screen menu for settings to restrict content based on age ratings.

## 5. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the screen and exterior of the player. Do not use liquid cleaners or abrasive materials.
- Disc Care:** Handle discs by their edges to avoid fingerprints and scratches. Store discs in their cases when not in use.
- Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No power	Battery drained; power adapter not connected properly.	Charge the device using the AC adapter or car charger. Ensure connections are secure.
No disc / Disc error	Disc inserted incorrectly; disc is dirty or scratched; unsupported disc format.	Reinsert the disc correctly. Clean the disc. Try a different disc. Ensure the disc format is supported.
No sound	Volume too low; headphones not connected properly; TV audio settings.	Increase volume. Check headphone connection. Adjust TV audio settings if connected to TV.
Picture distorted / No picture on TV	AV cable loose; incorrect TV input selected.	Check AV cable connections. Select the correct AV input on your TV.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	BFN-161
Screen Size	15.6 inches
Resolution	1280*800
Display Type	LCD
Battery Capacity	5000mAh
Continuous Playback	Up to 6 hours
Supported Media Types	CD, CD±R, CD±RW, VCD, MINI DVD, DVD, DVD±R, DVD±RW, MP3, JPEG
External Storage Support	SD Card, USB (up to 32GB)
Connection Method	AUX (AV In/Out)
Product Dimensions	48.5 x 30.6 x 8 cm
Product Weight	2.59 kg
Color	White

## 8. WARRANTY AND SUPPORT

BOIFUN offers a 2-year quality support for this product. If you have any questions or require assistance, please contact our customer support team.

**Customer Support Email:** [admin@boifun.net](mailto:admin@boifun.net)

When contacting support, please provide your Amazon order history for faster service.

© 2026 BOIFUN. All rights reserved.