

Singer 7061

SINGER SteamLogic 7061 Iron User Manual

Model: 7061

1. IMPORTANT SAFETY INSTRUCTIONS

When using your iron, basic safety precautions should always be followed, including the following:

- Read all instructions before using the iron.
- Use the iron only for its intended use.
- To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
- Always turn the iron OFF before plugging or unplugging from the electrical outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron; take it to a qualified service person for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.
- To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a 15-ampere cord should be used. Cords rated for less amperage can overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

2. PRODUCT OVERVIEW

The SINGER SteamLogic 7061 Iron is designed for efficient and effective garment care. It features a powerful 1775-watt heating element, continuous steam output, and a 280 ml water tank capacity. Key features include variable steam control, continuous steam technology, scale prevention, and a self-cleaning function.



Figure 1: Full view of the SINGER SteamLogic 7061 Iron. This image displays the iron's overall design, including the handle, soleplate, and control dials.



Figure 2: Side profile of the SINGER SteamLogic 7061 Iron. This view highlights the ergonomic handle and the sleek design of the iron.



Figure 3: Underside view of the iron's ceramic soleplate. The soleplate features numerous steam vents for even steam distribution during ironing.

3. SETUP

3.1 Before First Use

Remove any labels or protective film from the soleplate. It is recommended to test the iron on an old piece of fabric before ironing valuable garments to ensure no residue is left from manufacturing.

3.2 Filling the Water Tank

1. Ensure the iron is unplugged from the electrical outlet.
2. Open the water tank cover, typically located on the top front of the iron.
3. Using a measuring cup, carefully pour clean tap water into the water tank up to the 'MAX' fill line. Do not overfill.
4. Close the water tank cover securely.



Figure 4: Close-up view of the water tank opening on the SINGER SteamLogic 7061 Iron. The hinged cover allows for easy filling of the 280 ml water reservoir.

4. OPERATING INSTRUCTIONS

4.1 Temperature Settings

The iron features a temperature control dial, often integrated into the handle, allowing you to select the appropriate heat setting for different fabric types. Refer to the fabric care labels on your garments for recommended ironing temperatures.

- **Low Heat:** Synthetics, Silk
- **Medium Heat:** Wool
- **High Heat:** Cotton, Linen

4.2 Dry Ironing

For dry ironing, ensure the steam control is set to the 'OFF' position. Plug in the iron and set the temperature dial to the desired heat. Wait for the indicator light to turn off, signaling that the iron has reached the selected temperature.

4.3 Steam Ironing

For steam ironing, ensure the water tank is filled. Plug in the iron and set the temperature dial to a steam-appropriate setting (usually medium to high, e.g., wool, cotton, linen). Once the iron reaches the set temperature, adjust the steam control to the desired steam level. The iron will produce continuous steam for up to 25 minutes on a full tank.

4.4 Vertical Steaming

The iron can be used for vertical steaming to remove wrinkles from hanging garments, drapes, or upholstery. Hold the iron vertically a few inches away from the fabric and press the steam burst button as needed. Ensure the iron is at a high temperature setting for effective steaming.



Figure 5: Detail of the 360-degree swivel cord on the SINGER SteamLogic 7061 Iron. This feature prevents tangling and allows for comfortable ironing from any angle.

5. MAINTENANCE AND CARE

5.1 Self-Cleaning Function

The SINGER SteamLogic 7061 Iron includes a self-cleaning feature to remove mineral deposits and maintain optimal steam performance. To use this function:

1. Fill the water tank to the 'MAX' line.

- 2. Plug in the iron and set the temperature to the highest setting.
- 3. Once the iron reaches temperature, unplug it.
- 4. Hold the iron horizontally over a sink.
- 5. Press and hold the self-clean button (refer to your iron's markings for exact location). Hot water and steam will flush out from the soleplate, carrying away mineral buildup.
- 6. Continue until the water tank is empty.
- 7. Allow the iron to cool completely before storing.

5.2 Cleaning the Soleplate

If the soleplate becomes stained, clean it with a damp cloth and a non-abrasive cleaner specifically designed for iron soleplates. Never use abrasive scouring pads or metal cleaners, as these can damage the soleplate coating.

5.3 Storage

After each use, ensure the iron is unplugged and completely cool. Empty any remaining water from the tank. Store the iron upright in a safe, dry place, away from children.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet fault; temperature dial set to 'OFF' or too low.	Check power connection; test outlet with another appliance; adjust temperature dial.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to 'OFF'; mineral buildup.	Fill water tank; set temperature to steam-appropriate level; adjust steam control; perform self-clean cycle.
Water leaks from soleplate.	Temperature too low for steam; water tank overfilled; self-clean needed.	Increase temperature; do not overfill tank; perform self-clean cycle.
Soleplate is dirty or sticky.	Residue from fabric or starch; improper cleaning.	Clean soleplate with a damp cloth and non-abrasive cleaner.

7. SPECIFICATIONS

Brand	Singer
Model Number	7061
Color	Red
Power	1775 Watts
Voltage	220 Volts (AC)
Water Tank Capacity	280 ml

Continuous Steam Output	Up to 25 minutes
Soleplate Material	Ceramic
Product Dimensions (L x W x H)	33.02 x 17.78 x 0.1 cm (approx. 13 x 7 x 0.04 inches)
Item Weight	1.92 Kilograms (approx. 4.23 lbs)
Special Features	Variable steam function, continuous steam technology, scale prevention, self-cleaning

8. WARRANTY AND SUPPORT

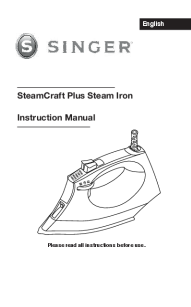

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Singer website. Keep your purchase receipt as proof of purchase for any warranty claims.

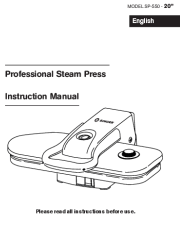



No official product videos were available for embedding in this manual.



© 2023 Singer. All rights reserved.

Related Documents - 7061

	<p>SteamCraft Plus Steam Iron Instruction Manual</p> <p>Comprehensive instruction manual for the SINGER SteamCraft Plus Steam Iron, covering features, operation, safety, maintenance, and troubleshooting for efficient household ironing.</p>
	<p>Catalogo Generale Singer 2024: Macchine da Cucire, Accessori e Elettrodomestici</p> <p>Scopri il catalogo completo Singer 2024, con una vasta gamma di macchine da cucire, accessori innovativi, kit per quilting e ricamo, e la linea Singer Home Essentials per la casa. Trova gli strumenti perfetti per ogni progetto creativo.</p>

 <p>MODEL SP-550 - 207 English</p> <p>Professional Steam Press Instruction Manual</p> <p>Please read all instructions before use.</p>	<p>SINGER SP-550 Professional Steam Press Instruction Manual</p> <p>Official instruction manual for the SINGER SP-550 Professional Steam Press. Learn about safe operation, features like auto shut-off and temperature control, cleaning, and troubleshooting. Get professional results for your garments.</p>
 <p>SINGER</p> <p>Ironing and Crafting Station Instruction Manual</p>	<p>SINGER Ironing and Crafting Station Instruction Manual</p> <p>Instruction manual for the SINGER Ironing and Crafting Station (Item #220013096), detailing features such as adjustable height, a removable iron rest tray, a measuring grid on the cover, and an innovative built-in storage tray. Includes comprehensive limited warranty information.</p>
 <p>SINGER 500A</p>	<p>Singer 500A Sewing Machine Parts List and Diagrams</p> <p>Explore the official parts list and detailed diagrams for the Singer 500A sewing machine, including electrical components for related models. Find part numbers for maintenance and repair.</p>
 <p>SINGER</p> <p>6199/6180/6160</p> <p>KULLANIM KILAVUZU</p>	<p>Singer 6199/6180/6160 Dikiş Makinesi Kullanım Kılavuzu</p> <p>Singer 6199, 6180 ve 6160 ev tipi dikiş makineleri için kapsamlı kullanım kılavuzu. Bu belge, makinenin güvenli kurulumu, tüm dikiş fonksiyonlarının kullanımı, düzenli bakım ve sorun giderme adımları hakkında detaylı bilgiler sunar.</p>